

JUMO dTRANS p20 DELTA

Differential pressure transmitter



Operating Manual



40302200T90Z001K000

V9.00/EN/00519462/2025-09-08

Table of contents

1	Safety information	5
1.1	Hazardous materials	5
2	General information	6
2.1	Areas of application	6
2.2	Scope of delivery	7
2.3	Trademark information	8
3	Identifying the device version	9
3.1	Nameplate	9
3.2	Order details	9
3.3	Accessories	11
3.4	Software	11
4	Technical data	12
4.1	General Information	12
4.2	Ex identification markings	12
4.3	Electrical data	13
4.4	Inputs	13
4.4.1	Measuring range and accuracy	14
4.5	Outputs	15
4.6	Environmental influences	15
4.7	Mechanical features	16
4.8	Approval marks and certificates	17
4.9	Dimensions	18
5	Mounting	23
5.1	Before mounting	23
5.2	Unscrew the front ring or case lid	23
5.3	Rotating the LCD (display)	24
5.4	Rotating the housing	25
5.5	Pressure connection	26
5.6	Bracket for wall and pipe mounting	27
5.7	Level measurement with a diaphragm seal	27
5.7.1	General information	27
5.7.2	Measuring arrangement in open or closed containers with $\pm$ measuring ranges	28
5.7.3	Measuring arrangement in open and closed containers with a measuring range of 0 to 1 bar	28
5.8	Level measurement without a diaphragm seal	29
5.8.1	Measuring arrangement in open or closed containers with $\pm$ and 0 to 1 bar measuring ranges	29
5.8.2	Measuring arrangement for steam layering and $\pm$ measuring ranges	30
5.8.3	Measuring arrangement for steam layering and a measuring range of 0 to 1 bar	31
5.9	Assembly in the explosion area	33

Table of contents

6	Installation	34
6.1	Installation notes	34
6.2	Device with cable gland	34
6.3	Device with M12 plug connector	37
6.4	Electrical connection in Ex areas	39
6.4.1	Connection diagram "Ex"	40
7	Operation	41
7.1	Display	41
7.2	Operation with rotary knob or with setup programm	41
7.3	The level concept	43
7.3.1	The display level	44
7.3.2	The parameter level	45
8	Configuration	48
8.1	Data flow diagram	48
8.2	Description of the possible configurations	49
8.3	Level measurement configuration with a pressure specification - recommended (tank empty, tank full)	53
8.4	Level measurement configuration without a pressure specification	54
8.4.1	With a diaphragm seal in closed containers with a measuring range of 0 to 1 bar	54
8.4.2	With a diaphragm seal in closed containers with $\pm$ measuring ranges	56
8.4.3	Without a diaphragm seal in closed containers with $\pm$ measuring ranges or 0 to 1 bar	58
8.4.4	For steam layering with $\pm$ measuring ranges	60
8.4.5	For steam layering with a measuring range of 0 to 1 bar	63
9	Maintenance	66
9.1	Overcoming errors and malfunctions	66
10	HART 7 specification	67
10.1	Device identification	67
10.2	Variable codes	67
10.3	HART commands	68
10.4	Burst mode commands	71
10.5	Performance data	72
11	Certificates	73

1 Safety information

General

This manual contains information that must be observed in the interest of your own safety and to avoid material damage. This information is supported by symbols which are used in this manual as indicated.

Please read this manual before starting up the device. Store this manual in a place that is accessible to all users at all times.

If difficulties occur during startup, please do not intervene in any way that could jeopardize your warranty rights!

Warning symbols



DANGER!

This symbol indicates that **personal injury from electrocution** may occur if the appropriate precautionary measures are not taken.



CAUTION!

This symbol in connection with the signal word indicates that **material damage or data loss** will occur if the respective precautionary measures are not taken.

Note symbols



NOTE!

This symbol refers to **important information** about the product, its handling, or additional benefits.

1.1 Hazardous materials

Using hazardous materials as a medium may result in abrasive and corrosive damage to components of the product that come into contact with the medium. The medium may leak and present a fire hazard and a risk to health.

Carry out a risk assessment taking into consideration the safety data sheet for the relevant hazardous substance for mounting, operation, maintenance, cleaning, and disposal:

- Comparison and systematic checking of the durability of the components of the product that come into contact with the medium and the admissible environmental influences.
- Assessment of the risk to people and the environment.
- Assessment of the fire hazard due to the product materials, the admissible environmental influences, and the voltage supply.

2 General information



DANGER!

The device is suitable for measuring pressure in gases and liquids without solids content. In the SIL version (functional safety), this device is used in safety-related systems for minimum, maximum and area monitoring that fulfil the requirements of the series of standards IEC 61508:2010.

A failure of the device or other devices connected to it, e.g. due to an operating error, can lead to dangerous malfunctions of the whole plant.

► Therefore please also observe the corresponding safety manual from the device series.



NOTE!

Read this operating manual before putting the device into service. Keep the operating manual in a place that is accessible to all users at all times.

All necessary settings are described in this operating manual. Nevertheless, should problems be encountered during startup please do not make any unauthorized manipulations. This could endanger your rights under the warranty!

Please contact the nearest branch office or the head office.

2.1 Areas of application

The device with HART interface combines maximum precision with simple operation. It is used to measure the system pressure of gases, steams, and liquids. The integrated LCD display shows measured values and device data.

The version with explosion protection "Ex ia (intrinsically safe)" allows the device to be installed up to zone 0.

The housing and sensors are manufactured from high-grade stainless steel. Diaphragm seals can also be connected for specific process technology applications (see data sheets 409772 to 409784).

The device is programmable and therefore readily adaptable to a variety of different measurement tasks. An easy-to-use setup program is available as an accessory to enable operation via the interfaces. A rotary knob makes manual operation on-site very convenient and quick.

The pressure transmitter with 4 to 20 mA and HART protocol was evaluated with regard to functional safety and is certified by exida according to IEC 61508 -1/-2/-3:2010. These measuring devices are suitable for monitoring process level and process pressure up to SIL2. Further details can be found in the Safety Manual.

Use in "Ex-area"

In the **Ex ia** version, the device is permitted for use in the "Ex-area" if it has a corresponding identification marking on the nameplate.

Functional safety use

In the SIL version, the device is permitted for use according to IEC 61508 if it has a corresponding identification marking on the nameplate.

Application areas

The device can be used for various applications, e.g.

- For level measurements in pressurized containers
- For foam formation
- In containers with mixers or sieve installations
- For liquid gases
- For default level measurements
- For flow measurements

Measured process variables

Differential pressure

Calculated process variables

- Flow
- Filling level (level, volume, or mass)

2.2 Scope of delivery

Operating Manual

The operating manual describe the mounting, the electrical connection, the startup and operation of the device.

Safety manual (option)

The safety manual describes the safe application with the installation according to IEC 61508.

Calibration certificate

The device is supplied with a calibration certificate and a setup print-out.

These documents contain information about the set parameters and/or the measured parameters for the respective device.

If the calibration certificate is lost or if you need another copy, the calibration certificate can be requested from the manufacturer by specifying the device's F number (see nameplate). You will find the supplier's address on the back cover of the manual.

Setup program (option)

The setup program is available as an option: part no. 00537577

All the device's parameters can be conveniently checked and adjusted using the setup program - there are also additional functions, e.g.:

- Recording the measured values
- Graphical view of temperature and pressure
- Detailed diagnostic messages
- Display of the complete order code and the device configuration (for follow-up orders)

The setup program accesses the device via

- the JUMO interface (standard) or
- the HART interface (optional)



DANGER!

The JUMO interface must not be used in the Ex-area!

The device may only be operated using the rotary knob or the HART interface!

2 General information

PC interface cable (option)

Available as an accessory: PC interface cable with USB/TTL converter and two adapters (USB transmitter cable), part no. 00456352.

The device can be connected to a PC's USB port via the JUMO interface with the PC interface cable.

HART® modem (option)

Available as an accessory: HART® modem for USB, part no. 00443447.

The device can be connected to a PC's USB® port via the HART® interface with the HART® modem.

Input isolating amplifier (option)

Available as an accessory: Input isolating amplifier for Ex-applications, HART-capable, part no. 00577948.

Devices with explosion protection ATEX Ex ia must be connected via an input isolating amplifier for use in the Ex-area!

Diaphragm seal (option)

Available as an accessory: see data sheets 409770 to 409786.

Diaphragm seals are used for adjusting to particular applications if conventional pressure connections cannot be used.



CAUTION!

Diaphragm seals are installed by default and must not be removed from the device!

Valve manifolds (option)

Available as an accessory: see data sheet 409706.

Additional JUMO accessories (option)

Additional accessories available: see data sheet 409700 (shut-off valves, measurement device holders, transition pieces, seals, etc.).


2.3 Trademark information

All trademarks and trade and company names used are the property of their rightful owners or authors.

3 Identifying the device version

3.1 Nameplate

Sample identification marking on the device housing:

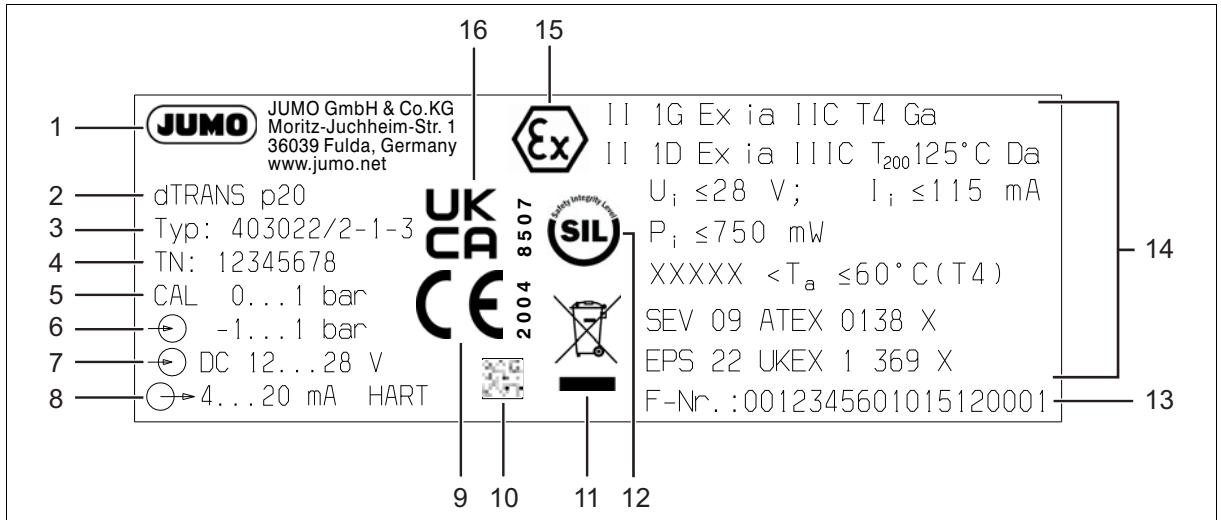

1	Manufacturer	9	CE marking
2	Device designation	10	DMC-Code
3	Type	11	Disposal
4	Part no.	12	SIL marking
5	Measuring range factory set	13	Fabrication number
6	Nominal measuring range	14	Ex details
7	Voltage supply	15	Ex marking
8	Output signal	16	UKCA marking

Date of manufacture

The date of manufacture (year and calendar week) of the device is encoded in the manufacturing number. The numbers 12 to 15 identify the year of manufacture and the calendar week.

3.2 Order details

(1) Basic type	
403022	JUMO dTRANS p20 DELTA – Differential pressure transmitter
(2) Basic type extension	
0	None
2	SIL ^{a, b}
(3) Explosion protection	
0	None
1	ATEX Ex ia ^c
(4) Housing	
1	Short, stainless steel, with M12 connection ^d
2	Long, stainless steel, with cable fitting
3	Precision casting, with cable fitting M20
(5) Electrical connection	
36	M12 plug connector
82	Plastic cable fitting

3 Identifying the device version

93	Metal cable fitting
(6) Cover material	
20	CrNi (stainless steel)
85	Plastic
(7) Display	
0	None
1	Display (LCD)
(8) Operation	
0	None
1	Control knob
(9) Input – nominal measuring range	
532	0 to 1 bar DP
530	-10 to +10 mbar DP ^b
531	-1 to +1 bar DP ^b
533	-1 to +6 bar DP
534	-1 to +100 bar DP
(10) Output	
405	4 to 20 mA, two-wire
410	4 to 20 mA, two-wire with HART protocol
(11) Process connection	
511	2× pressure connection 1/4" – 18 NPT, DIN EN 837
998	Diaphragm seal version, screwed
(12) Process connection material	
20	CrNi (stainless steel)
80	Tantalum
82	NiMo
(13) Measuring system, filling medium	
01	Silicon oil
02	Halogenized oil for oxygen application
(14) Extra codes	
000	None
085	UKEX
100	Customer-specific factory setting ^e
624	Oil and grease free
633	Mounting brackets for 2" tube
634	TAG number
635	NACE manufacturer's declaration ^f
681	Expanded admissible ambient temperature ^g
694	Increased nominal pressure PN 420 bar

^a Only available with output 410 and display 1. Not available with input 530, process connection 998, or extra code 681.

^b Only available with process connection material 20.

^c Only available with output 410. Not available with electrical connection 82, cover material 85.

^d The housing 1 is only available with electrical connection 36 and vice versa.

^e Specify in plain text. Default setting see "Measuring range and accuracy".

^f Only available with process connection 512, 564 and process connection material 82. Not available with input 530, 531.

^g Not available with input 530, 531.

3 Identifying the device version

	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)										
Order code		/		-		-		-		-		-		-		-		-
Order example	403022	/	0	-	0	-	2	-	82	-	20	-	1	-	1	-		
	(9)	(10)	(11)	(12)	(13)	(14)												
		-		-		-		-		/								
	532	-	405	-	511	-	20	-	1	/	000							

3.3 Accessories

Designation	Part no.
PC interface with USB/TTL converter ^a	00456352
HART modem USB ^b	00443447
4-pole cable box, straight, M12 × 1 with 2 m PVC cable	00404585
4-pole cable box, angled, M12 × 1 with 2 m PVC cable	00409334
SET oval flange 1/2" NPT/accessory set 7/16-20UNF	00543775
Ex-i Power supply/input isolating amplifier, Type 707530	00577948
Mounting brackets, set includes screws 7/16-20UNF	00543777

Designation	Data sheet
Valve manifolds	409706
Diaphragm seal with dairy pipe fitting DIN 11851	409772
Diaphragm seal with clamp connection	409774
Diaphragm seal with DRD flange or VARIVENT socket	409776
Diaphragm seal with ISS/SMS/RJT socket and (grooved) union nut	409778
Membrane diaphragm seal 4MDV-10	409780
Diaphragm seal with screw-in thread DIN ISO 228/1 or ANSI B1.201	409782
Diaphragm seal with flange connection DIN EN 1092-1 with sealing strip form B1	409784
Diaphragm seal with flange connection according to ANSI B 16.5 with sealing strip form RF	409786
Ex-i repeater power supply/input isolating amplifier	707530

^a The PC interface cable is the connection between the JUMO interface of the differential pressure transmitter and the USB interface of a PC.

^b The HART modem is the connection between the HART interface of the differential pressure transmitter and the USB interface of a PC.

3.4 Software

Description	Part no.
JUMO setup dTRANS p20 series	00537577
Device Type Manager (DTM), JUMO dTRANS p20	00738288

4 Technical data

4.1 General Information

Reference conditions	DIN EN 60770, DIN EN 61298
Ambient temperature	22 °C ±5 K
Air pressure	1000 hPa (±25 hPa)
Voltage supply	DC 24 V
Burden	50 Ω
Sensor system	Silicon sensor with stainless steel separating diaphragm
Pressure transfer medium	
For measuring system filling medium 1	Silicon oil
For measuring system filling medium 2	Halogenized filling oil
Admissible load changes	> 10 million
Position	
Mounting position	Any
Calibration position	Device upright, process connection at the bottom
Zero offset depending on position	≤ 1 mbar A zero offset is possible on-site or via setup
Display ^a	LCD, two-line with bar graph
Alignment	Display unit rotatable in 90° steps Housing rotatable ±160°
Size	Display 22 × 35 mm, font size 7 mm/5-digits
Color	Black
Portrayable measuring units	
Input pressure	inH ₂ O, inHg, ftH ₂ O, mmH ₂ O, mmHg, psi, bar, mbar, kg/cm ² , kPa, torr, MPa, mH ₂ O
Measured value	% or scaled with freely adjustable measuring unit
Output current	mA
Sensor temperature	°C, °F
Additional display data	Minimum pressure, maximum pressure, error, overrange, underrange, operating hours
Operation	
On-site	With rotary knob and LCD
Setup program	Via interface
Interface	
Standard	JUMO interface ^b
For output 410 (4 to 20 mA with HART)	JUMO interface ^b and HART interface

^a Optional; SIL version only available with display.

^b The JUMO interface may not be used in a potentially explosive area! In such a case the device can be operated via the rotary knob or the HART interface.

4.2 Ex identification markings

ATEX, UKEX	II 1G Ex ia IIC T4 Ga II 1D Ex ia IIIC T ₂₀₀ 125 °C Da
------------	--

4.3 Electrical data

Voltage supply for version	DC 12 to 36 V
Explosion protection 0 (none)	DC 12 to 28 V
Explosion protection 1 (ATEX Ex ia)	The voltage supply must be intrinsically safe and must not exceed the following maximum values: $U_i \leq \text{DC } 28 \text{ V}$ $I_i \leq 115 \text{ mA}$ $P_i \leq 750 \text{ mW}$ $C_i = 6 \text{ nF}$ $L_i = 105 \text{ }\mu\text{H}$

4.4 Inputs

Nominal pressure					
Nominal measuring range	-10 to +10 mbar DP ^a	-1 to +1 bar DP	0 to 1 bar DP	-1 to +6 bar DP	-1 to +100 bar DP
Nominal pressure (bar)	PN2	PN210	PN210, optionally PN420		

^a Without SIL

4 Technical data

4.4.1 Measuring range and accuracy

Including non-linearity, hysteresis, non-repeatability, zero point and final value deviation (corresponds to measurement deviations according to IEC 61298-2), calibrated at vertical installation position with the process connection at the bottom

Differential pressure

	Nominal measuring range				
	-10 to +10 mbar DP ^a	-1 to +1 bar DP	0 to 1 bar DP	-1 to +6 bar DP	-1 to +100 bar DP
Default measuring range	0 to 10 mbar	0 to 1 bar		0 bar to 6 bar	0 bar to 100 bar
Smallest MSP ^b	1 mbar ^c	5 mbar ^c		0.350 bar	2.5 bar
Turndown ratio (r) ^d	r ≤ 20	r ≤ 400	r ≤ 200	r ≤ 20	r ≤ 40
Non-linearity for reference conditions	0.1 % for r ≤ 2	0.07 % for r ≤ 10		0.07 % for r ≤ 5	
	r × 0.05 % for 2 ≤ r ≤ 20	r × 0.007 % for 10 ≤ r ≤ 400	r × 0.007 % for 10 ≤ r ≤ 400	r × 0.014 % for 5 ≤ r ≤ 20	r × 0.014 % for 5 ≤ r ≤ 40
Accuracy in % of the set MSP at 20 °C	0.2 % for r ≤ 2	0.1 % for r ≤ 10		0.1 % for r ≤ 5	
	r × 0.1 % for 2 ≤ r ≤ 20	r × 0.01 % for 10 ≤ r ≤ 400	r × 0.01 % for 10 ≤ r ≤ 200	r × 0.02 % for 5 ≤ r ≤ 20	r × 0.02 % for 5 ≤ r ≤ 40
Accuracy in % of the set MSP Range: 20 to 85 °C	0.5 % for r ≤ 2 (only to 60 °C)	0.2 % for r ≤ 10		0.2 % for r ≤ 5	
	r × 0.25 % for 2 ≤ r ≤ 20 (only to 60 °C)	r × 0.02 % for 10 ≤ r ≤ 400	r × 0.02 % for 10 ≤ r ≤ 200	r × 0.04 % for 5 ≤ r ≤ 20	r × 0.04 % for 5 ≤ r ≤ 40
Accuracy in % of the set MSP Range: -40 to +20 °C	1.0 % for r ≤ 2	0.6 % for r ≤ 10		0.6 % for r ≤ 5	
	r × 0.5 % for 2 ≤ r ≤ 20	r × 0.06 % for 10 ≤ r ≤ 400	r × 0.06 % for 10 ≤ r ≤ 200	r × 0.12 % for 5 ≤ r ≤ 20	r × 0.12 % for 5 ≤ r ≤ 40
Accuracy in % of the set MSP Range: 60 to 85 °C	2.0 % for r ≤ 2	2.0 % for r ≤ 2		2.0 % for r ≤ 2	
	r × 1.0 % for 2 ≤ r ≤ 20				
Influence of the static pressure P (bar) in % from the nominal measuring range	≤ 1 %	≤ P × 0.0005 %	≤ P × 0.0003 %	≤ P × 0.0025 %	≤ P × 0.001 %
Long-term stability in % as of the nominal measuring range	≤ 0.6 %/year	≤ 0.1 %/year			≤ 0.2 %/year

^a Without SIL.

^b MSP = measuring span

^c For the calibration certificate from JUMO the smallest MSP is 10 mbar. MSPs smaller than 10 mbar can be adjusted by the user.

^d $r = \text{span of the nominal measuring range} \div \text{adjusted measuring span}$

4.5 Outputs

Analog output For output 405 (4 to 20 mA) For output 410 (4 to 20 mA with HART) Jump response time T_{60} Attenuation	4 to 20 mA, two-wire 4 to 20 mA, two-wire with HART version 7 ≤ 190 ms without attenuation Adjustable 0 to 100 s
Burden For output 405 (4 to 20 mA) For output 410 (4 to 20 mA with HART)	Burden $\leq (U_B - 12 \text{ V}) \div 0.022 \text{ A}$ Burden $\leq (U_B - 12 \text{ V}) \div 0.022 \text{ A}$; additional: min. 250 Ω , max. 1100 Ω

4.6 Environmental influences

Admissible temperatures Operation	Version	Temperature class	Maximum medium temperature	Ambient temperature ^a	Increased ambient temperature (extra code 681) ^{a, b, c}
	Standard		110 °C	-40 to +85 °C	-50 to +85 °C
	II 1G Ex ia	T4	100 °C	-40 to +60 °C	-50 to +60 °C
	II 1D Ex ia	T ₂₀₀ 125 °C	100 °C	-40 to +60 °C	-50 to +60 °C
Storage	-40 to +85 °C				
Admissible humidity Operation Storage	100 % including condensation on the device outer case 90 % without condensation				
Admissible mechanical load Vibration strength Shock resistance	DIN EN 60770-3, IEC 60068-2-29 2 g, 10 to 500 Hz 15 g for 6 ms				
Electromagnetic compatibility Interference emission Interference immunity	DIN EN 61326-2-3:2022 Class B ^d Industry				
Protection type For version Explosion protection 0 (without) Explosion protection 1 (ATEX Ex ia)	DIN EN 60529 IP66/67 IP66				

^a Under -20 °C limited function: stationary use, increased danger of cable break, display without function; under -30 °C operation of the device not possible.

^b In the range from -40 to -50 °C the device must be permanently in operation. The lid with the inspection glass must also be protected against mechanical impact and shock effects.

^c Without SIL

^d The product is suitable for industrial use as well as for households and small businesses.

4 Technical data

4.7 Mechanical features

Process connection Materials Membranes Process connection 20 (stainless steel) Process connection 82 (HASTELLOY) Process connection 80 (Tantalum) Flange Seal	316L 2.4819/HASTELLOY C-276 Tantalum 316 PTFE
Housing Materials Housing 1 (short, stainless steel) Housing 2 (long, stainless steel) Housing 3 (precision casting) Material lid 20 (stainless steel) Material lid 85 (plastic) Electrical connection 36 (M12 plug connector) Electrical connection 82 (cable fitting, plastic) Electrical connection 93 (cable fitting, metal) Operation 0 (without control knob) Operation 1 (with control knob)	1.4404 1.4404, VMQ 1.4408 1.4408, seal FPM PA, seal FPM Brass, nickel-plated PA Brass, nickel-plated – PA
Weight Type 403022/0-0-1 (housing, short) Type 403022/0-0-2 (housing, long) Type 403022/0-0-3 (housing, precision casting) Extra code 694 (increased nominal pressure)	~ 3.0 kg ~ 3.3 kg ~ 4.0 kg The weight of the device increases by ~ 3.8 kg.

4.8 Approval marks and certificates

	Designation	ATEX
	Testing agency	Eurofins Electrosuisse Product Testing AG
	Certificate no.	SEV 09 ATEX 0138 X
	Inspection basis	EN 60079-0, EN 60079-11, EN 60079-26
	Valid for	Type 403022/x-1
	Designation	UKEX
	Testing agency	Bureau Veritas
	Certificate no.	EPS 22 UKEX 1 369 X
	Inspection basis	EN 60079-0, EN 60079-11, EN 60079-26
	Valid for	Type 403022/x-1 with extra code 085
	Designation	SIL
	Testing agency	exida
	Certificate no.	JUMO 2203088 C001
	Inspection basis	IEC 61508-1/-2/-3:2010
	Valid for	Type 403022 with basic type extension 2


Observe "Special conditions for safe use" in hazardous areas.

Certificates for approved device versions are available for download on the manufacturer's website.

4 Technical data


4.9 Dimensions

Type 403022/0-0-1 (short, stainless steel, with M12 plug connection)

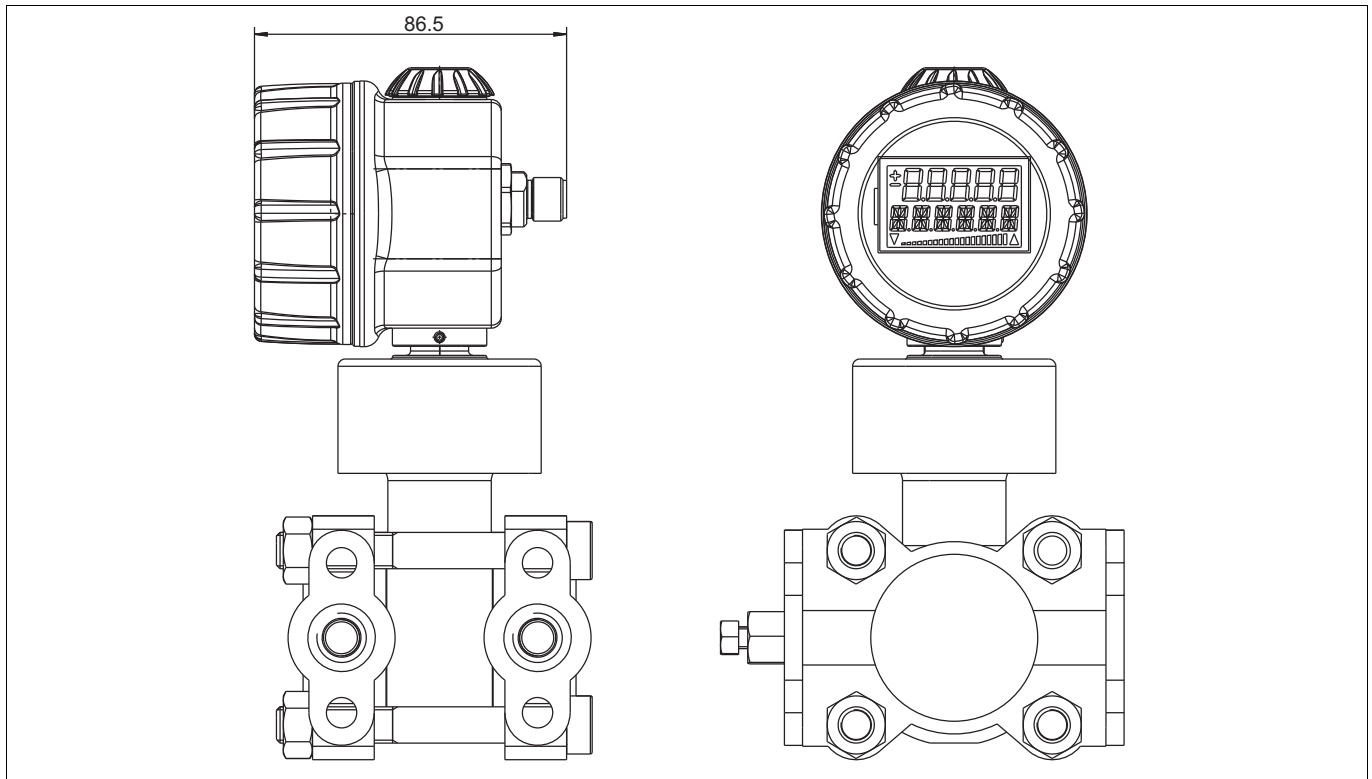

4 Technical data


Type 403022/0-0-2 (long, stainless steel, with cable fitting)

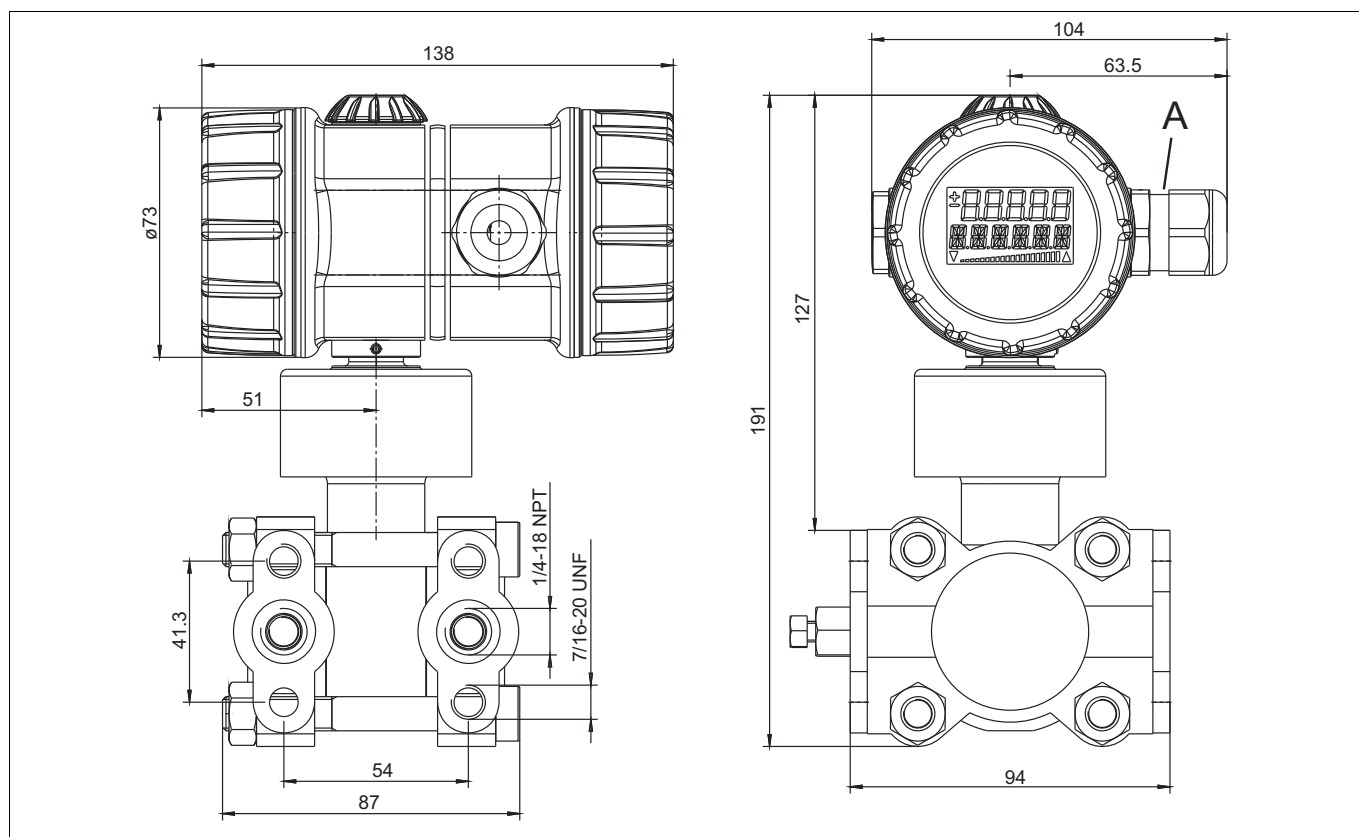

A M20 × 1.5 cable fitting

4 Technical data


Type 403022/0-0-3 (precision casting, with cable fitting)

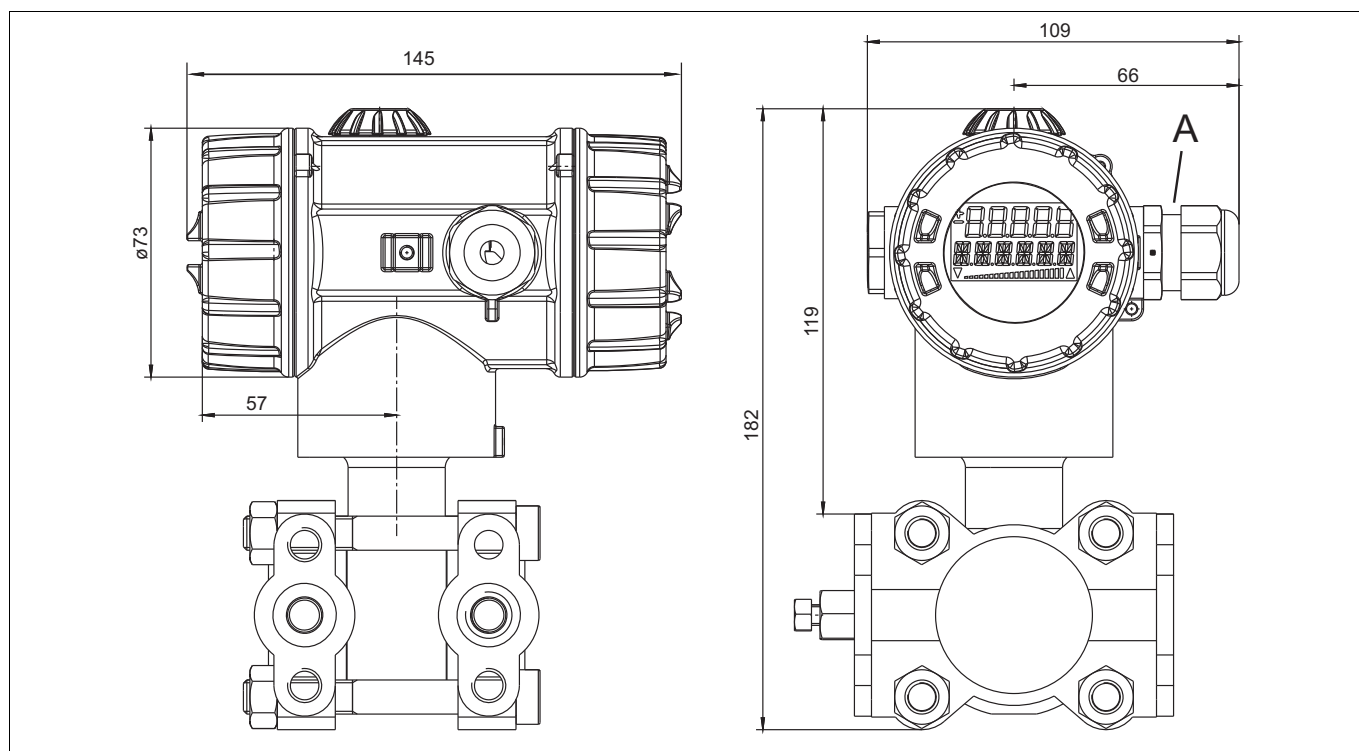

A M20 × 1.5 cable fitting

4 Technical data


Extra code 694 (increased nominal pressure PN420)

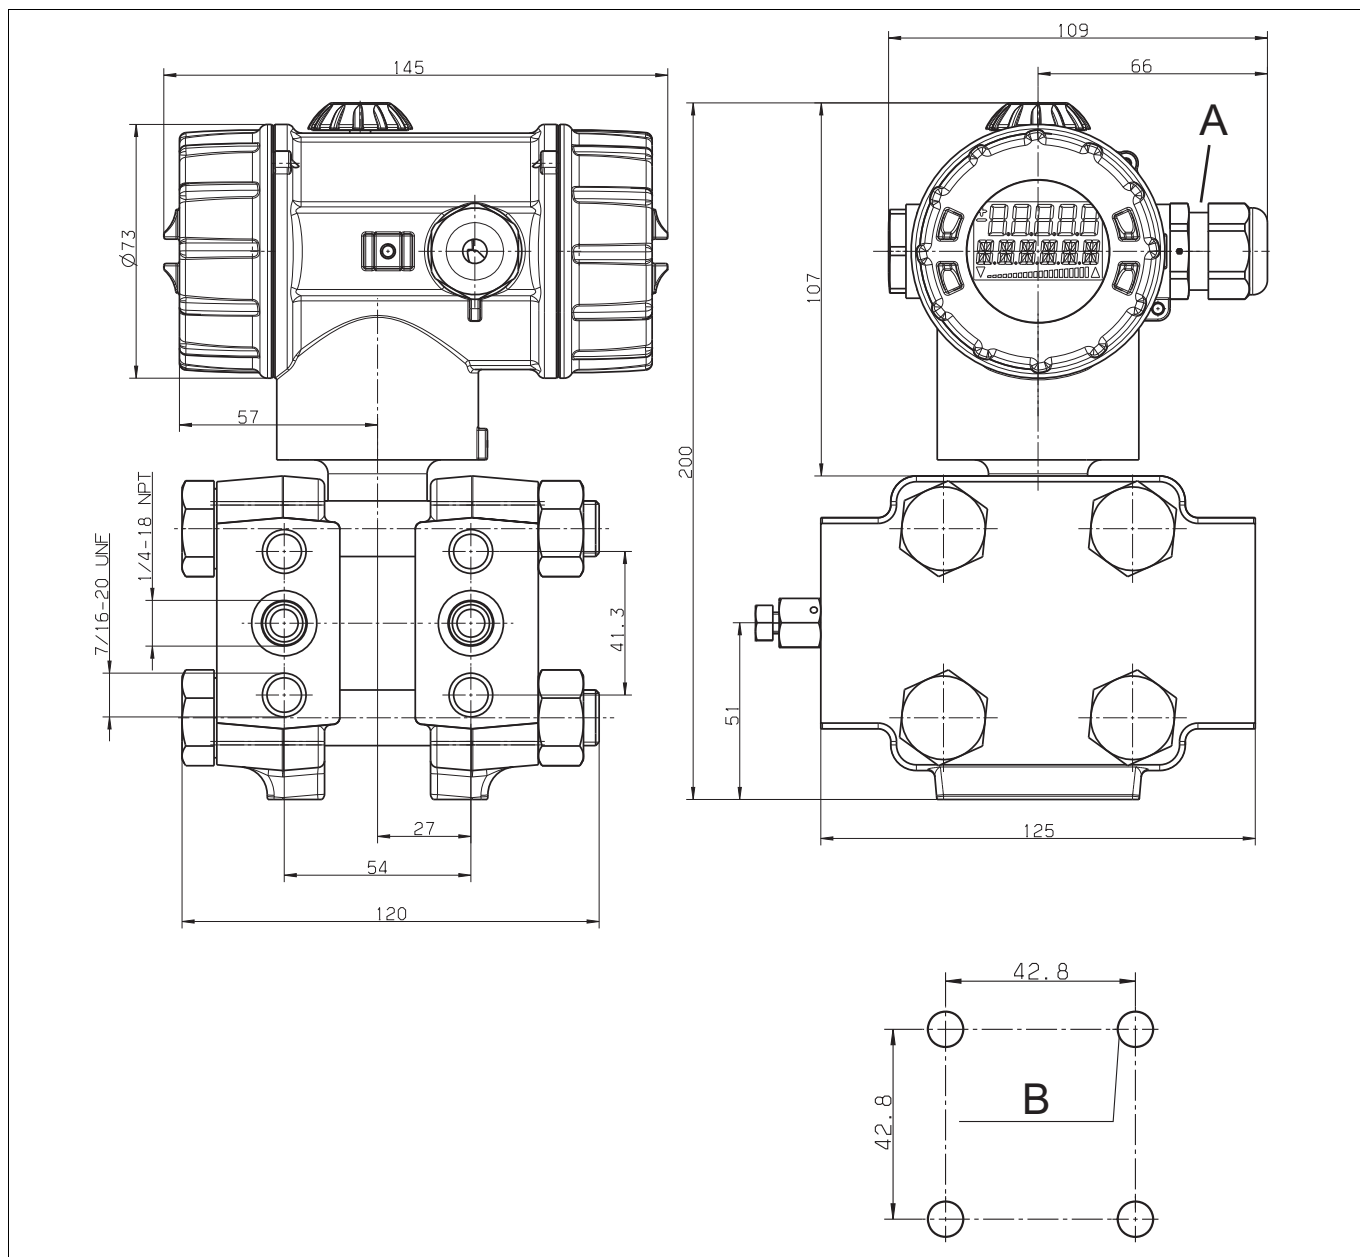

- A M20 $\times$ 1.5 cable fitting
- B M8 for mounting

4 Technical data

Type 403022/0-0-1 (without display and operation) for nominal measuring range -10 to +10 mbar, nominal pressure PN2 (bar)

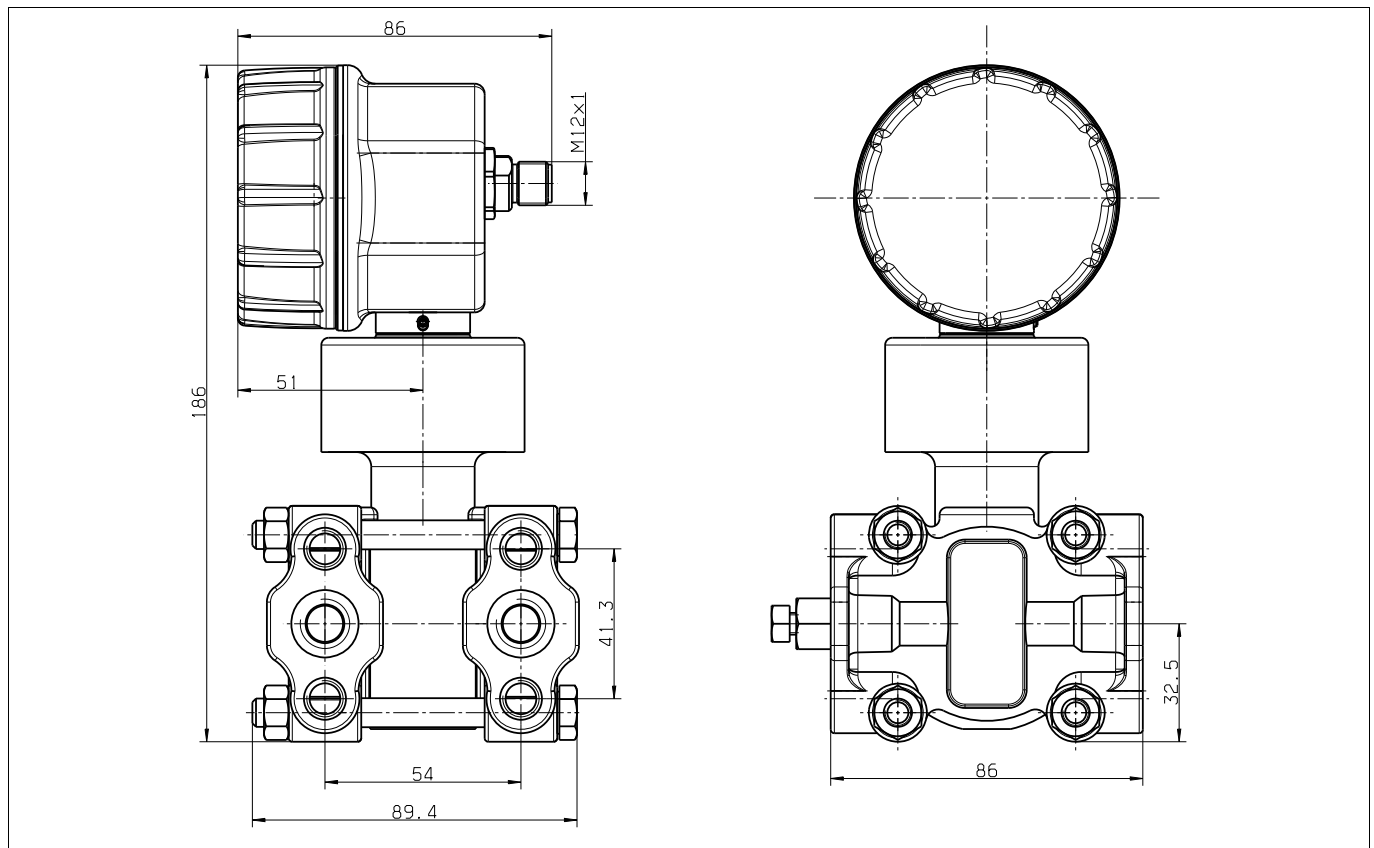

5.1 Before mounting



DANGER!

Depressurize the plant before installing the device!

The device may only be opened in the potentially explosive area when disconnected from the power supply!



NOTE!


Select a freely accessible and low-vibration installation location, preferably near the measuring point. Ensure that the admissible ambient temperature is adhered to (take possible heat radiation into account).

The device can be installed above or below the pressure sensing point.

5.2 Unscrew the front ring or case lid

Plastic cover ring


The front ring (1) and the rear housing cover (2) can be unscrewed.

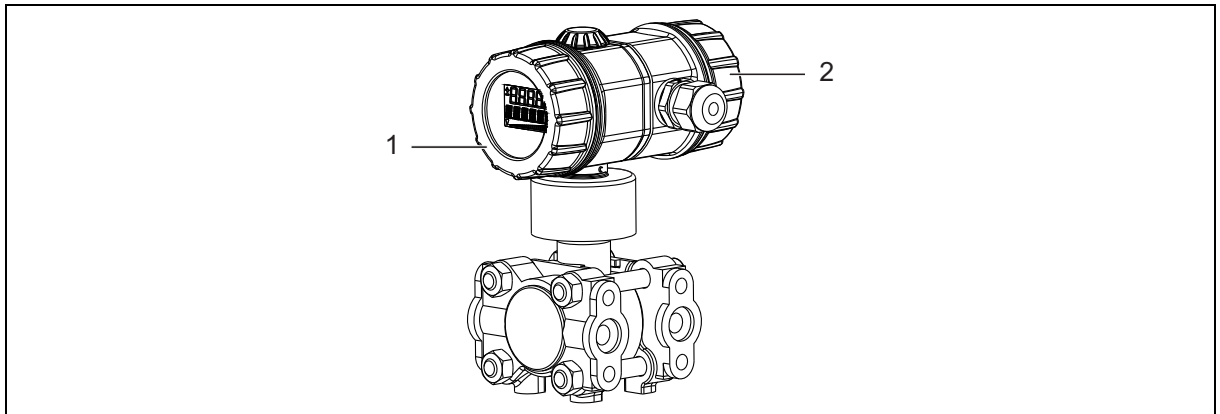

- 1 Front ring (plastic)
- 2 Housing cover (plastic)

5 Mounting

The bezel and the rear case lid can be removed using a screwdriver, or similar.

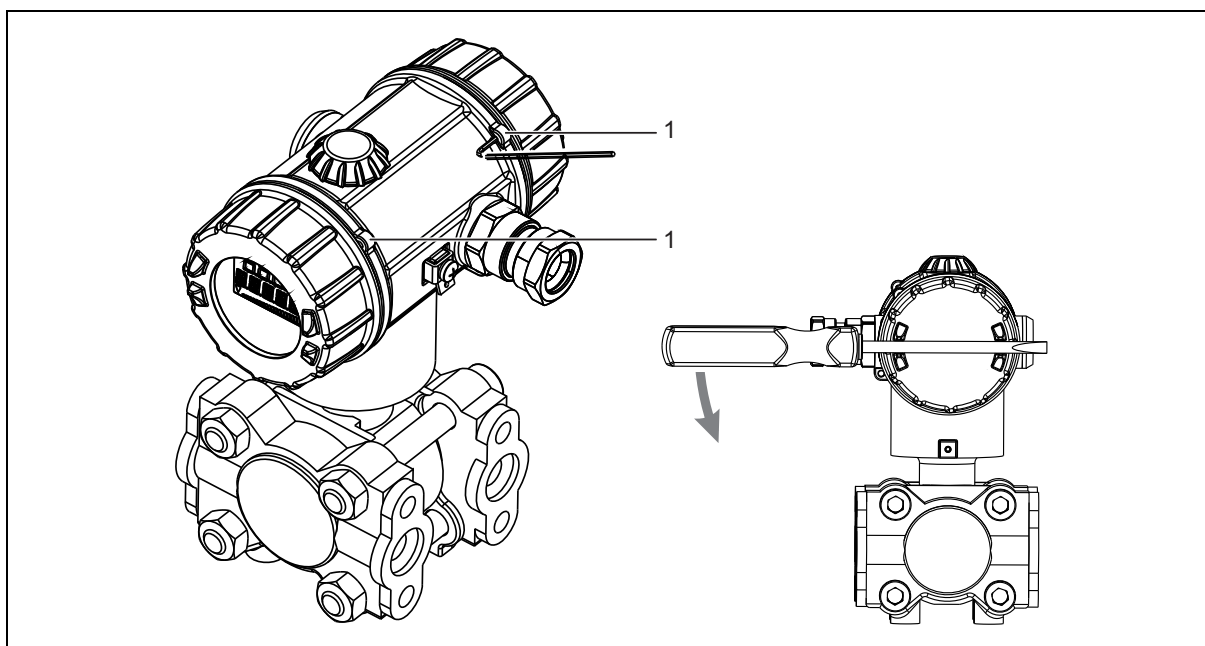

1 Bezel




NOTE!

Only tighten by hand!


5.3 Rotating the LCD (display)

Installation position

The rated position of the device is vertically upright.

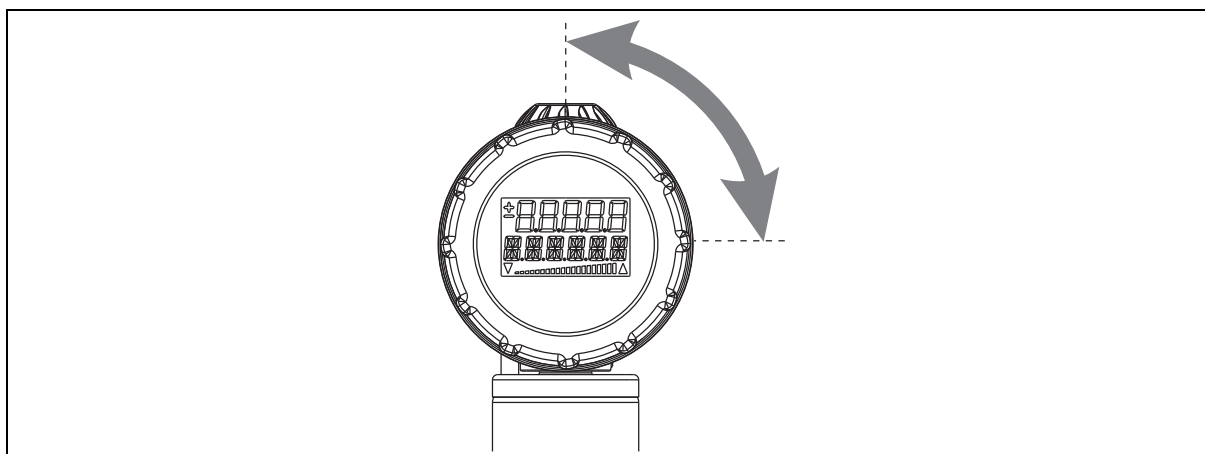


Depending on the conditions of the measuring point, the device can be installed in any other position. The LCD display can be rotated in 90° steps depending on the desired installation position.

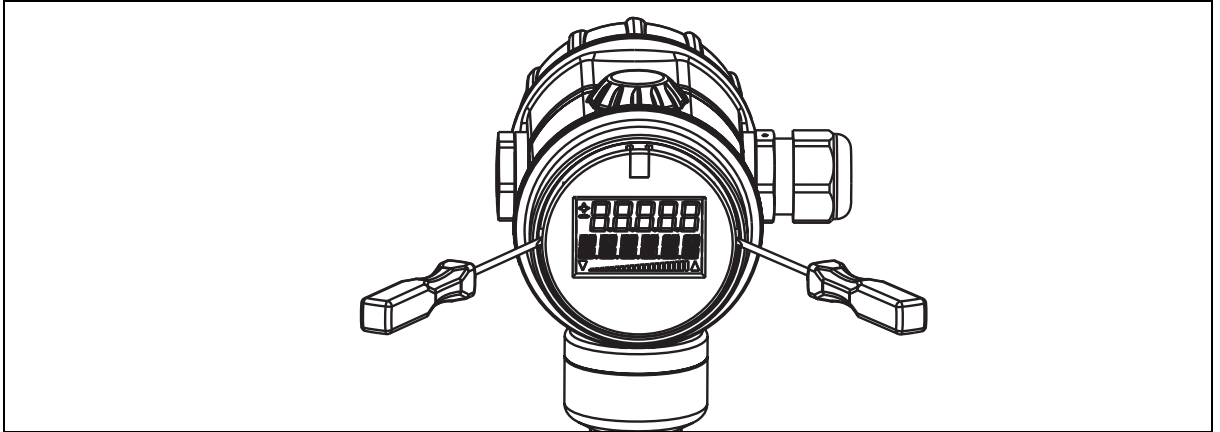

1. To unscrew the bezel, see chapter 5.2 "Unscrew the front ring or case lid", Page 23.
2. Lift out the electronics module using a narrow (small) screwdriver.
3. Rotate the electronics module into the desired position (90° steps) and insert again.
4. Screw on the bezel so that it is hand-tight.

5.4 Rotating the housing

The housing can be rotated by $\pm 160^\circ$.

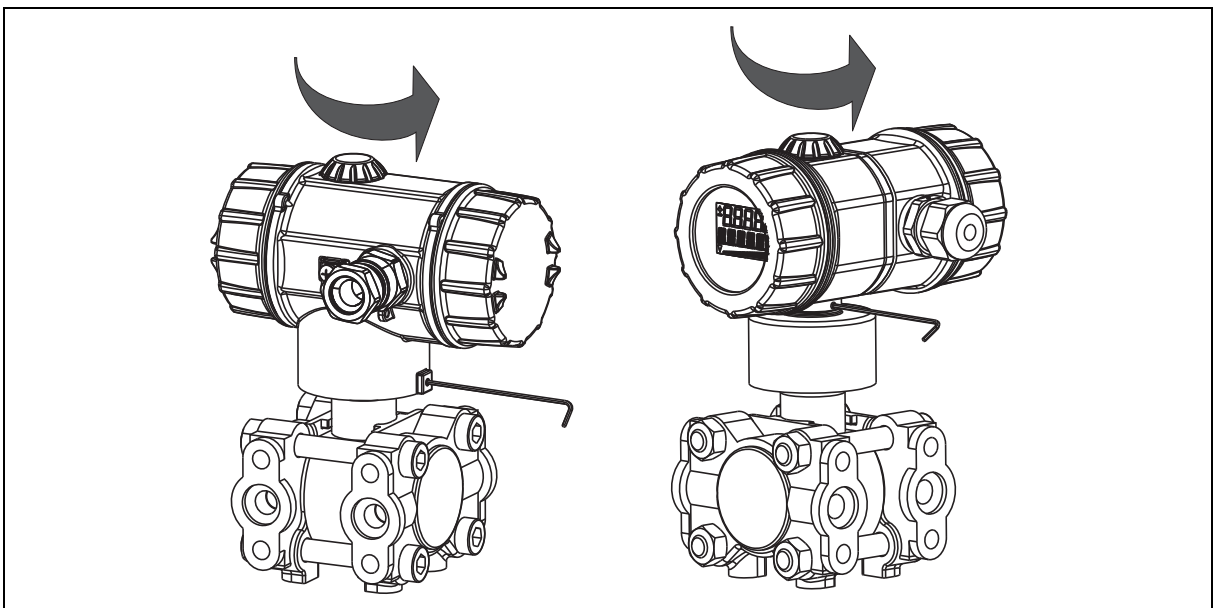

1. Loosen the threaded pin using a 1.5 mm hex wrench.
2. Rotate the housing to the desired position.
3. Screw on the threaded pin again until it is **tight**.

5 Mounting

5.5 Pressure connection

Seals

Operating conditions (for example material compatibility) must be considered when selecting the seal.

Checking for seal tightness

The pressure connection must be checked for seal tightness once established.



CAUTION!

If shut-off valves are used incorrectly, this can lead to personal injury or significant material damage!

Observe the correct order when opening or closing the valves!


► The device must not be vented when **used in toxic media!**



NOTE!

Mount the device so that abrasion at the process connection is avoided.

Differential pressure

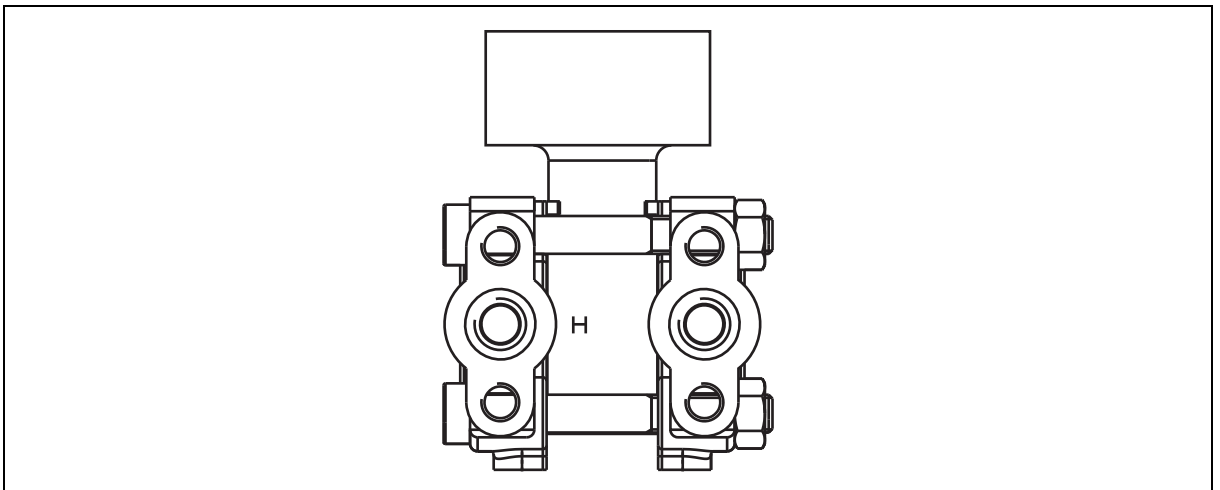


NOTE!

The connection for the higher pressure is labeled with "H".

5.6 Bracket for wall and pipe mounting

Mounting example

(Part no. 00543777)

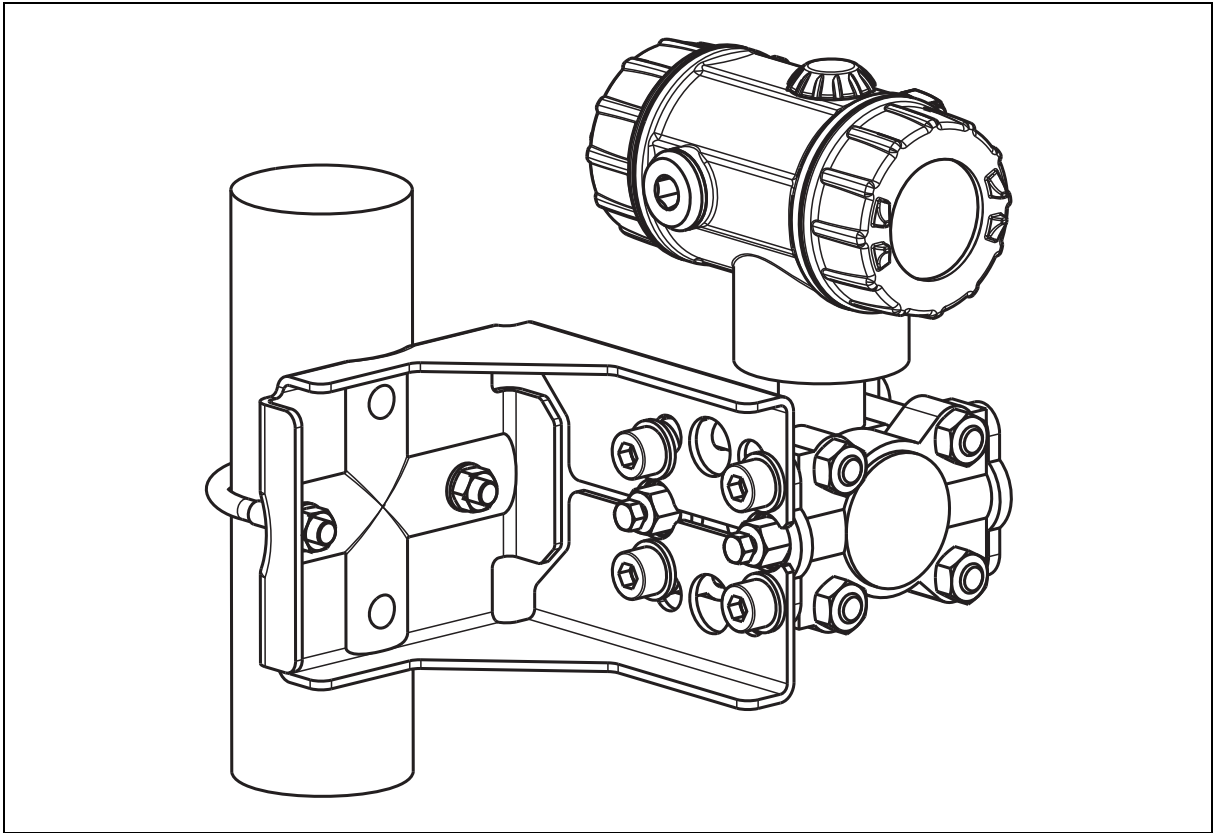

5.7 Level measurement with a diaphragm seal

The device is ideally suited for level measurements in open and closed containers.

5.7.1 General information

A device with a capillary and diaphragm seals is a closed system that is filled with oil under vacuum.

- Remove membrane protection before installation
- Do not open closed system
- Do not touch or clean the diaphragm seal membranes with hard or sharp tools
- Bending radius of the capillaries: ≥ 100 mm
- Install capillaries such that they are free from vibration in order to avoid pressure fluctuations and device faults; avoid shaking during operation
- To ensure correct measuring results, do not install the capillaries in the vicinity of heating or cooling lines; capillaries should preferably have the same temperature on both sides during operation; isolate the capillary in case of large temperature differences
- The length of the capillaries and the diaphragm seal connections used (material, diameter) should be the same for the duplex diaphragm seal system



NOTE!

The filling oil influences the temperature application range and the response time of a diaphragm seal system. The medium and ambient temperature, as well as the process pressure are therefore decisive when selecting the filling oil.

5 Mounting

Take note of the maximum possible temperature and pressures during commissioning/cleaning of the tank.

Pay attention to the tolerability of the filling oil with the requirements of the medium. For example, only filling oils that do not pose a health risk may be used in the food industry.



NOTE!


The level measurement is only ensured between the top edge of the lower diaphragm seal and the bottom edge of the upper one.

In vacuum applications it is recommended to install the device below the lower diaphragm seal. This prevents a vacuum load on the diaphragm seal caused by presence of the filling oil in the capillaries.

5.7.2 Measuring arrangement in open or closed containers with $\pm$ measuring ranges

The device must be installed according to the following diagram:

1. Always connect the minus side diaphragm seal via a capillary above the maximum filling level (MINUS input is at top).
2. Always connect the plus side diaphragm seal (marked "H") via a capillary at the bottom process connection (PLUS input is at bottom).
3. The level measurement is only ensured between the top edge of the lower diaphragm seal and the bottom edge of the upper one.
4. The device can be placed (in terms of height) anywhere between the lower and upper diaphragm seal.
5. In vacuum applications it is recommended to install the device below the lower diaphragm seal. This prevents a load on the diaphragm seal membrane caused by the filling oil in the capillaries.
6. For the device configuration, see chapter 8 "Configuration", Page 48.

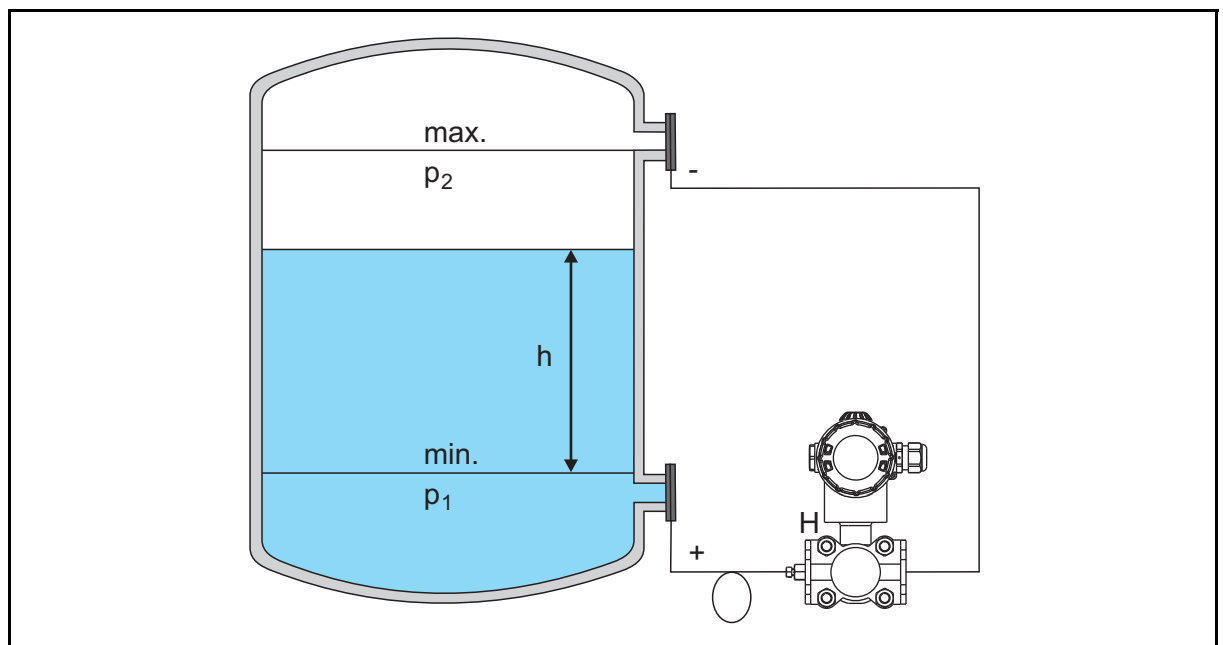


h (filling level) 4 to 20 mA

5.7.3 Measuring arrangement in open and closed containers with a measuring range of 0 to 1 bar

The device must be installed according to the following diagram:

1. Always connect the minus side diaphragm seal via a capillary at the bottom process connection (MINUS input is at bottom).
2. Always connect the plus side diaphragm seal (marked "H") via a capillary above the maximum filling level (PLUS input is at top).
3. The level measurement is only ensured between the top edge of the lower diaphragm seal and the bottom edge of the upper one.
4. The device can be placed (in terms of height) anywhere between the lower and upper diaphragm seal.
5. In vacuum applications it is recommended to install the device below the lower diaphragm seal. This prevents a load on the diaphragm seal membrane caused by the filling oil in the capillaries.
6. For the device configuration, see chapter 8 "Configuration", Page 48.

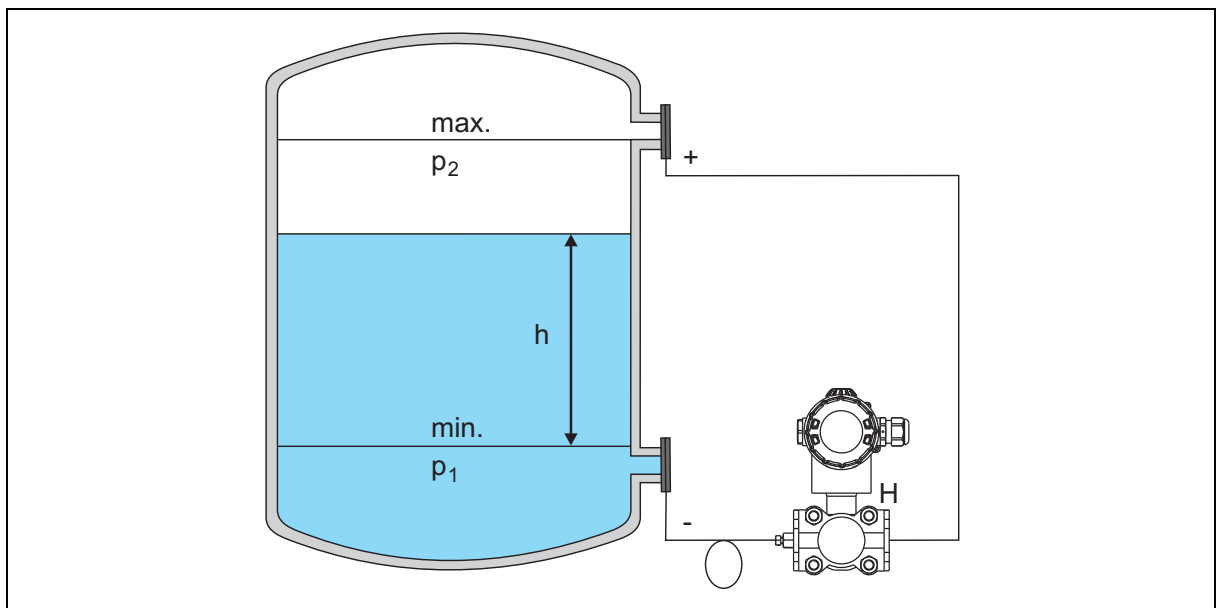

h (filling level) 4 to 20 mA



NOTE!

There must be **no** zero point adjustment performed after the installation when the tank is empty.

5.8 Level measurement without a diaphragm seal

The device is ideally suited for level measurements in open and closed containers.


5.8.1 Measuring arrangement in open or closed containers with $\pm$ and 0 to 1 bar measuring ranges

The device must be installed according to the following diagram:

1. Always connect the minus side (zero) via a differential pressure pipe at the top process connection (MINUS input is at top).
2. Always connect the plus side (marked "H") via a differential pressure pipe below the maximum filling level (PLUS input is at bottom).
3. If possible, install the device below the lower measurement connection so that the lower differential pressure pipe is always filled with liquid.

5 Mounting

4. It is a good idea to mount cutters and drain valves in order to catch and remove deposits, pollutants or liquid in the differential pressure pipes
5. For the device configuration, see chapter 8 "Configuration", Page 48.

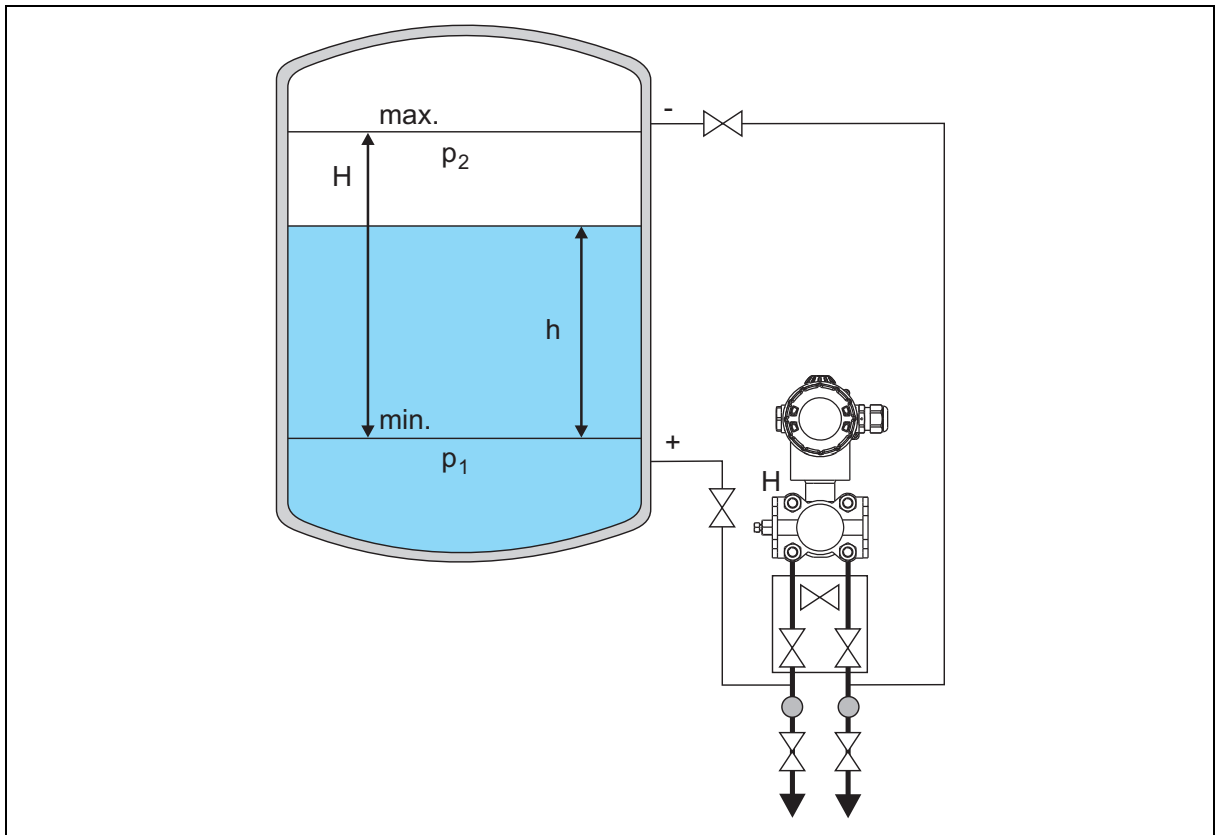

h (filling level) 4 to 20 mA



NOTE!

Applies for $\pm$ measuring ranges or a measuring range from 0 to 1 bar.

It is recommended to install the device behind a shut-off valve in order to allow easy cleaning and functional testing.

Do not install the device in the following positions:

- in the filling flow
- in the tank outlet
- at a position in the tank that could be affected by the mixer pressure pulses


With media that can harden upon cooling, the measuring device must be incorporated in the insulation.

5.8.2 Measuring arrangement for steam layering and $\pm$ measuring ranges

The device must be installed according to the following diagram:

1. Always connect the minus side (zero) via a differential pressure pipe at the top process connection (MINUS input is at top).
2. Always connect the plus side (marked "H") via a differential pressure pipe below the maximum filling level (PLUS input is at bottom).
3. If possible, install the device below the lower measurement connection so that the lower differential pressure pipe is always filled with liquid.
4. For level measurement in closed containers with steam layering, a condensing vessel ensures a filled differential pressure pipe and thus constant pressure on the minus side.

5. Fill up the differential pressure pipe in a cold state with water via the condensing vessel or via the valve block.
6. For the device configuration, see chapter 8 "Configuration", Page 48.

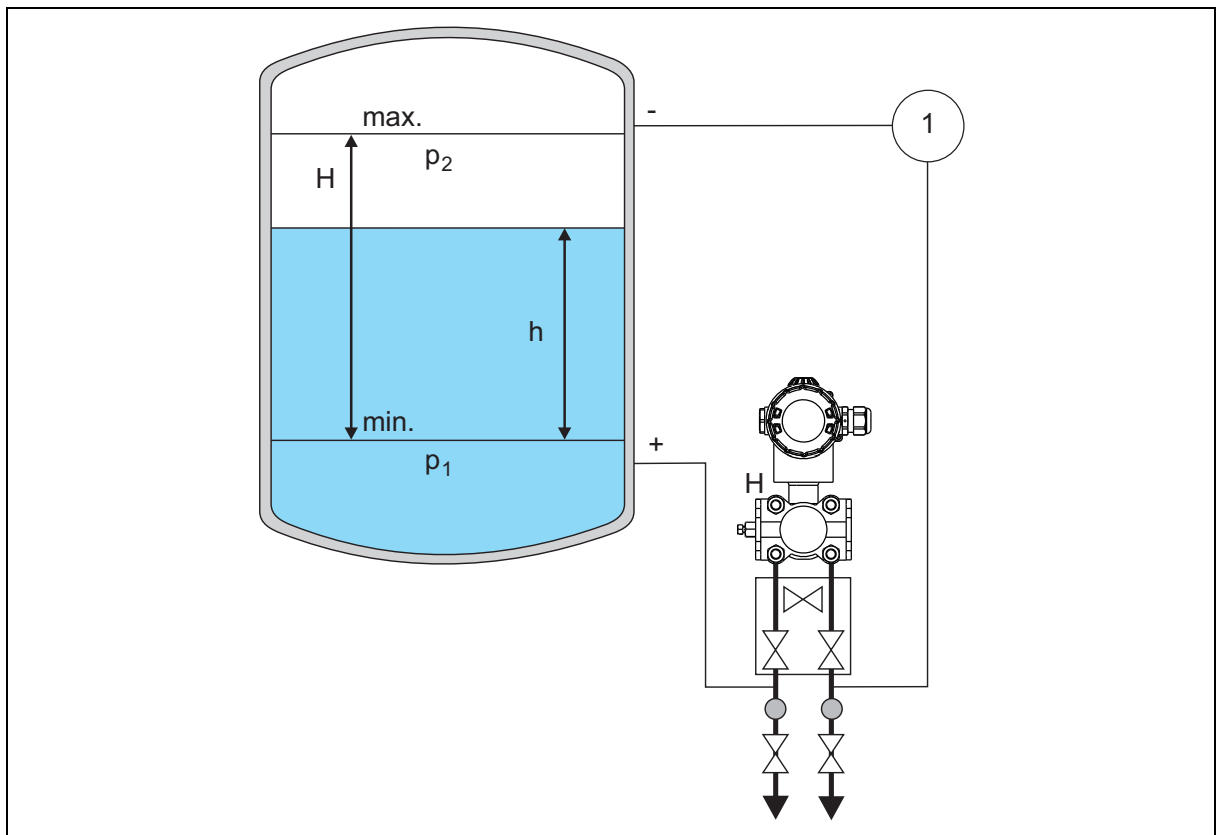

1 Condensing vessel
h (filling level) 4 to 20 mA



NOTE!


Install the condensing vessel at the same height as the extraction support and at the same distance to the measuring device.

5.8.3 Measuring arrangement for steam layering and a measuring range of 0 to 1 bar

The device must be installed according to the following diagram:

1. Always connect the plus side (marked "H") via a differential pressure pipe on the upper process connection (PLUS input is at top).
2. Always connect the minus side (zero) via a differential pressure pipe below the maximum filling level (MINUS input is at bottom).
3. If possible, install the device below the lower measurement connection so that the lower differential pressure pipe is always filled with liquid.
4. For level measurement in closed containers with steam layering, a condensing vessel ensures a filled differential pressure pipe and thus constant pressure on the minus side.
5. Fill up the differential pressure pipe in a cold state with water via the condensing vessel or via the valve block.
6. For the device configuration, see chapter 8 "Configuration", Page 48.

5 Mounting

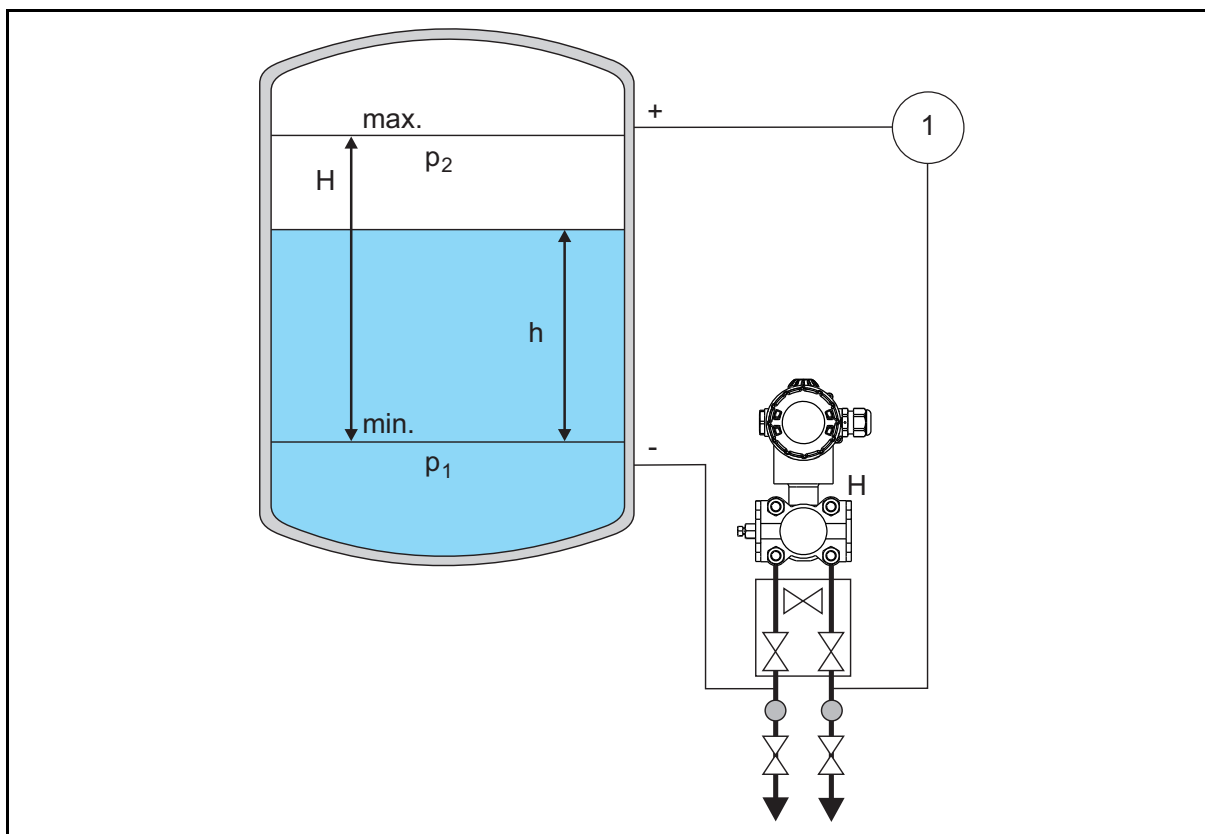


1 Condensing vessel
h (filling level) 4 to 20 mA



NOTE!

Install the condensing vessel at the same height as the extraction support.

5.9 Assembly in the explosion area

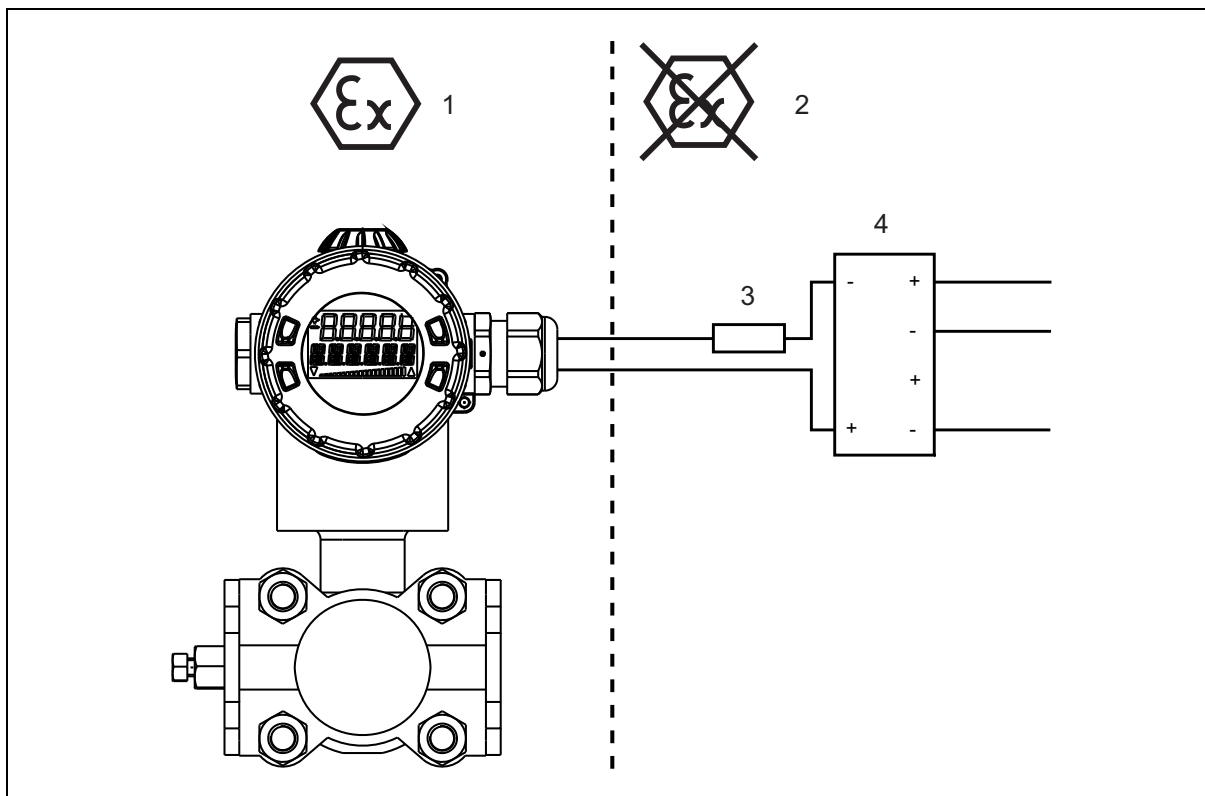

- 1 Hazardous (Ex) area Zone 0/20
- 2 Non-hazardous area
- 3 Burden (optional for HART interface)
- 4 Voltage supply device with isolating converter for connecting explosion-protected transmitters

6 Installation

6.1 Installation notes



DANGER!

The electrical connection must only be carried out by qualified personnel.
Ground the device!

The device must be completely disconnected from the mains voltage if there is a risk of contact with live parts during work on the equipment.

The electromagnetic compatibility meets standard EN 61326.

The device is suitable for use in SELV or PELV electrical circuits according to protection rating 3.

For connecting devices with Ex-approval, see chapter 6.4 "Electrical connection in Ex areas", Page 39.

In addition to a faulty installation, incorrectly set values could also impair the orderly function of the downstream process or lead to other damage.

Conductor cross-sections and ferrules

	Permissible cross-section
Without ferrule (for rigid cable only)	0.2 to 1.5 mm ² AWG 24 to 16
With ferrule (for rigid or flexible cable)	0.25 to 0.75 mm ²

6.2 Device with cable gland

General information




DANGER!

For connection to devices in Ex areas see chapter 6.4 "Electrical connection in Ex areas", Page 39.

- Permissible cable diameter for devices with cable gland made of: 6 to 12 mm.
- Max. wire cross-section 1.5 mm².
- Lay signal lines separate from cables with voltages of > 60 V.
Use a shielded cable with twisted wires.
Avoid the vicinity of large electrical systems.
The full specification as per HART version 5.1, will only be achieved with a shielded cable.


6 Installation

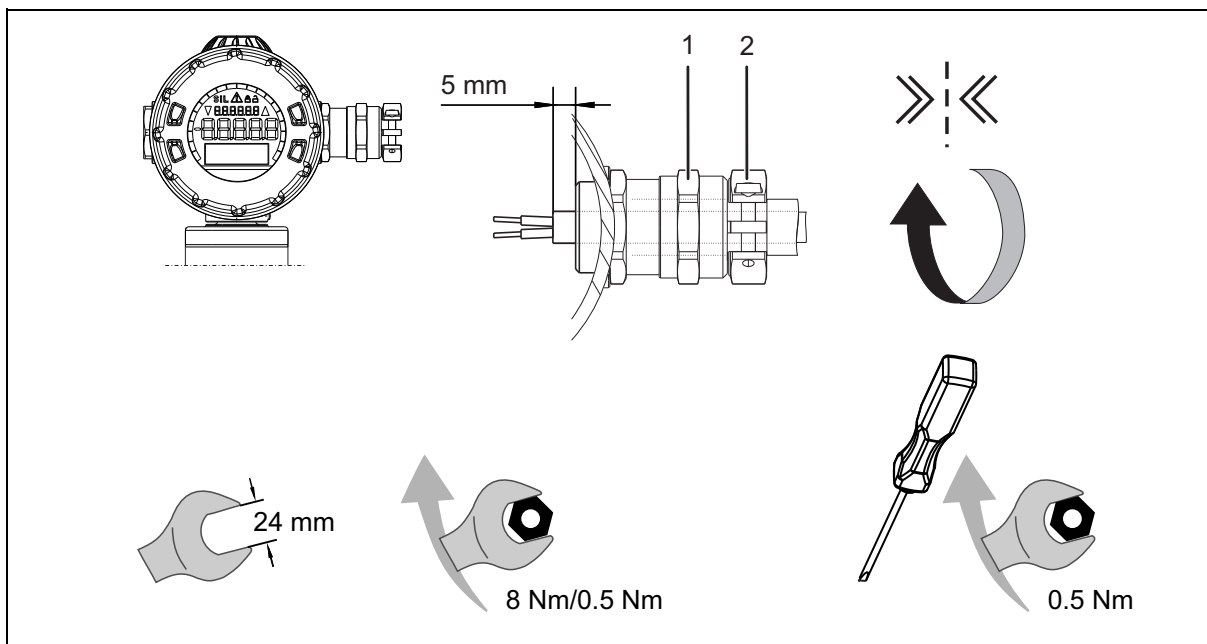

1. Insert the connection cable at least 5 mm into the housing.
2. Tighten the screw fitting by hand until you encounter resistance.
3. Tighten the screw connection (1) with a wrench:
Plastic ~ 0.5 Nm
Metal ~ 8 Nm
4. Tighten the strain relief (2) with a screwdriver.

Connection

1. Unscrew the housing cover from behind, see chapter 5.2 "Unscrew the front ring or case lid", Page 23
2. Ground the device.
3. To connect the connecting cables, see the following illustration.

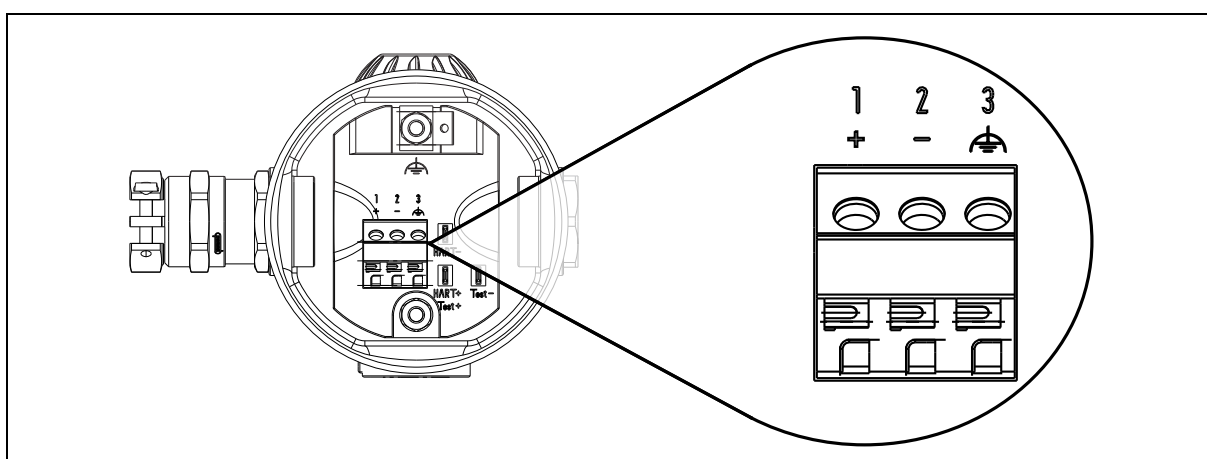


6 Installation

Terminal assignment

Connection		Terminal assignment
		82 (plastic), 93 (metal) Cable fitting
Voltage supply DC 12 to 36 V for non-Ex -version DC 12 to 28 V for Ex-version		1 L+ 2 L-
Output 4 to 20 mA, 2-wire Load-independent current: 4 to 20 mA In voltage supply		1 L+ 2 L-
Test connection for current output Internal resistance of the ammeter $\leq 10 \Omega$		TEST + TEST -
Test connection for HART The burden must be present!		HART + HART -
Functional ground		3

Operation and test

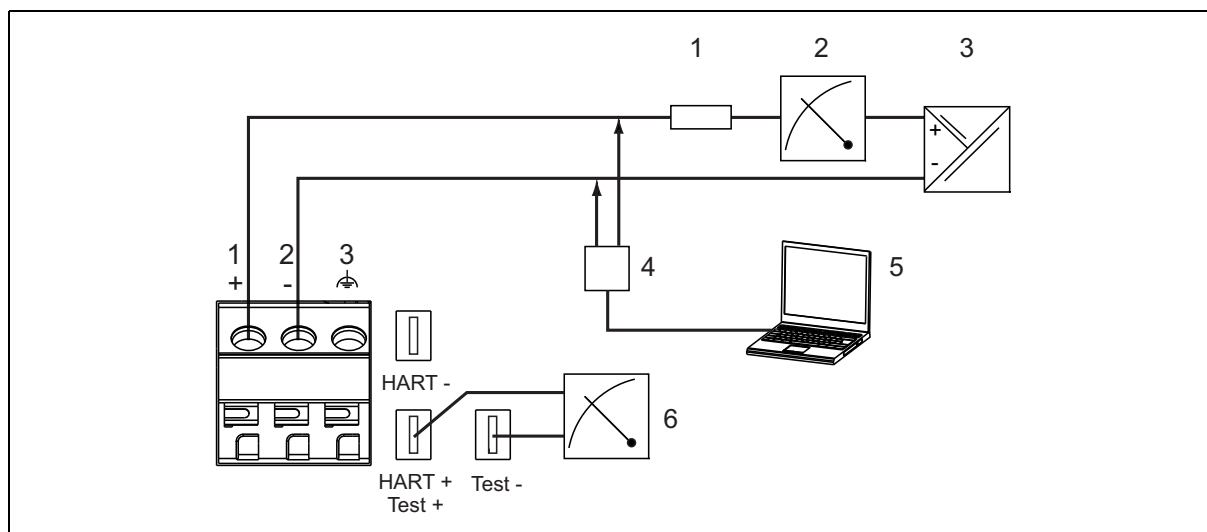

- 1 Total burden: $\text{Burden} \leq (U_B - 12 \text{ V}) \div 0.022 \text{ A}$;
for HART in addition: min. 250 Ω , max. 1100 Ω
- 2 Display or recording device, controller, PLC, etc.
- 3 Voltage supply:
for **non Ex** version DC 12 to 36 V
for Ex version DC 12 to 28 V
- 4 HART modem
- 5 PC or Notebook
- 6 Inherent resistance of ammeter $\leq 10 \Omega$


6.3 Device with M12 plug connector



DANGER!

For connection of the device in an Ex area see chapter 6.4 "Electrical connection in Ex areas", Page 39!

- Connect the device to ground using pin 4 of the device connector (1), see "Terminal assignment", Page 38.

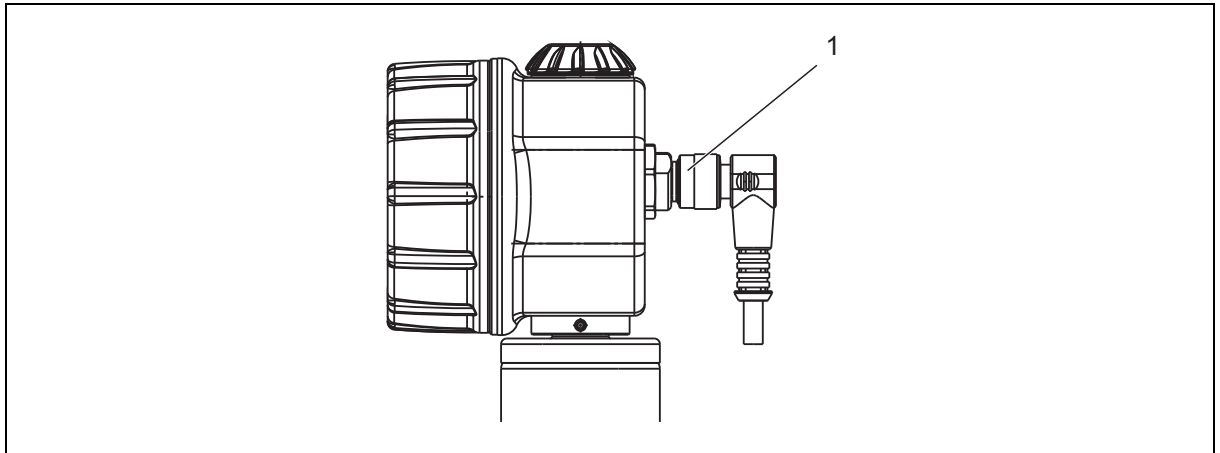

1 Device connector

A suitable connection is provided by a

- 4-pin cable box, straight, M12 × 1, with 2 m PVC cable, part no. 00404585, or a
- 4-pin cable box, angled, M12 × 1, with 2 m PVC cable, part no. 00409334, or a
- 5-pin cable box, straight, M12 × 1, without cable, part no. 00419130, or a
- 5-pin cable box, angled, M12 × 1, without cable, part no. 00419133

For pin configuration see below.

General information

- Lay signal lines separate from cables with voltages of > 60 V
- Use a shielded cable with twisted wires
- Avoid the vicinity of large electrical systems
- The full specification as per HART®, will only be achieved with a shielded cable.


6 Installation

Terminal assignment

Connection		Terminal assignment	Color coding ^a
		36 round plug M12 × 1	
Voltage supply DC 12 to 36 V for non-Ex -version DC 12 to 28 V for Ex-version		1 L+ 3 L-	Brown Blue
Output 4 to 20 mA, 2-wire Load-independent current: 4 to 20 mA In voltage supply		1 L+ 3 L-	Brown Blue
Functional ground		4	Black

^a The color coding is only valid for A-coded standard cables!

Operation

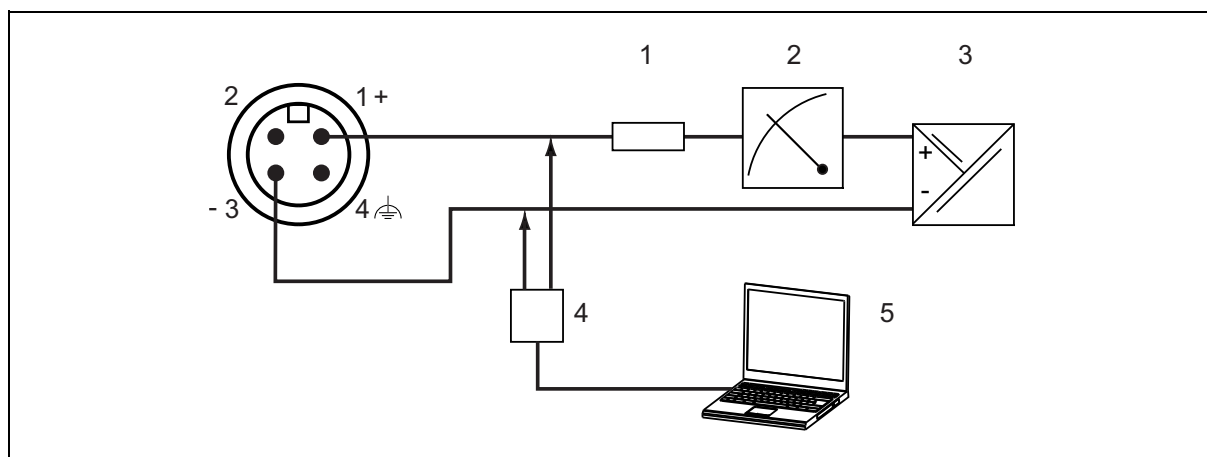

- 1 Total burden: $\text{Burden} \leq (U_B - 12 \text{ V}) \div 0.022 \text{ A}$;
for HART in addition: min. 250 Ω , max. 1100 Ω
- 2 Display or recording device, controller, PLC, etc.
- 3 Voltage supply:
for **non** Ex version DC 12 to 36 V
for Ex version DC 12 to 28 V
- 4 HART modem
- 5 PC or Notebook

6.4 Electrical connection in Ex areas

General information

The relevant regulations must be observed during electrical connection; furthermore, in the potentially explosive area the minimum requirements according to Directive 1999/92/EC apply, for example:

- Regulation for the project planning, selection and installation of electrical plants in potentially explosive areas (IEC/EN 60079-14)
- EU type examination certificate



NOTE!

Only certified measuring devices may be used in intrinsically safe electrical circuits,!



NOTE!

The intrinsically safe electrical circuit must be restricted to overvoltage category I, as stipulated in IEC 60664-1. The electrical circuit supply is **only** to be provided by a certified, intrinsically safe power source with a protection level of "ia".



NOTE!


Hybrid mixtures are explosive mixtures of flammable gases, vapors, or mists with flammable dusts. In particular, equipment used in potentially explosive areas where hybrid mixtures are present must be checked. The operator is responsible for checking that the equipment is suitable for such uses.



DANGER!

**Only the HART modem may be used in the explosion-proof area!
The JUMO interface must not be used!**

- The device's voltage supply must be intrinsically safe and must not exceed the following maximum values:
U_i: DC 28 V
I_i: 115 mA
P_i: 750 mW

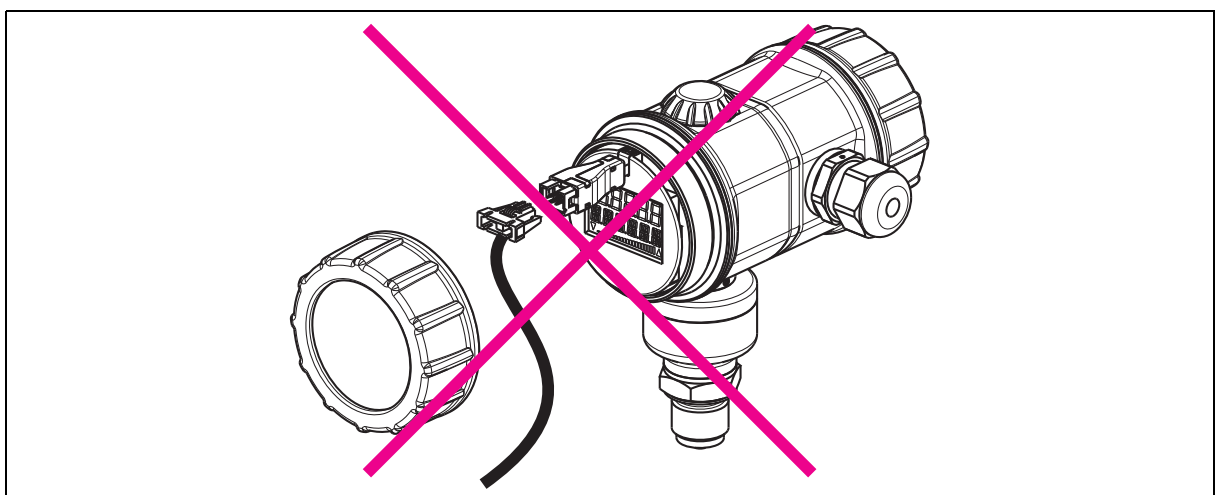

6 Installation




NOTE!

Connecting the HART communicator or the HART modem is optional.


A minimum burden must be present on the signal circuit in order to facilitate error-free communication, see the previous pages. The burden is usually already integrated when using input isolating amplifiers.

6.4.1 Connection diagram "Ex"

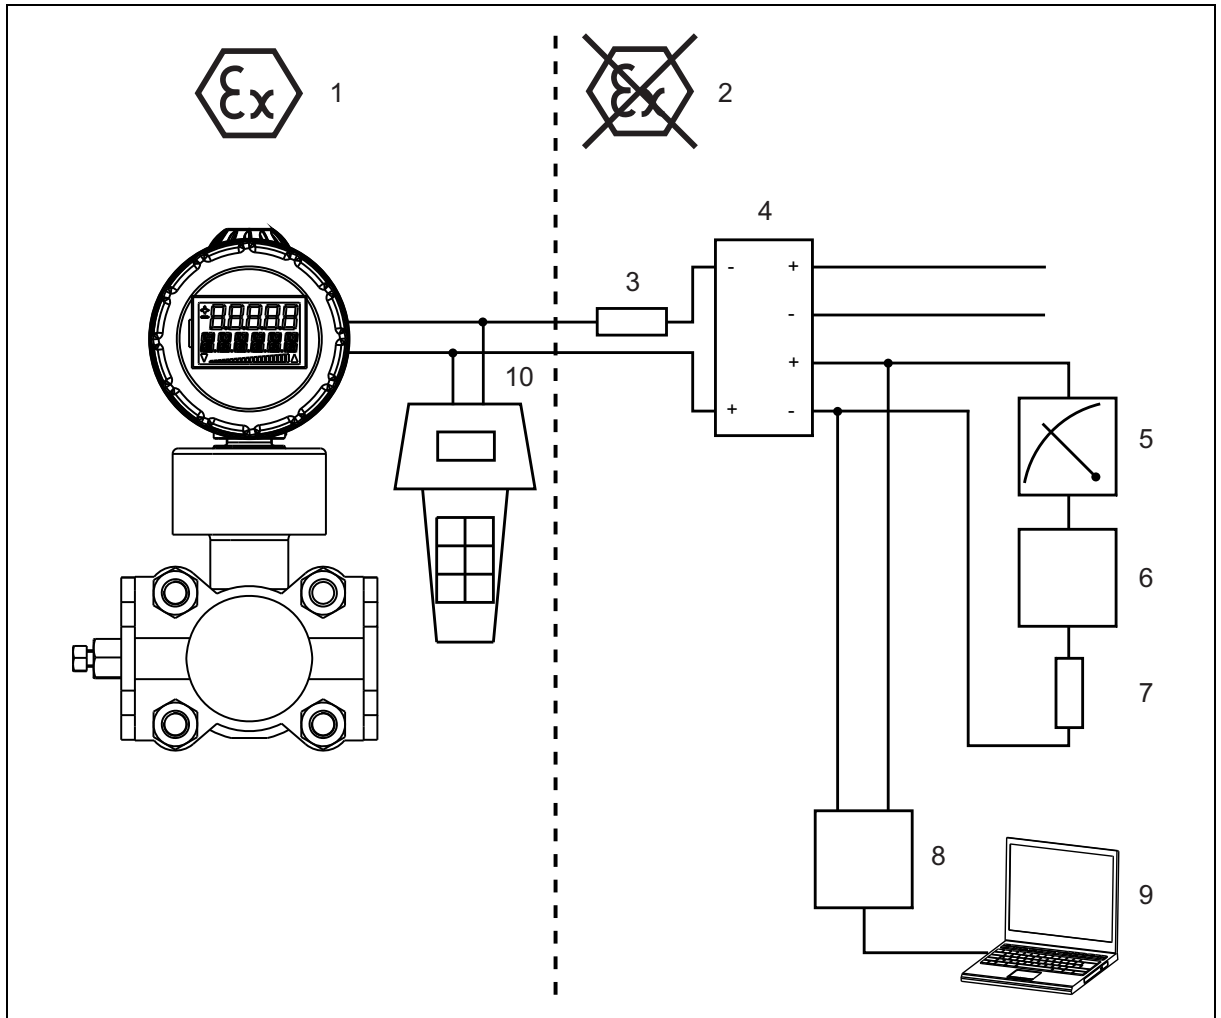


- 1 Potentially explosive area zone 0/20
- 2 Non-potentially explosive area
- 3 Burden for HART $\leq (U_B - 12 \text{ V}) \div 0.022 \text{ A}$; additional: min. 250 Ω , max. 1100 Ω
Include the current limiting resistor integrated in the input isolation amplifier.
- 4 Input isolating amplifier for connecting explosion-proof devices
- 5 Indicating device or recorder, controller, PLC, etc.
- 6 Further devices
- 7 Burden for HART min. 250 Ω , max. 1100 Ω
Include the current limiting resistor integrated in the input isolation amplifier.
- 8 HART modem
- 9 PC or laptop
- 10 HART communicator, intrinsically safe

7.1 Display

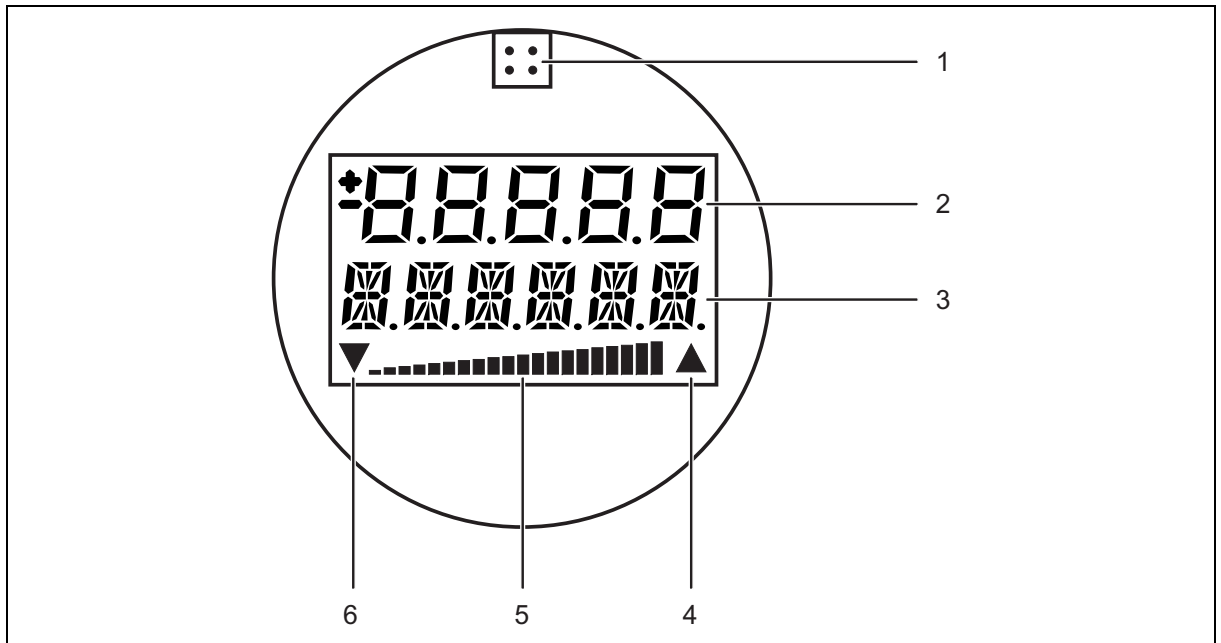

- 1 Socket for JUMO setup interface (behind a cover)
- 2 Measured value
- 3 Measuring unit
- 4 Overage
- 5 Percentage control of the measuring range
- 6 Underrange

7.2 Operation with rotary knob or with setup programm

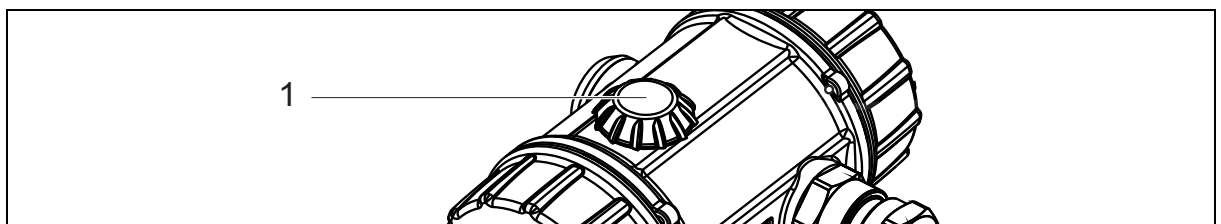

- 1 Rotary knob

The device is operated either

- with the rotary knob (1) or
- via the optional setup program or
- via the HART interface, e.g. with a handheld or PC program.



NOTE!

Alternatively, for operation via a rotary knob, all actual values and parameters can very easily be displayed or adjusted by means of the setup program.

7 Operation


Furthermore, the setup program offers an array of useful additional functions, e.g.:

- Recording the measured values
- Graphical view of temperature and pressure
- Detailed diagnostic messages
- Display of the complete order code and the device configuration (can be printed out, e.g. for project documents or follow-up orders)

The setup program can address the device via the following interfaces:

- JUMO setup interface
The PC interface cable with USB/TTL converter (USB transmitter cable) is required to connect the PC to the device, part no. 00456352
- HART interface
A HART modem is required to connect the PC to the device, part no. 00443447

Rotating and pressing

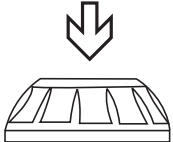	Rotate Select parameter or set values
	Press Confirm parameter or values

7.3 The level concept


Two levels

Operation is on two levels:



NOTE!

After the device is turned on, it is on the display level. You can go to the parameter level through the following operation.

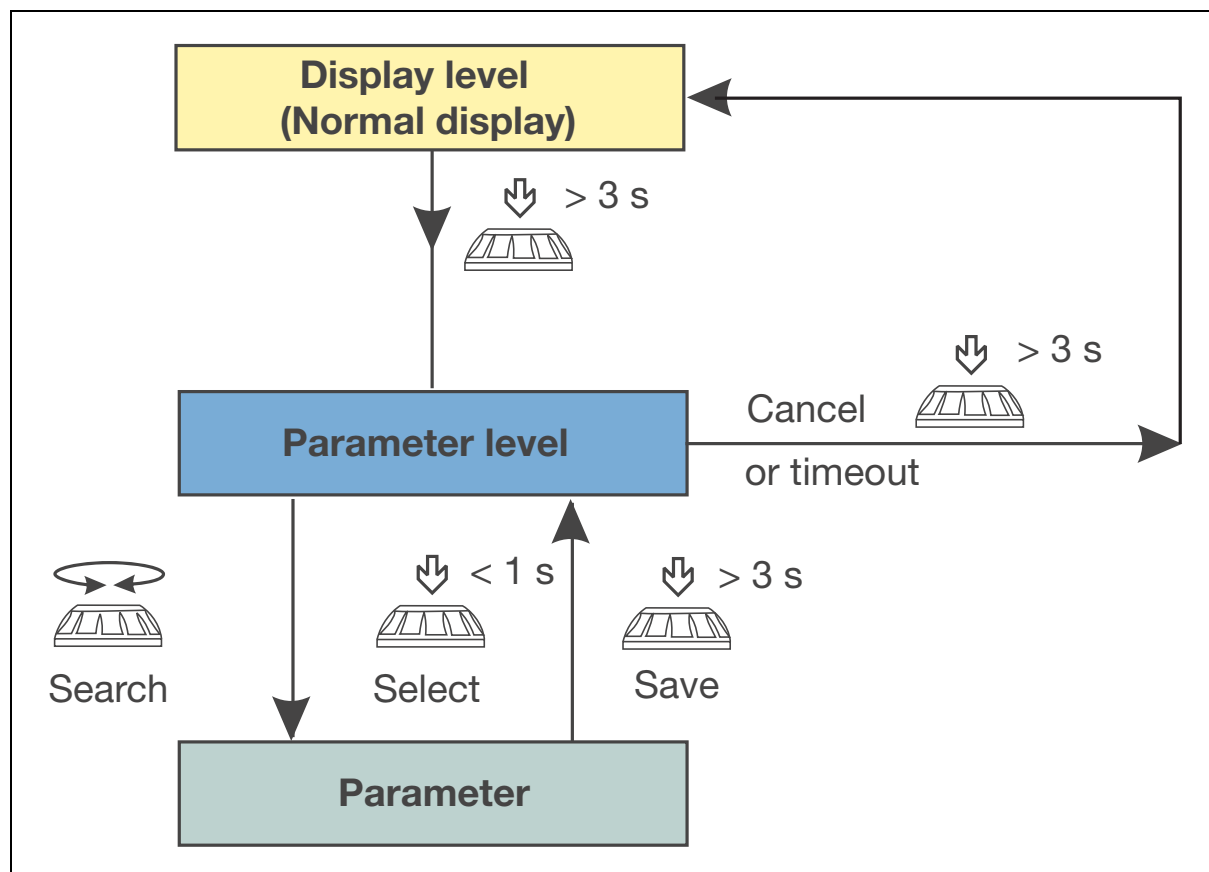

7 Operation

7.3.1 The display level





The measured pressure and other values are displayed at the display level. The output current is shown in % as a bar chart in the third line of the display.

It is not possible to change parameters at the display level!

Action	Display (example)	Explanation
		Displays the pressure with measuring unit
		Displays the measured value in % or measured value scaled with a choice of measuring unit
		Displays the calculated output current in mA.
		Displays the sensor temperature in °C or °F.
		Displays the stored minimum pressure in the selected measuring unit
		Displays the stored maximum pressure
		Displays the pressure value and the sensor temperature in the selected measuring units

7.3.2 The parameter level



The device parameters can be displayed and changed at the parameter level.

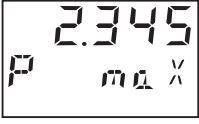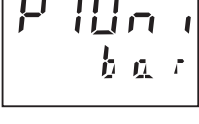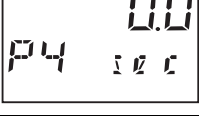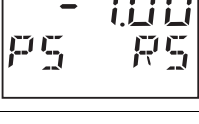Action	Display (example)	Explanation	Selection ^a
		P min Stored minimum pressure	Reset by ↓ > 3 seconds 
		P max Stored maximum pressure	Reset by ↓ > 3 seconds 
		P0 Den "Density" Density correction	0.01 to 1.00 to 99.99
		P1 Uni "Unit" Pressure measuring unit	inH2O inHG ftH2O mmH2O mmHG PSI bar mbar kg/cm2 kPa TORR MPa mH2O
		P2 mA Measuring range Lower range value	4.00 to 20.00 mA
		P3 mA Measuring range Upper range value	4.00 to 20.00 mA
		P4 sec Attenuation	0.00 to 100.0 s
		P5 RS "Range start" Measuring range Lower range value	Nominal measuring range

7 Operation

Action	Display (example)	Explanation	Selection ^a
		P6 RE "Range end" Measuring range Upper range value	Nominal measuring range
		P7 Zero Zero point adjustment	Current pressure
		P8 mA Current generator	3.60 to 4.00 to 21.60 mA
		P9 Err Current in case of malfunction	ErLo = 3.6 mA ErHi = 21.6 mA LAsT = last value
		P10 Key Key lock	0 = no lock LA = all, interface released L0 = all, without measurement start LS = alle, ohne Messanfang und -ende LALL = alle, inkl. Schnittstelle
		P11 Chr Characteristic line "Characteristic"	Lin = linear SLin = linear bis Beginn Radizierung SoFF = off until start of square root extraction
		P12 % Insertion point of Radizierung	5.0 to 9.4 to 15.0 % vom Ausgangsstrom
		P13 SWV Software version	Editing not possible
		P14 Uni Temperature measuring unit	°C/°F
		P15 OFF Pressure value offset (zero offset)	Nominal measuring range


7 Operation

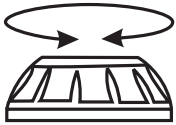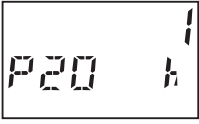Action	Display (example)	Explanation	Selection ^a
		P16 SCS Scaling start „Scaling start“	-9999 to 0 to +9999
		P17 SCE Scaling end „Scaling end“	-9999 to 100 to +9999
		P18 SCD Decimal place scaling „Scaling decimal point“	Auto = automatic 0 = no decimal place 1 = 1 decimal place 2 = 2 decimal places 3 = 3 decimal places
		P19 % Scaling unit	% (default setting) kg/sec kg/min kg/h t/min t/h l/sec l/min l/h m3/sec m3/min m3/h L m3 UsrTEXT
		P20 h Operating hours	Editing not possible

^a Default settings are shown in **bold**.

8 Configuration

8.1 Data flow diagram

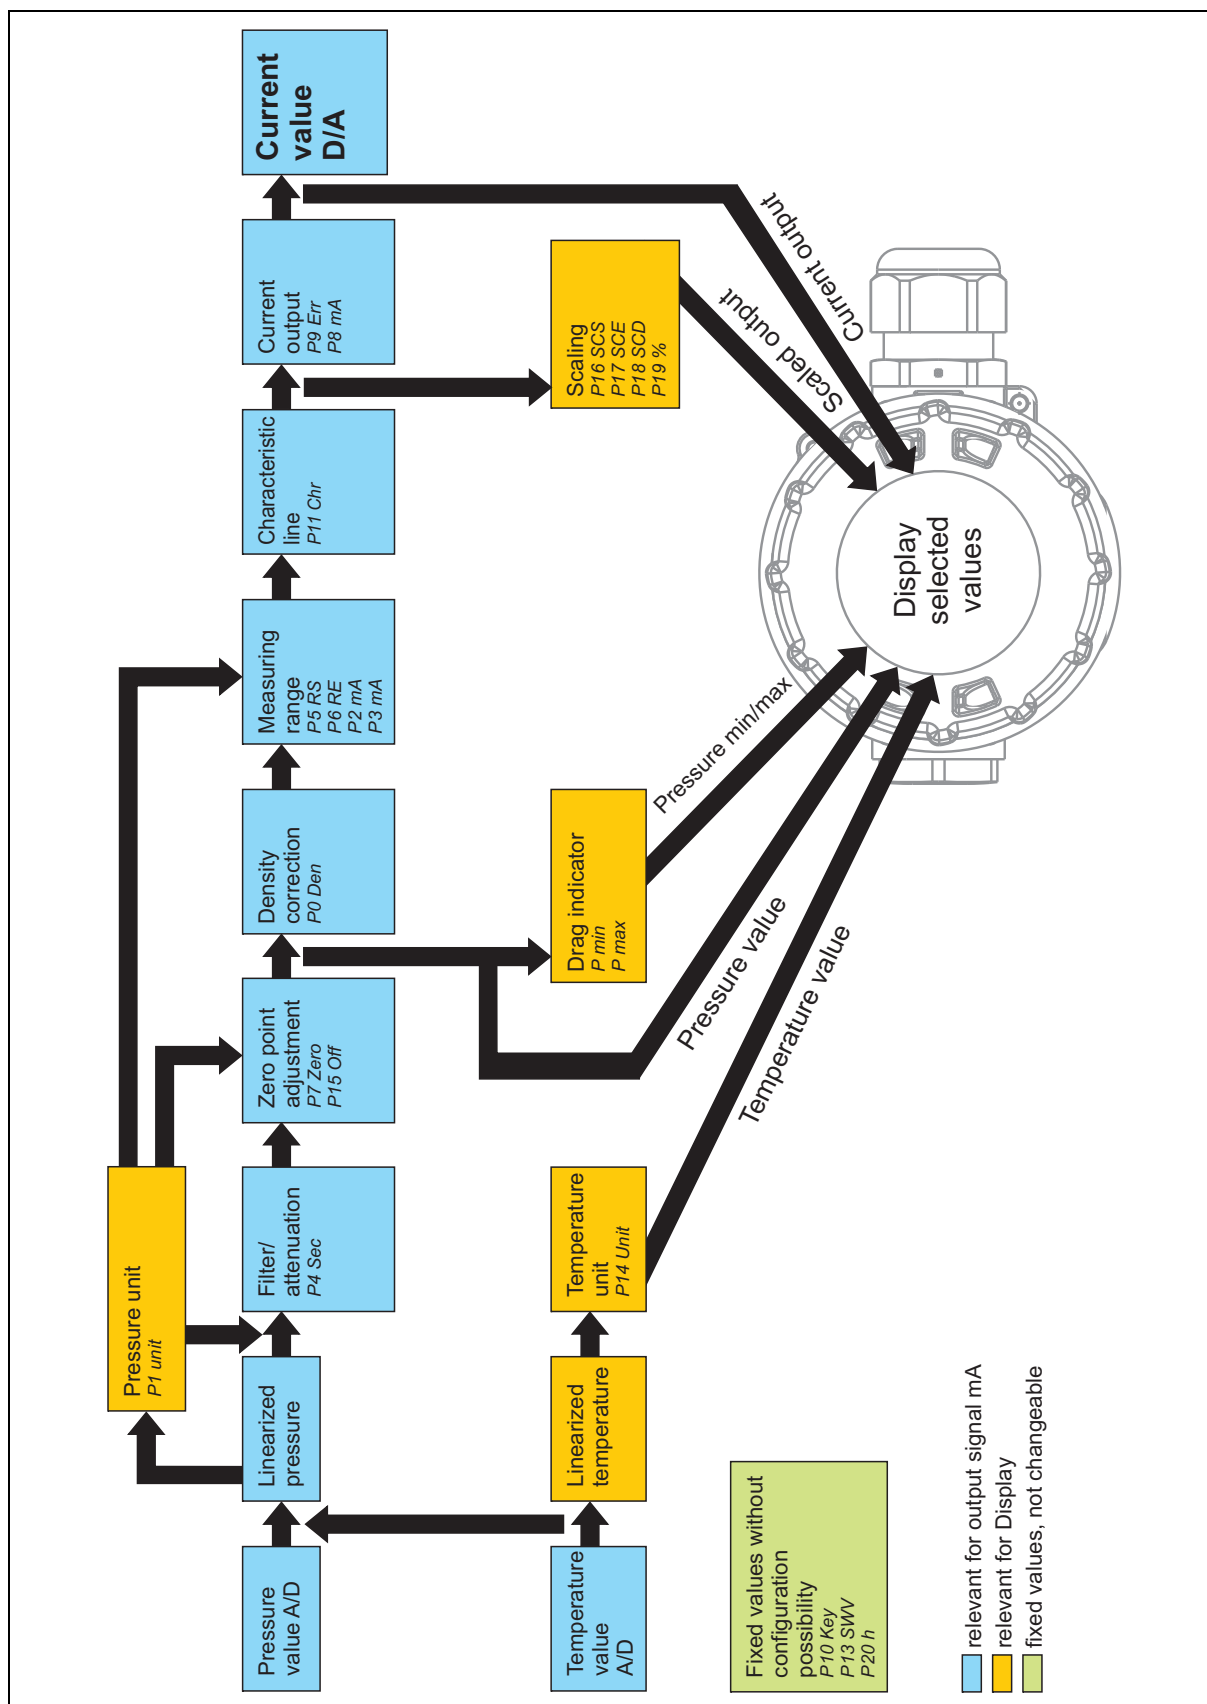

8.2 Description of the possible configurations

P0 Den Density correction

Configuration of the density of the medium to be measured

This may, for example, be relevant for the level measurement in order to display the correct filling height from the measured pressure.



CAUTION!

The set value should remain at the value 1 and should be changed in exceptional cases.

P1 Uni Pressure measuring unit

The pressure value unit can be configured here. The pressure value unit is shown on the display and can be taken from the HART protocol.

P2 mA Measuring range lower range value

Configuration of the device (measuring range) with pressure specification

If the tank is empty, the start point (zero point) of the pressure/level measurement can be set here. The advantage of this procedure: The device is immediately configured for the application (e.g. tank).



CAUTION!

No further density corrections may be configured. No other values may be entered under P5 RS.

P3 mA Measuring range upper range value

Configuration of the device (measuring range) with pressure specification

If the tank is full, the end point (full) of the pressure/level measurement can be set here. The advantage of this procedure: The device is immediately configured for the application (e.g. tank).



CAUTION!

No further density corrections may be configured. No other values may be entered under P6 RE.

P4 Sec Attenuation

Time constant defined in seconds

Depending on the default setting, it is ensured that the measured value responds with a delay to short, fast pressure changes.

P5 RS Measuring range lower range value

Configuration of the device (measuring range) without pressure specification

Any values can be entered here as the lower range value. It is important when, for example, a differential pressure measurement with a diaphragm seal is attached to an application (e.g. filling level) and no configuration with a pressure specification can be performed.

There is a calculation example available under chapter 8.4 "Level measurement configuration without a pressure specification", Page 54.

8 Configuration



CAUTION!

No further density corrections may be configured. No other values may be entered under P2 mA.

P6 RE **Measuring range upper range value**

Configuration of the device (measuring range) without pressure specification

Any values can be entered here as the upper range value. It is important when, for example, a differential pressure measurement with a diaphragm seal is attached to an application (e.g. filling level) and no configuration with a pressure specification can be performed.

There is a calculation example available under chapter 8.4 "Level measurement configuration without a pressure specification", Page 54.



CAUTION!

No further density corrections may be configured. No other values may be entered under P3 mA.

P7 Zero **Zero point adjustment** (only for relative pressure)

The applied pressure is stored as a zero point.



CAUTION!

Only perform this configuration if it is certain that the zero point is actually present on the device (e.g. after installing or correcting the position of the device). Otherwise a zero offset can also be configured with this. The zero offset is stored as an offset (P15).

Zero point adjustment is not possible with absolute pressure sensors.

P8 mA **Current generator**

The device outputs a freely adjustable current value. The analog output has no reference to the pressure measurement. The actual pressure measurement continues to be performed in the background and can be queried via the interfaces. If the current generator was manually started via P8, this is represented by an icon next to P8 and can also be stopped again by exiting P8.

P9 Err **Current in case of malfunction**

Option for setting which fault current the device should output in case of a malfunction. The default value is set to 21.6 mA according to NAMUR NE 43.

P10 Key **Key lock**

This makes it possible to set a keypad lock in different stages. This is a safety feature to prevent accidental, but also intentional configuration changes to the device.



NOTE!


To cancel a set lock (LA, L0, LS), the user must press the P-key for longer than 5 s in the "Current in case of malfunction" (P9 Err) display screen.

The "LALL" lock can only be set or canceled in the setup program.

P11 Chr Characteristic line

This point is not relevant for relative/absolute pressure measurement and should therefore not be configured. It can be used with the differential pressure measurement to implement a flow measurement.

With P11, the characteristic line of the preset value $Lin = \text{pressure proportional}$ can be re-configured to a square root extraction characteristic line $SLin$ or $SOff = \text{flow proportional}$. For the flow measurement, parameter P12 = insertion point relevant, below the characteristic line for low flow suppression either linearly connected ($SLin$) or completely disabled ($SOff$).

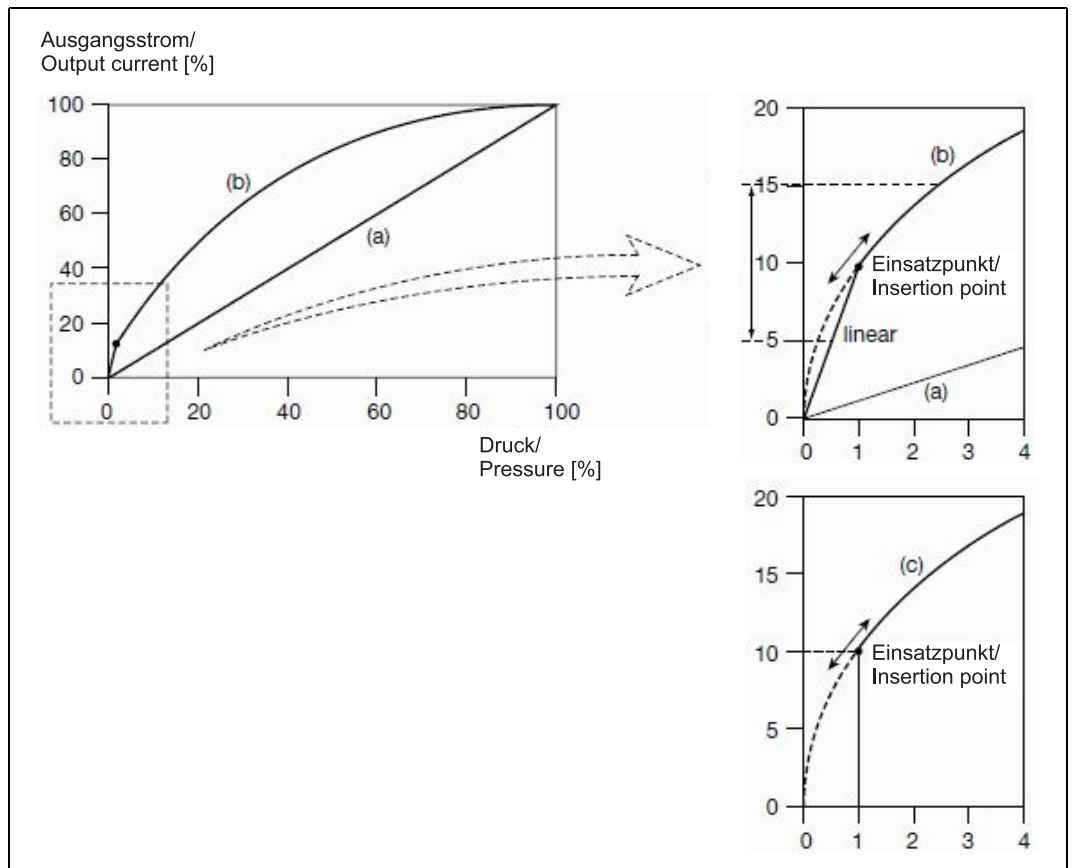

(a) = Lin = linear

(b) = $SLin$ = square-root, linear up to insertion point

(c) = $SOff$ = square-root, disconnected up to insertion point

P12 % Insertion point of the square root extraction

This point is not relevant for relative/absolute pressure measurement and should therefore not be configured. It can be used with the differential pressure measurement to implement a flow measurement. The insertion point of the square root extraction sets the start point for the flow measurement.

P13 SWV Software version

For information only
No configuration option

P14 Uni Temperature measuring unit

The temperature value can be read on the display or via the HART signal. There is no option to transmit the temperature value via a 4 to 20 mA signal. The temperature unit can be configured here.

8 Configuration

P15 Off	Pressure value offset The offset value of the pressure value (relative or absolute pressure) is shown in figures here (e.g. after the zero point adjustment). The values listed there should only be corrected in exceptional cases as it is possible to manually readjust an offset there. Please contact the manufacturer for this.
P16 SCS	Scaling start Configuration option to show the pressure value assignment on other physical values/units. For example, the pressure value applied on the device can be scaled to liters and other units (see P19). The scaling start is set here (e.g. 0).
P17 SCE	Scaling end Configuration option to show the pressure value assignment on other physical values/units. For example, the pressure value applied on the device can be scaled to liters and other units (see P19). The scaling end is set here (e.g. 100).
P18 SCD	Decimal place scaling Configuration option to show the pressure value assignment on other physical values/units. For example, the pressure value applied on the device can be scaled to liters and other units (see P19). The scaling decimal place is set here.
P19 %	Scaling unit Configuration option to show the pressure value assignment on other physical values/units. The scaling unit is set here.
P20 h	Operating hours For information only No configuration option

8.3 Level measurement configuration with a pressure specification - recommended (tank empty, tank full)

The following description applies to level measurements of all measuring ranges with or without a diaphragm seal.

With rotary knob operation (parameter level)

Swap from display level to parameter level, see chapter 7.3 "The level concept", Page 43


The following configuration steps should be taken:

- P1 Measuring unit, e.g. mbar
- P2 Measuring range lower range value: 4 mA (configuration with empty tank)
- P3 Measuring range upper range value: 20 mA (configuration with full tank)
- P4 Attenuation: 0
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P19 Scaling unit: L (liters)

Swap from parameter level to display level

With JUMO setup program

Extras **Extras: Online operation_measuring start with pressure transmitter (zero)** – with empty tank
Confirm transfer.

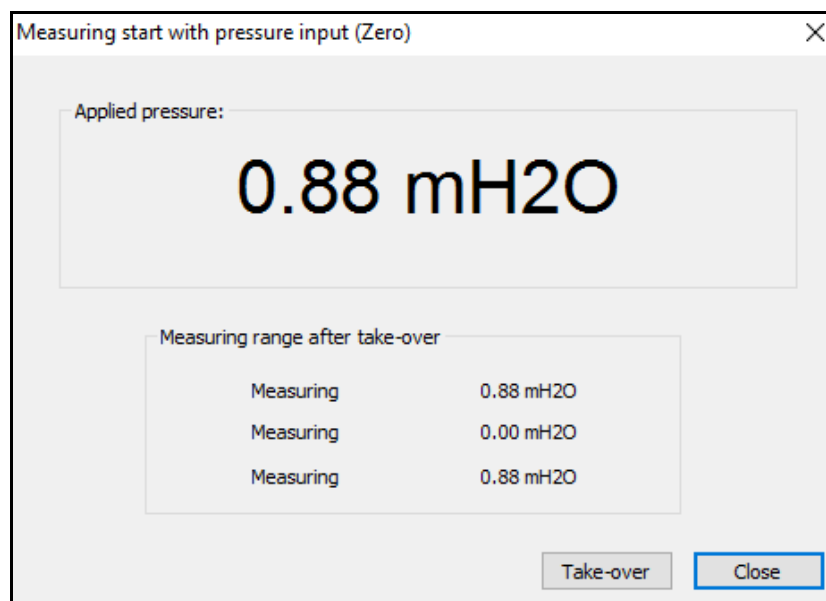

Extras **Extras: Online operation_measuring end with pressure transmitter (span)** – with full tank
Confirm transfer.



NOTE!

No zero point adjustment should be performed when configuring the level measurement with a pressure specification.

8 Configuration


8.4 Level measurement configuration without a pressure specification

8.4.1 With a diaphragm seal in closed containers with a measuring range of 0 to 1 bar



NOTE!

The filling oil in the diaphragm seal used has an influence on the configuration of the device and therefore always needs to be considered in the calculation.

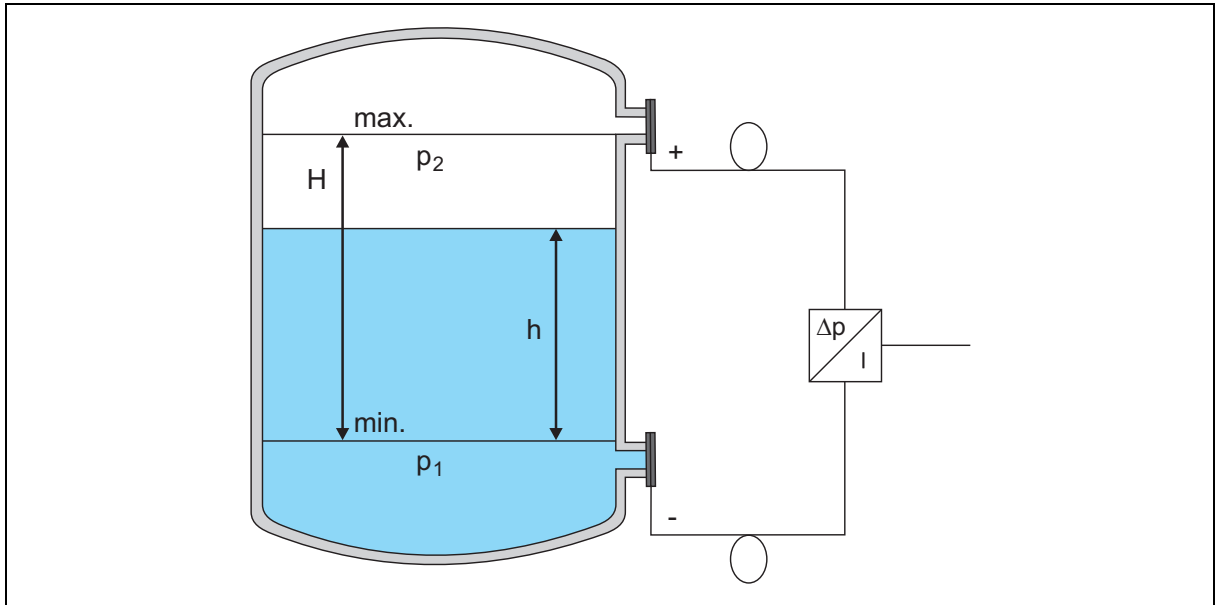

Range start (4 mA):

Measuring range lower range value P5 [mbar] = $H \times \rho_{oil} \times g \times 0,01$

Range end (20 mA):

Measuring range upper range value P6 [mbar] = $(H \times \rho_{oil} - h \times \rho_{liq}) \times g \times 0,01$

Legend:

H [mm] = Vertical distance of the diaphragm seal
h [mm] = Max. level of the measured liquid, $0 < h \leq H$

ρ_{oil} [g/cm³] = 0.96, density of the oil in the capillary

ρ_{liq} [g/cm³] = Density of the measured liquid

g [m/s²] = 9.81, gravitational acceleration

Example:

Tank height = 10 m

H [mm] = 9000

h [mm] = 8000

ρ_{liq} [g/cm³] = 1.00, density of the water, 4 °C

Measuring range lower range value P5 [mbar] = $9000 \times 0.96 \times 9.81 \times 0.01 = 847.6$

Measuring range upper range value P6 [mbar] = $(9000 \times 0.96 - 8000 \times 1.00) \times 9.81 \times 0.01 = 62.8$

With rotary knob operation (parameter level)

Swap from display level to parameter level, see chapter 7.3 "The level concept", Page 43

The following configuration steps should be taken:

- P1 Unit, e. g. mbar
- P4 Attenuation: 0
- P5 Measuring range lower range value: 847.6, see example calculation
- P6 Measuring range upper range value: 62.8, see example calculation
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P19 Scaling unit: L (liters)

Swap from parameter level to display level

With JUMO setup program

Data transfer from the device

Editing Maintenance

The following dialog window opens: "Maintenance":

Maintenance

Range

Measurement unit (P01): mH2O

Measuring start (P05): -0.004 mH2O

Measuring end (P06): 0.883 mH2O

Offset (P15): -0.210 mH2O

Characteristic

Damping (P04): 2.5 sec

Characteristic: Linear

Start of: 9.4 %

Scaling

Start (P16): 0.00

End (P17): 8.00

max. no. of decimal places (P18): Automatic

Unit (P19): l

Customized:

Date

Measuring point date: 01.01.2008 Today

OK Cancel

- P01 Measuring unit, e.g. mbar
- P04 Attenuation: 2.5
- P05 Measuring range lower range value: 847.6, see example calculation
- P06 Measuring range upper range value: 62.8, see example calculation
- P11 Characteristic line: linear
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P18 Maximum decimal place: automatic
- P19 Scaling unit: L (liters)

After entering the desired values: Start data transfer to device.


8 Configuration



CAUTION!

A zero point adjustment should generally not be performed (e.g. when the tank is empty) in a measuring range of 0 to 1 bar.

8.4.2 With a diaphragm seal in closed containers with $\pm$ measuring ranges

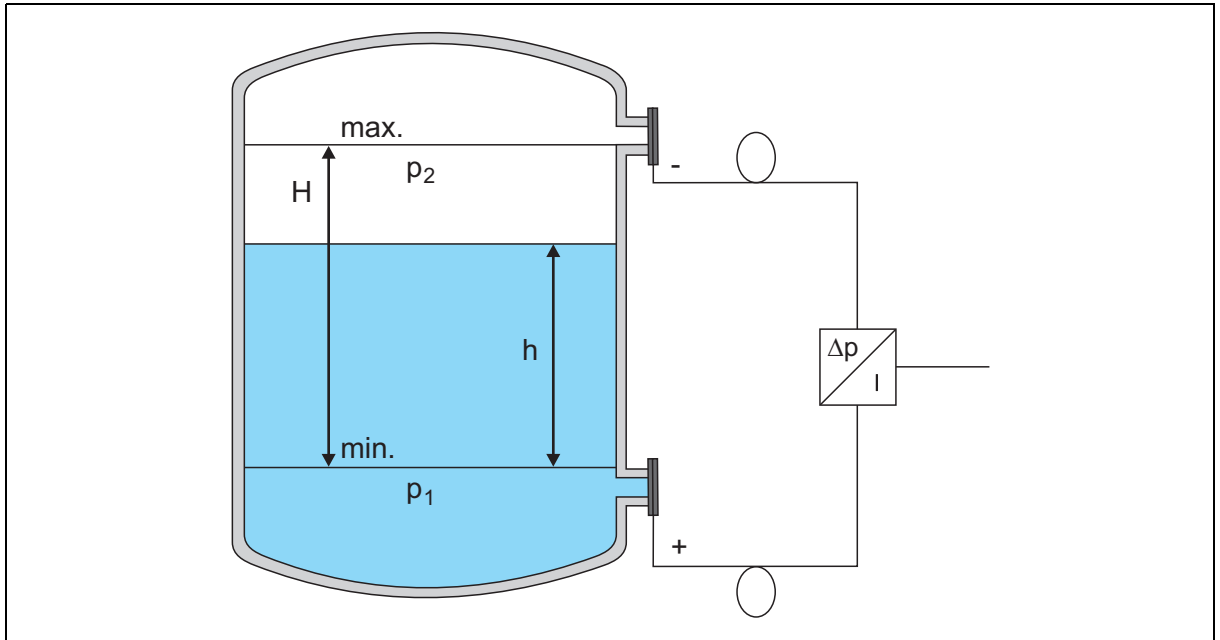

Range start (4 mA):

Measuring range lower range value P5 [mbar] = $-(H \times \rho_{oil} \times g \times 0,01)$

Range end (20 mA):

Measuring range upper range value P6 [mbar] = $-(H \times \rho_{oil} - h \times \rho_{liq}) \times g \times 0,01$

Legend:

H	[mm]	=	Vertical distance of the diaphragm seal
h	[mm]	=	Max. level of the measured liquid, $0 < h \leq H$
ρ_{oil}	[g/cm ³]	=	0.96, density of the oil in the capillary
ρ_{liq}	[g/cm ³]	=	Density of the measured liquid
g	[m/s ²]	=	9.81, gravitational acceleration

Example:

Tank height		=	10 m
H	[mm]	=	9000
h	[mm]	=	8000
ρ_{liq}	[g/cm ³]	=	1.00, density of the water, 4 °C
Measuring range lower range value P5	[mbar]	=	$-(9000 \times 0.96 \times 9.81 \times 0.01) = -847.6$
Measuring range upper range value P6	[mbar]	=	$-(9000 \times 0.96 - 8000 \times 1.00) \times 9.81 \times 0.01 = -62.8$

With rotary knob operation (parameter level)

Swap from display level to parameter level, see chapter 7.3 "The level concept", Page 43

The following configuration steps should be taken:

- P1 Unit, e. g. mbar
- P4 Attenuation: 0
- P5 Measuring range lower range value: 62.8, see example calculation
- P6 Measuring range upper range value: 847.6, see example calculation
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P19 Scaling unit: L (liters)

Swap from parameter level to display level

With JUMO setup program

Data transfer from the device

Editing Maintenance

The following dialog window opens:

Maintenance

Range

Measurement unit (P01): mH2O

Measuring start (P05): -0.004 mH2O

Measuring end (P06): 0.883 mH2O

Offset (P15): -0.210 mH2O

Characteristic

Damping (P04): 2.5 sec

Characteristic: Linear

Start of: 9.4 %

Scaling

Start (P16): 0.00

End (P17): 8.00

max. no. of decimal places (P18): Automatic

Unit (P19): l

Customized:

Date

Measuring point date: 01.01.2008 Today

OK Cancel

- P01 Measuring unit, e.g. mbar
- P04 Attenuation: 2.5
- P05 Measuring range lower range value: 62.8, see example calculation
- P06 Measuring range upper range value: 847.6, see example calculation
- P11 Characteristic line: linear
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P18 Maximum decimal place: automatic
- P19 Scaling unit: L (liters)

8 Configuration



NOTE!

No zero point adjustment should be performed after configuring the level measurement without a pressure specification (for $\pm$ measuring range).

8.4.3 Without a diaphragm seal in closed containers with $\pm$ measuring ranges or 0 to 1 bar

The device is ideally suited for level measurements in open and containers.

With rotary knob operation (parameter level)

Swap from display level to parameter level, see chapter 7.3 "The level concept", Page 43

The following configuration steps should be taken:

- P1 Unit, e. g. mbar
- P4 Attenuation: 0
- P5 Measuring range lower range value: 0
- P6 Measuring range upper range value: 2.00 (2 m water column in this example)
- P7 Zero point adjustment, set device to zero, e.g. if tank is empty
- P11 Characteristic line: linear
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P19 Scaling unit: L (liters)

Swap from parameter level to display level

With JUMO setup program

Data transfer from the device

Editing Maintenance

The following dialog window opens:

Maintenance

Range

Measurement unit (P01): mH2O

Measuring start (P05): -0.004 mH2O

Measuring end (P06): 0.883 mH2O

Offset (P15): -0.210 mH2O

Characteristic

Damping (P04): 2.5 sec

Characteristic: Linear

Start of: 9.4 %

Scaling

Start (P16): 0.00

End (P17): 8.00

max. no. of decimal places (P18): Automatic

Unit (P19): l

Customized:

Date

Measuring point date:

01.01.2008 Today

OK Cancel

- P01 Measuring unit, e.g. mbar
- P04 Attenuation: 0
- P05 Measuring range lower range value: 0
- P06 Measuring range upper range value: 2.00 (2 m water column in this example)
- P11 Characteristic line: linear
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P18 Maximum decimal place: automatic
- P19 Scaling unit: L (liters)


After entering the desired values: Data transfer to device

Zero point adjustment, set device to zero, e.g. if tank is empty

Extras Extras: Online operation_sensor zero point calibration

8 Configuration

8.4.4 For steam layering with $\pm$ measuring ranges

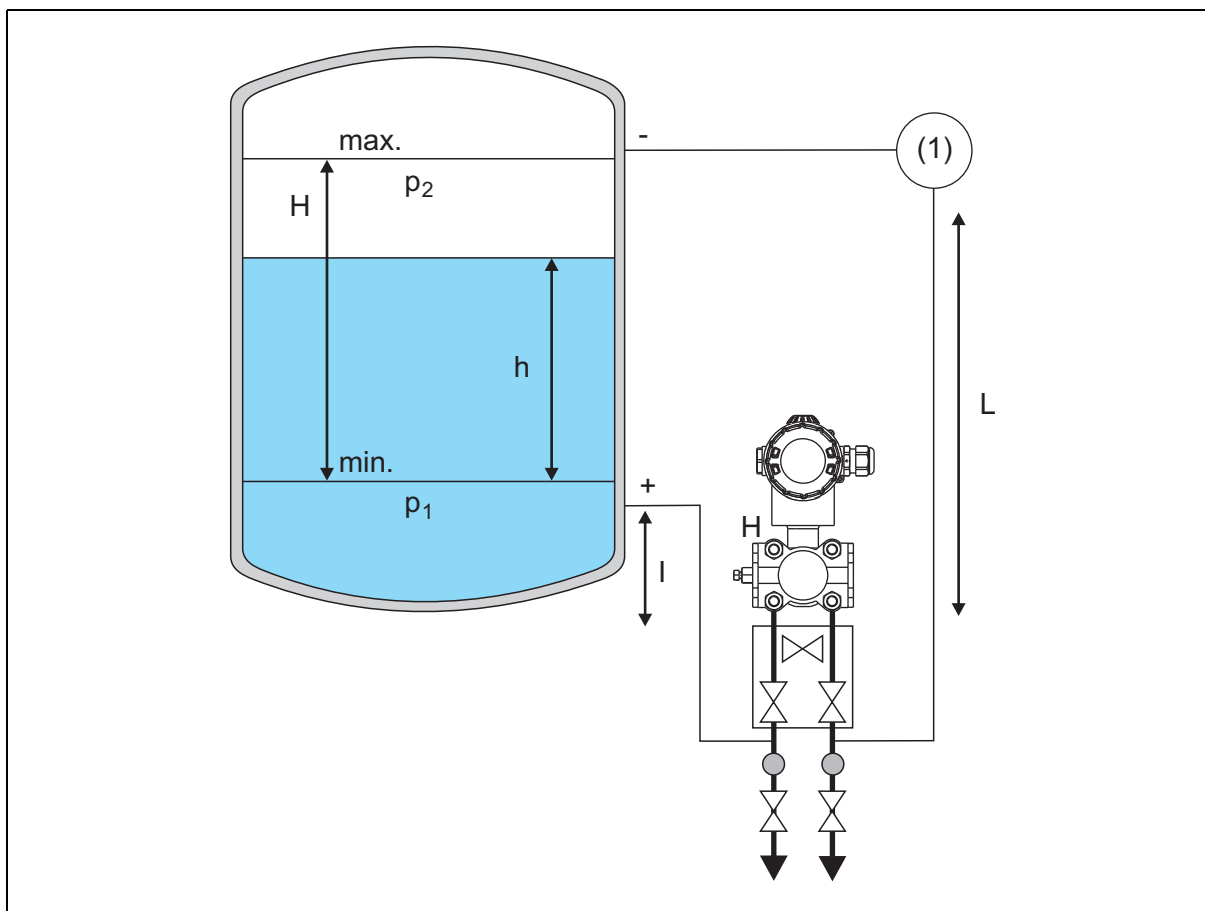

(1) Condensing vessel

I Vertical distance from tank to measuring device input

L Vertical distance from condensing vessel to measuring device input

Range start (4 mA):

Measuring range lower range [mbar] = $(L - I) \times \rho_{vap} \times g \times 0,01$
value P5

Range end (20 mA):

Measuring range upper range [mbar] = $([L - I] + H) \times \rho_{vap} \times g \times 0,01$
value P6

Legend:

H	[mm]	=	Max. filling level height
h	[mm]	=	Max. level of the measured liquid, $0 < h \leq H$
L	[mm]	=	Vertical distance from tank to measuring device input (low pressure)
I	[mm]	=	Vertical distance from condensing vessel to measuring device input (high pressure)
ρ_{vap}	[g/cm ³]	=	1.00, density of the water, 4 °C
ρ_{liq}	[g/cm ³]	=	Density of the measured liquid
g	[m/s ²]	=	9.81, gravitational acceleration

Example:

Tank height	=	10 m
H	[mm] =	7000
h	[mm] =	6000
L	[mm] =	8000
l	[mm] =	100
Measuring range lower range value P5	[mbar] =	$(8000 - 100) \times 1.00 \times 9.81 \times 0.01 = 77.50$
Measuring range upper range value P6	[mbar] =	$[(8000 - 100) + 7000] \times 1.00 \times 9.81 \times 0.01 = 1461.69$

With rotary knob operation (parameter level)

Swap from display level to parameter level, see chapter 7.3 "The level concept", Page 43

The following configuration steps should be taken:

P0	Density correction for ρ_{liq} : Density of the liquid to be measured, water at 4 °C = density 1
P1	Unit, e. g. mbar
P4	Attenuation: 0
P5	Measuring range lower range value: 77.50, see example calculation
P6	Measuring range upper range value: 1461.69, see example calculation
P14	Temperature measuring unit (only for displaying or as HART signal): °C
P16	Scaling start: scaling on the tank, e.g. in liters: 0
P17	Scaling end: scaling on the tank, e.g. in liters: 200
P19	Scaling unit: L (liters)

Swap from parameter level to display level



CAUTION!

No zero point adjustment may be performed for this configuration of the level measurement

With JUMO setup program

Data transfer from the device

Editing Maintenance
The following dialog window opens:

8 Configuration

The screenshot shows a 'Maintenance' configuration window with the following fields and values:

- Range:**
 - Measurement unit (P01): mH2O
 - Measuring start (P05): -0.004 mH2O
 - Measuring end (P06): 0.883 mH2O
 - Offset (P15): -0.210 mH2O
- Characteristic:**
 - Damping (P04): 2.5 sec
 - Characteristic: Linear
 - Start of: 9.4 %
- Scaling:**
 - Start (P16): 0.00
 - End (P17): 8.00
 - max. no. of decimal places (P18): Automatic
 - Unit (P19): l
 - Customized: (empty)
- Date:**
 - Measuring point date: 01.01.2008
 - Today button

Buttons: OK, Cancel


- P01 Measuring unit, e.g. mbar
- P04 Attenuation: 0
- P05 Measuring range lower range value: 77.50, see example calculation
- P06 Measuring range upper range value: 1461.69, see example calculation
- P11 Characteristic line: linear
- P14 Temperature measuring unit (only for displaying or as HART signal): °C
- P16 Scaling start: scaling on the tank, e.g. in liters: 0
- P17 Scaling end: scaling on the tank, e.g. in liters: 200
- P18 Maximum decimal place: automatic
- P19 Scaling unit: L (liters)

After entering the desired values: Data transfer to device

Zero point adjustment, set device to zero, e.g. if tank is empty

Extras Extras: Online operation_sensor zero point calibration

8.4.5 For steam layering with a measuring range of 0 to 1 bar

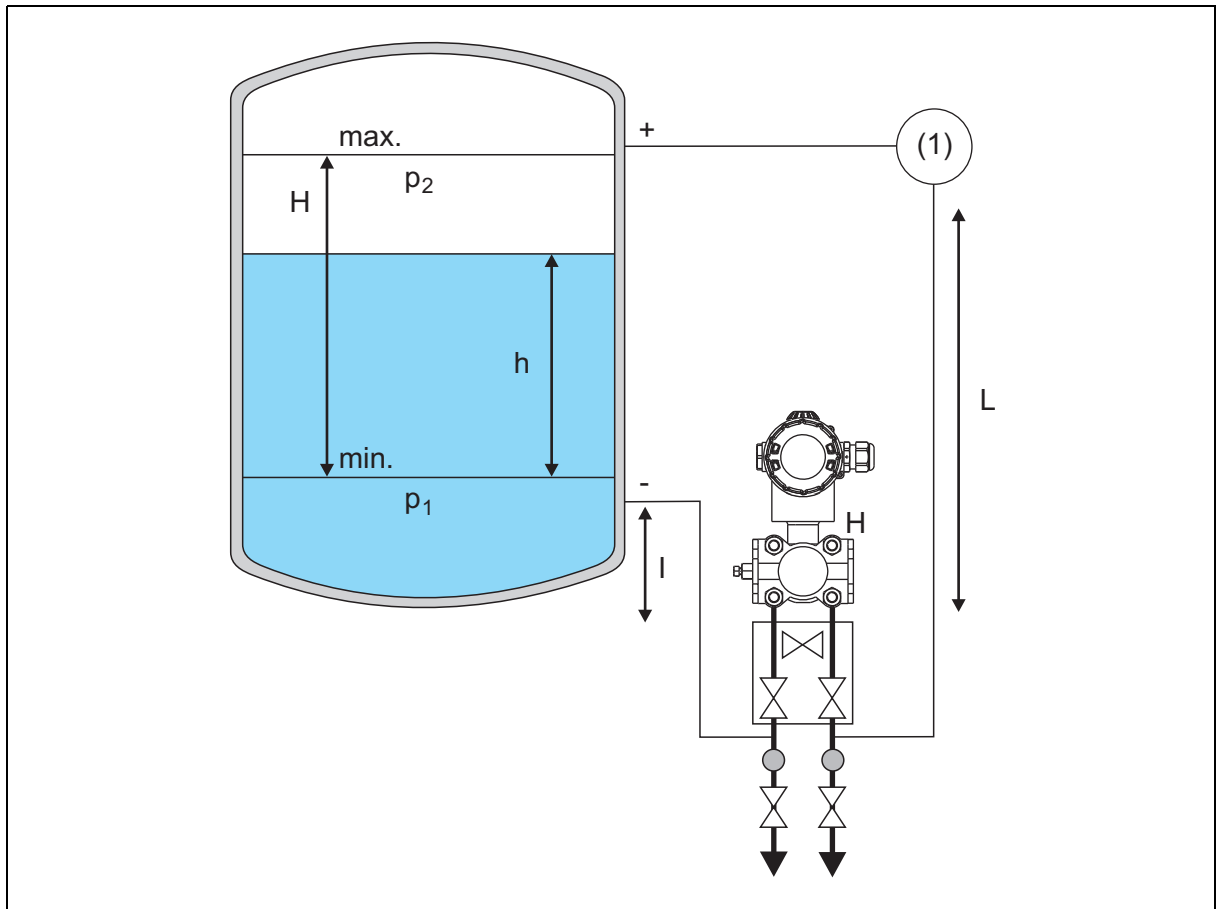

(1) Condensing vessel

I Vertical distance from tank to measuring device input

L Vertical distance from condensing vessel to measuring device input

Range start (4 mA):

Measuring range lower range value P5 [mbar] = $((L - I) + H) \times \rho_{vap} \times g \times 0,01$

Range end (20 mA):

Measuring range upper range value P6 [mbar] = $(L - I) \times \rho_{vap} \times g \times 0,01$

Legend:

H	[mm]	=	Vertical distance of the diaphragm seal
h	[mm]	=	Max. level of the measured liquid, $0 < h \leq H$
L	[mm]	=	Vertical distance from tank to measuring device input (low pressure)
I	[mm]	=	Vertical distance from condensing vessel to measuring device input (high pressure)
ρ_{vap}	[g/cm ³]	=	1.00, density of the water, 4 °C
ρ_{liq}	[g/cm ³]	=	Density of the measured liquid
g	[m/s ²]	=	9.81, gravitational acceleration

8 Configuration

Example:

Tank height	=	10 m
H	[mm]	= 7000
h	[mm]	= 6000
L	[mm]	= 8000
l	[mm]	= 100
Measuring range lower range value P5	[mbar]	= $([8000 - 100] + 7000) \times 1.00 \times 9.81 \times 0.01 = 1461.69$
Measuring range upper range value P6	[mbar]	= $(8000 - 100) \times 1.00 \times 9.81 \times 0.01 = 77.50$

With rotary knob operation (parameter level)

Swap from display level to parameter level, see chapter 7.3 "The level concept", Page 43

The following configuration steps should be taken:

P0	Density correction for ρ_{liq} : Density of the liquid to be measured, water at 4 °C = density 1
P1	Unit, e. g. mbar
P4	Attenuation: 0
P5	Measuring range lower range value: 1461.69, see example calculation
P6	Measuring range upper range value: 77.50, see example calculation
P14	Temperature measuring unit (only for displaying or as HART signal): °C
P16	Scaling start: scaling on the tank, e.g. in liters: 0
P17	Scaling end: scaling on the tank, e.g. in liters: 200
P19	Scaling unit: L (liters)

Swap from parameter level to display level

With JUMO setup program

Data transfer from the device

Editing Maintenance

The following dialog window opens:

Maintenance

Range

Measurement unit (P01): mH2O

Measuring start (P05): -0.004 mH2O

Measuring end (P06): 0.883 mH2O

Offset (P15): -0.210 mH2O

Characteristic

Damping (P04): 2.5 sec

Characteristic: Linear

Start of: 9.4 %

Scaling

Start (P16): 0.00

End (P17): 8.00

max. no. of decimal places (P18): Automatic

Unit (P19): l

Customized:

Date

Measuring point date: 01.01.2008 Today

OK Cancel

P01	Measuring unit, e.g. mbar
P04	Attenuation: 0
P05	Measuring range lower range value: 1461.69, see example calculation
P06	Measuring range upper range value: 77.50, see example calculation
P11	Characteristic line: linear
P14	Temperature measuring unit (only for displaying or as HART signal): °C
P16	Scaling start: scaling on the tank, e.g. in liters: 0
P17	Scaling end: scaling on the tank, e.g. in liters: 200
P18	Maximum decimal place: automatic
P19	Scaling unit: L (liters)

After entering the desired values: Data transfer to device

Zero point adjustment, set device to zero, e.g. if tank is empty

Extras **Extras: Online operation_sensor zero point calibration**



CAUTION!

No zero point adjustment may be performed for this configuration of the level measurement





9 Maintenance



NOTE!

If you notice an external fault (including a mechanical one), the device must be sent to the manufacturer to be repaired.

9.1 Overcoming errors and malfunctions

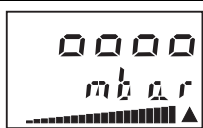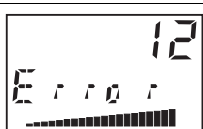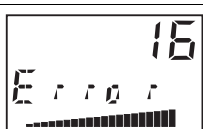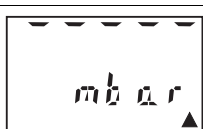Error/fault		Possible cause	Remedy
Display:	None	No voltage supply	Turn on the voltage supply
		Device faulty	Send the device to the supplier for repairs.
Display:		Overrange, overpressure	Bring the pressure back into the measuring range or adjust the measuring range.
Display:		Underrange, underpressure	
Display:		Pressure can no longer be displayed, overpressure	Adjust scaling or unit of measure
Display:		Pressure can no longer be displayed, underpressure	
Display:		The connection between sensor and electronic is broken.	a) Proof the plug connection at the back of the electronic module b) Send the device to the supplier for repairs.
Display:		An error was discovered in the electronics during the self test.	Send the device to the supplier for repairs.
Display:		Temperature sensor or pressure sensor faulty	Send the device to the supplier for repairs.
The rotary knob is not responding		Keyboard lock	Override keyboard lock
		Device faulty	Send the device to the supplier for repairs.

10 HART 7 specification

The device is in the version with HART protocol if it has a corresponding identification marking on the nameplate: 4 to 20 mA HART.

10.1 Device identification

Manufacturer	JUMO GmbH & Co. KG
Manufacturer ID	24716 (0x608C)
Device type	JUMO dTRANS p20
Device ID	58062 (0xE2CE)
HART Protocol Version	7
Device version	1
Number of device variables	3
Physical layers supported	FSK
Device category	Transmitter, without galvanic isolation

10.2 Variable codes

The process pressure transmitter supports three device variables and two dynamic device variables as well as the fixed measurands percentage value and milliampere value.

The following table describes the variable numbering that is required for commands 9, 54, and 107.

Variable code	Designation	Class	Unit
0	Customer scaled value	Depending on the current P19 unit: 0 = not classified 66 = flow 68 = level	Depending on the current P19 unit: 57, 73, 74, 75, 77, 78, 24, 17, 138, 28, 131, 19, 41, 43, 253 = diverse flow and level units
1	Drag indicator minimum	65 = pressure	Depending on the current P1 unit: 1, 2, 3, 4, 5, 6, 7, 8, 10, 12, 13, 237, 240 = diverse pressure units
2	Drag indicator maximum	65 = pressure	Depending on the current P1 unit: 1, 2, 3, 4, 5, 6, 7, 8, 10, 12, 13, 237, 240 = diverse pressure units
244	Percent	0 = not classified	57 = percent
245	Current	84 = current	39 = mA
246	Primary variable	65 = pressure	Depending on the current P1 unit: 1, 2, 3, 4, 5, 6, 7, 8, 10, 12, 13, 237, 240 = diverse pressure units
247	Secondary variable	64 = temperature	Depending on the current P14 unit: 32 = level C 33 = level F

10 HART 7 specification

10.3 HART commands

Command	Designation	Request data	Response data (plus 2 status bytes7)
Universal commands (0 to 30 as well as 38 and 48)			
0	Read unique identifier	None	22 bytes includes the long address
1	Read Primary Variable	None	1 byte unit code P 4 bytes pressure P as float
2	Read current and percent	None	4 bytes current as float 4 bytes percent as float
3	Read current and dynamic variables	None	4 bytes current as float 1 byte unit code P 4 bytes pressure P as float 1 byte unit code T 4 bytes temp T as float
6	Write polling address	1 byte short address 1 byte LoopCurr_active	As request
7	Read loop configuration	None	1 byte short address 1 byte LoopCurr_active
8	Read dynamic variable classifications	None	1 Byte Class PrimV 1 Byte Class SecV 1 Byte Class ThirdV 1 Byte Class QuadV
9	Read device variables with status	1 byte DevVarCode [1 byte DevVarCode] [1 byte DevVarCode] [1 byte DevVarCode]	1 byte ExtendedDevStatus 8 bytes info about DevVar [8 bytes info about DevVar] [8 bytes info about DevVar] [8 bytes info about DevVar] 4 bytes TimeStamp
11	Read unique identifier by TAG	6 bytes TAG no.	Same as command 0
12	Read message	None	24 bytes message
13	Read TAG + descriptor + date	None	6 bytes TAG no. 12 bytes description 3 bytes date
14	Read PV sensor info	None	3 bytes sensor man.no. 1 byte unit code sensor 4 bytes SensorMax as float 4 bytes SensorMin as float 4 bytes SensorSpan as float

10 HART 7 specification

Command	Designation	Request data	Response data (plus 2 status bytes7)
15	Read device info	None	1 byte alarm code 1 byte "P11 Chr" 1 byte unit code sensor 4 bytes "P6 RE" (range end) 4 bytes "P5 RS" (range start) 4 bytes "P4 sec" 1 byte code write lock 1 byte manufacturer code 1 byte AnalogChannelFlag
16	Read final assembly number	None	3 bytes assembly number
17	Write message	24 bytes message	As request
18	Write TAG + descriptor + date	6 bytes TAG no. 12 bytes description 3 bytes calibration date	As request
19	Write final assembly number	3 bytes assembly number	As request
20	Read long TAG	None	32 bytes long TAG
21	Read unique identifier by Long TAG	32 bytes long TAG	Same as command 0
22	Write long TAG	32 bytes long TAG	As request
Common Practice Commands (32 to 121, except 38 and 48)			
34	Write damping value	4 bytes "P4 sec"	As request
35	Write range values	1 byte unit code 4 bytes "P6 RE" 4 bytes "P5 RS"	As request
36	Set upper range value	None	None
37	Set lower range value	None	None
38	Reset configuration changed flag	2 bytes ConfigChCnt	2 bytes ConfigChCnt
40	Fixed current mode	4 bytes "P8 mA" (0 = Current generator mode off)	As request
41	Perform self test	None	None
42	Perform device reset	None	None
43	Set PV zero ("P7 Zero") Absent with absolute pressure sensors!	None	None
44	Write PV units	1 byte "P1 Uni"	As request
45	Trim loop current zero	4 bytes measured mA as float	As request
46	Trim loop current gain	4 bytes measured mA as float	As request

10 HART 7 specification

Command	Designation	Request data	Response data (plus 2 status bytes7)
48	Read additional device status	None	6 bytes dev specific status 1 byte extended dev status 1 byte dev operating mode 1 byte standardized status
54	Read device variable info	1 byte DevVarCode	27 bytes info about DevVar
59	Write number of response preambles	1 byte number of preambles	As request
103	Write burst period	1 byte BurstMsgNr 4 bytes BurstMinUpdTime 4 bytes BurstMaxUpdTime	As approved request; invalid values are automatically set to the nearest valid value
104	Write burst trigger	1 byte BurstMsgNr 1 byte BurstTrigMode 1 byte BurstTrigClass 1 byte BurstTrigUnits 4 bytes BurstTrigValue	As request
105	Read burst mode configuration	[1 byte BurstMsgNo]	1 byte BurstAktiv 1 byte BurstCmd 8 bytes BurstDevVarCode 1 byte BurstMsgNr 1 byte number BurstCfg 2 bytes BurstCmd16Bit 4 bytes BurstMinUpdTime 4 bytes BurstMaxUpdTime 1 byte BurstTrigMode 1 byte BurstTrigClass 1 byte BurstTrigUnits 4 bytes BurstTrigValue
107	Write burst device variables	1 byte DevVarCode [1 byte DevVarCode] [1 byte DevVarCode] [1 byte DevVarCode] [1 byte DevVarCode] [1 byte DevVarCode] [1 byte DevVarCode] [1 byte BurstMsgNo]	8 bytes BurstDevVarCode 1 byte BurstMsgNr
108	Write burst mode command number	2 bytes BurstCmd16Bit 1 byte BurstMsgNr	As request
109	Burst Mode Control	1 byte Burst_Active [1 byte BurstMsgNo]	As request

Command	Designation	Request data	Response data (plus 2 status bytes7)
Device-specific commands (128 to 253)			
128	Write offset	1 byte unit code 4 bytes "P15 OFF"	As request
129	Read offset	None	1 byte "P1 Uni" 4 bytes "P15 OFF"
130	Reset min/max value	1 byte both/min/max	As request
131	Read min/max value	None	4 bytes DragIndicatorMax 4 bytes DragIndicatorMin In "P1 Uni"
132	Write output mode	1 byte "P11 Chr"	As request
133	Read output mode	None	1 byte "P11 Chr"
134	Write error mode	1 byte "P9 Err"	As request
135	Read error mode	None	1 byte "P9 Err"
136	Write keyboard mode	1 byte "P10 Key"	As request
137	Read keyboard mode	None	1 byte "P10 Key"
138	Write temperature unit	1 byte "P14 Uni"	As request
141	Read square root start	None	4 bytes "P12 %"
142	Write square root start	4 bytes "P12 %"	As request
147	Write Scale_Beg + Scale_End	4 bytes "P17 SCE" 4 bytes "P16 SCS"	As request
148	Read Scale_Beg + Scale_End	None	4 bytes "P17 SCE" 4 bytes "P16 SCS"
149	Write Scale_Unit	1 byte unit code for "P19 %"	As request
151	Write Scale_Comma	1 byte "P18 SCD" [Auto/0/1/2/3]	As request
152	Read Scale_Comma	None	1 byte "P18 SCD" [Auto/0/1/2/3]

10.4 Burst mode commands

The burst mode is an operating mode in which the device sends telegrams independently without an inquiry. It is configured with the setup program or with the commands 103 to 109.

The following commands are available:

Command	Designation
1	Primary variable
2	Current and percent
3	Current and dynamic variables
9	Device variables
48	Additional device status

10 HART 7 specification

10.5 Performance data

The parameters that are listed below determine the performance of the process pressure transmitter.

Telegram length

The maximum telegraph length of up to 68 bytes occurs with this HART 7 device with command 9 (39 bytes payload including 2 status bytes).

Operating modes

The process pressure transmitter has three output operating modes:

- Standard mode (single mode): current proportional to measurand
- Current generator mode: current is adjusted through HART command 40 or through adjustment parameter "P8 mA"
- Constant current mode (multidrop mode): current is set to constant 4 mA in bus operation (HART command 6)

Write protection

The device can be protected against unintentional overwriting of a parameter through a keyboard lock.

- At the device through parameter "P10 key"
- In the setup program under "Further maintenance data - Inhibit (P10)"
- Via HART command 136 and 137

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



**MORE THAN SENSORS
AND AUTOMATION**

EU-Konformitätserklärung

EU declaration of conformity / Déclaration UE de conformité

Dokument-Nr.

Document No. / Document n°.

CE 601

Hersteller

Manufacturer / Etabli par

JUMO GmbH & Co. KG

Anschrift

Address / Adresse

Moritz-Juchheim-Straße 1, 36039 Fulda, Germany

Produkt

Product / Produit

Name

Name / Nom

Typ

Type / Type

Typenblatt-Nr.

Data sheet no. / N°

Document

d'identification

JUMO dTRANS p20 DELTA

403022

403022

Produktbeschreibung

Product description / Description du produit

Industrial pressure transmitter.

Wir erklären in alleiniger Verantwortung, dass das bezeichnete Produkt die Anforderungen der Europäischen Richtlinien erfüllt.

We hereby declare in sole responsibility that the designated product fulfills the requirements of the European Directives.

Nous déclarons sous notre seule responsabilité que le produit remplit les Directives Européennes.

Dokument-Nr.

Document No. / Document n°.

CE 601

EU-Konformitätserklärung

Seite: 1 von 5

11 Certificates

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



MORE THAN SENSORS
AND AUTOMATION

1. Richtlinie

Directive / Directive

Name

EMC 2014/30/EU

Name / Nom

Konformitätsbewertungsverfahren

Mod. A

Conformity assessment procedure /

Procédure d'évaluation de la conformité

Datum der Erstanbringung des CE-Zeichens auf dem Produkt

Date of first application of the CE mark to the product /

Date de 1ère application du sigle sur le produit

Angewendete Normen/Spezifikationen

Standards/Specifications applied / Normes/Spécifications appliquées

Referenz

Reference / Référence

Ausgabe

Edition / Édition

Bemerkung

Comment / Remarque

EN 61326-1

2013

EN 61326-2-3

2013

EN 61326-1

2021

EN 61326-2-3

2021

Gültig für Typ

Valid for Type / Valable pour le type

403022/...

2. Richtlinie

Directive / Directive

Name

ATEX 2014/34/EU

Name / Nom

Konformitätsbewertungsverfahren

Mod. B+D

Conformity assessment procedure /

Procédure d'évaluation de la conformité

Datum der Erstanbringung des CE-Zeichens auf dem Produkt

Date of first application of the CE mark to the product /

Date de 1ère application du sigle sur le produit

Dokument-Nr.

Document No. / Document n°.

CE 601

EU-Konformitätserklärung

Seite: 2 von 5

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



**MORE THAN SENSORS
AND AUTOMATION**

Angewendete Normen/Spezifikationen

Standards/Specifications applied / Normes/Spécifications appliquées

Referenz

Reference / Référence

Ausgabe

Edition / Édition

Bemerkung

Comment / Remarque

EN 60079-0

2018

EN 60079-11

2012

EN 60079-26

2015

Gültig für Typ

Valid for Type / Valable pour le type

403022/*-1-...

2.1 EU-Baumusterprüfbescheinigung

EU type examination certificate / Certificat d'examen de type UE

Zertifikatsnummer

Certificate number / Numéro de certificat

SEV 09 ATEX 0138 X

Notifizierte Stelle

Notified Body / Organisme notifié

Eurofins Electric & Electronic Product Testing
AG, Luppmenstrasse 3, 8320 Fehraltdorf,
Switzerland

Gültig für Typ

Valid for Type / Valable pour le type

403022/*-1-...

Qualitätssicherung bezogen auf den Produktionsprozess

Quality assurance of the production process / L'assurance de la qualité de la production

Zertifikatsnummer

Certificate number / Numéro de certificat

Available on request

Notifizierte Stelle

Notified Body / Organisme notifié

BUREAU VERITAS Consumer Products
Services Germany GmbH, Wilhelm-Hennemann-
Straße 8, 19061 Schwerin, Germany

Kennnummer

Identification no. / N° d'identification

2004

Dokument-Nr.

Document No. / Document n°.

CE 601

EU-Konformitätserklärung

Seite: 3 von 5

11 Certificates

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



MORE THAN SENSORS
AND AUTOMATION

3. Richtlinie

Directive / Directive

Name

RoHS 2011/65/EU

Name / Nom

Konformitätsbewertungsverfahren

Mod. A

Conformity assessment procedure /

Procédure d'évaluation de la conformité

Datum der Erstanbringung des CE-Zeichens auf 2017

dem Produkt

Date of first application of the CE mark to the product /

Date de 1ère application du sigle sur le produit

Angewendete Normen/Spezifikationen

Standards/Specifications applied / Normes/Spécifications appliquées

Referenz

Reference / Référence

Ausgabe

Edition / Édition

Bemerkung

Comment / Remarque

VDK Umweltrelevante Aspekte V1

bei der Produktentwicklung und

-gestaltung

Gültig für Typ

Valid for Type / Valable pour le type

403022/...

Dokument-Nr.

Document No. / Document n°.

CE 601

EU-Konformitätserklärung

Seite: 4 von 5

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



**MORE THAN SENSORS
AND AUTOMATION**

Aussteller

Issued by / Etabli par

JUMO GmbH & Co. KG

Ort, Datum

Place, date / Lieu, date

Fulda, 2025-11-24

Rechtsverbindliche Unterschriften

Legally binding signatures /

Signatures juridiquement valable

Bereichsleiter Globales Produkt- und
Branchenmanagement, Marketing
ppa. Michael Diegelmann

ppa. Michael Diegelmann

Bereichsleiter Globale Entwicklung
ppa. Harald Schöppner

 
ppa. Harald Schöppner

11 Certificates



EU-Type Examination Certificate

- (1)
- (2) Equipment or protective system intended for use in potentially explosive atmospheres - **Directive 2014/34/EU**
- (3) Certificate number: **SEV 09 ATEX 0138 X**
- (4) Product: Process pressure transmitter dTRANS p20 Type 403025, JUMO dTRANS p20 DELTA Type 403022
- (5) Manufacturer: JUMO GmbH & Co. KG
- (6) Address: Moritz-Juchheim-Strasse 1, 36039 Fulda, Germany
- (7) The equipment and any acceptable variation thereto is specified in the schedule to this certificate and the documents therein referred to.
- (8) Eurofins, notified body No. 1258, in accordance with article 17 of Directive 2014/34/EU of the European parliament and of the council, dated 26 February 2014, certifies that this product has been found to comply with the essential health and safety requirements relating to the design and construction of products intended for use in potentially explosive atmospheres given in Annex II to the Directive.
The examination and test results are recorded in confidential report no 22CH-01294.X07
- (9) Compliance with the essential health and safety requirements has been assured by compliance with:
EN IEC 60079-0:2018
EN 60079-11:2012
EN 60079-26:2015
- Except in respect of those requirements listed at item 18 of the schedule.
- (10) If the sign «X» is placed after the certificate number, it indicates that the product is subjected to special conditions for safe use specified in the schedule to this certificate. The sign «U» is placed after the certificate number. It indicates that this certificate must not be mistaken for a certificate intended for an equipment or protective system. This partial certification may be used as a basis for certification of an equipment or protective system.
- (11) This EU type examination certificate relates only to design and construction of the specified product. Further requirements of this directive apply to the manufacturing process and supply of this product. These are not covered by this certificate.
- (12) The marking of the product shall include the following:



Eurofins Electric & Electronic Product Testing AG
Notified Body ATEX

Munira Gamma
Product Certification

www.eurofins.ch

Fehraltorf, 2023-11-09

Issue: 6

Page 1 of 3

T8a_V01



(13)

Appendix

(14)

EU-Type Examination Certificate no. SEV 09 ATEX 0138 X

(15) **General product information**

The process pressure transmitter JUMO dTRANS p20 type 403025 or JUMO dTRANS p20 DELTA type 403022 serves for converting a physical measured quantity (pressure) into a standard electrical signal (4 ... 20 mA).

The device is intended for use within potentially explosive atmospheres.

The stainless steel enclosure of the pressure transmitter has the type of protection IP 66 according to EN 60529. The pressure transmitter can be housed in three different types of enclosure.

The process pressure transmitter is attached to tanks or pipes by means of a process connection.

The pressure measuring cell serves for zone separation and is made of stainless steel, Hastelloy®, Monel, tantalum or titanium. This zone separation takes place by means of the diaphragm and subsequent flashback safe gap or the flashback safe gaps can also be integrated directly in the process connection upstream of the pressure measuring cell/pressure sensor.

Classification of installation and use:
Ingress protection:

fixed installation
IP66

Marking:

For type JUMO dTRANS p20 Type 403025:



II 1/2G Ex ia IIC T6...T3 Ga/Gb

II 1/2D Ex ia IIIC T105 °C Da/Db

For type JUMO dTRANS p20 DELTA Type 403022:



II 1G Ex ia IIC T4 Ga

II 1D Ex ia IIIC T200/125 °C Da

Rating:

Input and supply circuits:

with type of protection intrinsic safety Ex ia IIC

Only for connection to certified intrinsically safe circuit.

Maximum values:

U _i	≤ 28 V	
I _i	≤ 115 mA	
P _i	≤ 750 mW	
C _i	= 6 nF	(effective internal capacitance)
L _i	= 105 µH	(effective internal inductance)

or

Input and supply circuits:

with type of protection intrinsic safety Ex ia IIIC

Only for connection to certified intrinsically safe circuit.

Maximum values:

U _i	≤ 28 V	
I _i	≤ 115 mA	
P _i	≤ 750 mW	
C _i	= 6 nF	(effective internal capacitance)
L _i	= 105 µH	(effective internal inductance)

(16) **Report number**

22CH-01294.X07



11 Certificates



(17) **"Special conditions for safe use" / "Schedule of limitations"**

The intrinsically safe circuit must be limited by overvoltage category I as defined in IEC 60664-1 respectively the circuits must be supplied exclusively from a certified intrinsically safe power source with the protection level "ia".

Process pressure transmitter **JUMO dTRANS p20 type 403025** see table below for the relation between maximum permissible ambient temperature in area of electronic enclosure, measurement substances and temperature classes:

Class of temperature	T6	T5	T4	T3
Maximum permissible ambient temperature in the top of enclosure with electronic (°C)	-50 to +50	-50 to +65	-50 to +85	-50 to +85
highest permissible temperature of substance (°C)	+60	+70	+115	+175

Process pressure transmitter **JUMO dTRANS p20 DELTA type 403022** see table below for relation between maximum permissible ambient temperature in area of electronic enclosure, measurement substances and temperature classes:

Class of temperature	T4
Maximum permissible ambient temperature in the top of enclosure with electronic (°C)	-50 to +60
highest permissible temperature of substance (°C)	+100

Process pressure transmitter **JUMO dTRANS p20 type 403025** see table below for the relation between maximum permissible ambient temperature in area of electronic enclosure, measurement substances and maximum surface temperature:

Surface temperature	T105 °C
Maximum permissible ambient temperature in the top of enclosure with electronic (°C)	-50 to +60
highest permissible temperature of substance (°C)	+100

Process pressure transmitter **JUMO dTRANS p20 DELTA type 403022** see table below for the relation between maximum permissible ambient temperature in area of electronic enclosure, measurement substances and maximum surface temperature:

Surface temperature	T ₂₀₀ 125 °C
Maximum permissible ambient temperature in the top of enclosure with electronic (°C)	-50 to +60
highest permissible temperature of substance (°C)	+100

Between -40 °C to -50 °C the equipment must be permanently in operation and the cover with view window must be protected against to mechanical hit or impact.

(18) **Essential health and safety requirements**

In addition to the essential health and safety requirements (EHSRs) covered by the standards listed at item 9, the following are considered relevant to this product, and conformity is demonstrated in the report:

Clause	Subject
None	

(19) **Drawings and Documents**

See test report "Manufacturer's Documents"



JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



MORE THAN SENSORS
AND AUTOMATION

UK Declaration of Conformity

Document No. UK 196
Manufacturer JUMO GmbH & Co. KG
Address Moritz-Juchheim-Straße 1, 36039 Fulda, Germany

Product
Name JUMO dTRANS p20 DELTA Type 403022 Data sheet no. 403022

Product description
Differential pressure transmitter.

We hereby declare in sole responsibility that the designated product fulfills the requirements of the statutory instruments.

1. Statutory instrument

Name Electromagnetic Compatibility Regulations 2016
No. 1091
Conformity assessment procedure Mod. A
Date of first application of the UKCA mark to the product 2023

Standards/Specifications applied

Reference	Edition	Comment
EN 61326-1	2013	
EN 61326-2-3	2013	
EN 61326-1	2021	
EN 61326-2-3	2021	

Valid for Type
403022/...

11 Certificates

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



**MORE THAN SENSORS
AND AUTOMATION**

2. Statutory instrument

Name The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 No. 3032

Conformity assessment procedure Mod. A

Date of first application of the UKCA mark to the product 2023

Standards/Specifications applied

Reference	Edition	Comment
[VDK] Umweltrelevante Aspekte V1 bei der Produktentwicklung und -gestaltung		

Valid for Type
403022/...

3. Statutory instrument

Name The Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016 No. 1107

Conformity assessment procedure Mod. B+D

Date of first application of the UKCA mark to the product 2023

Valid for Type
403022/*-1-...

3.1 Type examination certificate

Certificate number EPS 22 UKEX 1 369 X Revision 1

Designated body Bureau Veritas Consumer Products Services United Kingdom Limited, 31 Kingsland Grange, Woolston, Warrington, Cheshire, WA1 4RW

JUMO GmbH & Co. KG

Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Tel.: +49 661 6003-0
Fax: +49 661 6003-500

E-Mail: mail@jumo.net
Internet: www.jumo.net



**MORE THAN SENSORS
AND AUTOMATION**

Standards/Specifications applied

Reference	Edition	Comment
EN 60079-0	2018	
EN 60079-11	2012	
EN 60079-26	2015	

Quality assurance of the production process

Certificate number	Available on request.
Designated body	Bureau Veritas Consumer Products Services United Kingdom Limited, 31 Kingsland Grange, Woolston, Warrington, Cheshire, WA1 4RW
Identification no.	8507

Issued by	JUMO GmbH & Co. KG
Place, date	Fulda, 2025-12-01
Legally binding signatures	Head of Global Product and Industry Management, Marketing ppa. Michael Diegelmann

ppa. Michael Diegelmann

Head of Global Development
ppa. Harald Schöppner

ppa. Harald Schöppner

11 Certificates



UK - Type Examination Certificate

- (1)
- (2) Equipment and protective systems intended for use in potentially explosive atmospheres – UKSI 2016:1107 (as amended)
- (3) UK - Type Examination Certificate Number
- EPS 22 UKEX 1 369 X** **Revision 1**
- (4) Equipment: Process pressure transmitter
JUMO dTrans p20 type 403025 or
JUMO dTrans p20 DELTA type 403022
- (5) Manufacturer: JUMO GmbH & Co. KG
- (6) Address: Moritz-Juchheim-Strasse 1
36039 Fulda
Germany
- (7) This equipment and any acceptable variation thereto are specified in the annex to this certificate and the documentation therein referred to.
- (8) Bureau Veritas Consumer Products Services United Kingdom Limited, approved body No. 8507 in accordance with UKSI 2016:1107 (as amended) Part 4, certifies that this equipment has been found to comply with the essential health and safety requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Schedule 1 of UKSI 2016:1107 (as amended). The examination and test results are recorded in the confidential documentation under the reference number 22TH0506.
- (9) Compliance with the essential health and safety requirements has been assured by compliance with:
- EN IEC 60079-0:2018 EN 60079-11:2012 EN 60079-26:2015**
- (10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the annex to this certificate.
- (11) This UK - Type Examination Certificate relates only to the design and construction of the specified equipment in accordance with UKSI 2016:1107 (as amended). Further requirements apply to the manufacture of this equipment and its placing on the market. Those requirements are not covered by this certificate.
- (12) The marking of the equipment shall include the following:

 II 1/2G Ex ia IIC T6...T3 Ga/Gb (for type 403025)
II 1/2D Ex ia IIIC T105°C Da/Db

 II 1G Ex ia IIC T4 Ga (for DELTA type 403022)
II 1D Ex ia IIIC T200/125°C Da



Certification department of explosion protection

Warrington, 11-06-2024

N. Wilkinson
Natalie Wilkinson

Certificates without signature and seal are void. This certificate is allowed to be distributed only if not modified. Extracts or modifications must be authorized by Bureau Veritas Consumer Products Services United Kingdom Limited. EPS 22 UKEX 1 369 X, Revision 1.

Bureau Veritas Consumer Products Services United Kingdom Limited
<https://www.bureauveritas.co.uk/consumer-products-services>
+44 (0) 1925 854 360

Registered Office: 4b Olympic Way
Birchwood, Warrington, WA2 0YL

Registered in England & Wales
Company Number: 00852439

ZERT-0003-GBR-ZE-EX-V03 / TEMP-0005-GBR-ZE-EX-V01

1/4



(13)

Annex

(14) **UK - Type Examination Certificate EPS 22 UKEX 1 369 X**

Revision 1

(15) Description of equipment:

The process pressure transmitter JUMO dTRANS p20 type 403025 or JUMO dTRANS p20 DELTA type 403022 serves for converting a physical measured quantity (pressure) into a standard electrical signal (4...20 mA). The device is intended for use within potentially explosive atmospheres. The stainless-steel enclosure of the pressure transmitter has the type of protection IP 66 according to IEC 60529. The pressure transmitter can be housed in three different types of enclosure.

The process pressure transmitter JUMO dTRANS p20 type 403025 or JUMO dTRANS p20 DELTA type 403022 is attached to tanks or pipes by means of a process connection. The pressure measuring cell serves for zone separation and is made of stainless steel, Hastelloy®, Monel, tantalum or titanium. This zone separation takes place by means of the diaphragm and subsequent flashback safe gap or the flashback safe gaps can also be integrated directly in the process connection upstream of the pressure measuring cell/pressure sensor.

Electrical data:

Input and supply circuits

with type of protection intrinsic safety Ex ia IIC
Only for connection to certified intrinsically safe circuits.
Maximum values:
 $U_i \leq 28 \text{ V}$
 $I_i \leq 115 \text{ mA}$
 $P_i \leq 750 \text{ mW}$
 $C_i = 6 \text{ nF}$ (effective internal capacitance)
 $L_i = 105 \text{ } \mu\text{H}$ (effective internal inductance)

Or

Input and supply circuits

with type of protection intrinsic safety Ex ia IIC
Only for connection to certified intrinsically safe circuits.
Maximum values:
 $U_i \leq 28 \text{ V}$
 $I_i \leq 115 \text{ mA}$
 $P_i \leq 750 \text{ mW}$
 $C_i = 6 \text{ nF}$ (effective internal capacitance)
 $L_i = 105 \text{ } \mu\text{H}$ (effective internal inductance)

Rated ambient temperature range:

For JUMO dTRANS p20 Typ 403025:

Ambient temperature ¹⁾:

T6: -40 °C ...+50 °C
T5: -40 °C ...+65 °C
T4: -40 °C ...+85 °C
T3: -40 °C ...+85 °C ³⁾
T105 °C: -40 °C ...+60 °C ³⁾

Extended ambient temperature with additional type 681 ¹⁾ ²⁾:

T6: -50 °C ...+50 °C
T5: -50 °C ...+65 °C
T4: -50 °C ...+85 °C
T3: -50 °C ...+85 °C ³⁾
T105 °C: -50 °C ...+60 °C ³⁾

Certificates without signature and seal are void. This certificate is allowed to be distributed only if not modified. Extracts or modifications must be authorized by Bureau Veritas Consumer Products Services United Kingdom Limited, EPS 22 UKEX 1 369 X, Revision 1.

Bureau Veritas Consumer Products Services United Kingdom Limited
<https://www.bureauveritas.co.uk/consumer-products-testing>
+44 (0) 1925 854 360

Registered Office: 4b Olympic Way
Birchwood, Warrington, WA2 0YL

Registered in England & Wales
Company Number: 00852439

ZERT-0003-GBR-ZE-EX-V03 / TEMP-0005-GBR-ZE-EX-V01

2/4

11 Certificates



UK - Type Examination Certificate EPS 22 UKEX 1 369 X

Revision 1

For JUMO dTRANS p20 DELTA Typ 403022:

Ambient temperature:

T4: -50 °C ... +60 °C¹⁾2)

T105 °C: -50 °C ... +60 °C³⁾

¹⁾ Restricted functions if lower than -20 °C: Stationary use, increased risk of cable break, display without function. Lower than -30 °C: the equipment is not possible to handle.

²⁾ Between -40 °C to -50 °C the equipment must be permanently in operation and the cover with view window must be protected against to mechanical hit or impact. Please contact JUMO.

³⁾ Only for high temperature version (measurement substance temperature 2).

(16) Reference number: 22TH0506

(17) Special conditions for safe use:

1. The intrinsically safe circuit must be limited to overvoltage category I as defined in IEC 60664-1 and the circuits must be supplied exclusively from a certified intrinsically safe power source with the protection level "ia".

2. Assignment between the maximum permissible ambient temperature in the electronics enclosure, measuring temperature and temperature class for the JUMO dTRANS p20 type 403025 process pressure transmitter is shown in the following table:

Temperature class	T6	T5	T4	T3
Maximum permissible temperature in top part of enclosure with electronics (°C)	-50 °C ... +50 °C	-50 °C ... +65 °C	-50 °C ... +85 °C	-50 °C ... +85 °C
Maximum permissible measuring temperature	+60 °C	+70 °C	+115 °C	+175 °C

3. Assignment between the maximum permissible ambient temperature in the electronics enclosure, measuring temperature and temperature class for the JUMO dTRANS p20 DELTA type 403022 process pressure transmitter is shown in the following table:

Temperature class	T4
Maximum permissible temperature in top part of enclosure with electronics (°C)	-50 °C ... +60 °C
Maximum permissible measuring temperature	+100 °C

Certificates without signature and seal are void. This certificate is allowed to be distributed only if not modified. Extracts or modifications must be authorized by Bureau Veritas Consumer Products Services United Kingdom Limited. EPS 22 UKEX 1 369 X, Revision 1.

Bureau Veritas Consumer Products Services United Kingdom Limited
<https://www.bureauveritas.co.uk/consumer-products-testing>
 +44 (0) 1925 854 360

Registered Office: 4b Olympic Way
 Birchwood, Warrington, WA2 0YL

Registered in England & Wales
 Company Number: 00852439

ZERT-0003-GBR-ZE-EX-V03 / TEMP-0005-GBR-ZE-EX-V01

3/4


UK - Type Examination Certificate EPS 22 UKEX 1 369 X
Revision 1

4. Assignment between the maximum permissible ambient temperature in the electronics enclosure, measuring temperature and maximum surface temperature for the **JUMO dTRANS p20 type 403025** process pressure transmitter is shown in the following table:

Surface temperature (°C)	T105°C
Maximum permissible temperature in top part of enclosure with electronics (°C)	-50 °C ... +60 °C
Maximum permissible measuring temperature	+100 °C

5. Assignment between the maximum permissible ambient temperature in the electronics enclosure, measuring temperature and maximum surface temperature for the **JUMO dTRANS p20 DELTA type 403022** process pressure transmitter is shown in the following table:

Surface temperature (°C)	T200125°C
Maximum permissible temperature in top part of enclosure with electronics (°C)	-50 °C ... +60 °C
Maximum permissible measuring temperature	+100 °C

6. In the temperature range of -40 °C -50 °C the lid with inspection glass of the appliance has to be additionally protected against mechanical impact- respectively collision effect.

(18) Essential health and safety requirements:

Met by compliance with standards.



Certification department of explosion protection

Warrington, 11-06-2024

Certificates without signature and seal are void. This certificate is allowed to be distributed only if not modified. Extracts or modifications must be authorized by Bureau Veritas Consumer Products Services United Kingdom Limited, EPS 22 UKEX 1 369 X, Revision 1.

Bureau Veritas Consumer Products Services United Kingdom Limited
<https://www.bureauveritas.co.uk/consumer-products-testing>
 +44 (0) 1925 854 360

Registered Office: 4b Olympic Way
 Birchwood, Warrington, WA2 0YL

Registered in England & Wales
 Company Number: 00852439

ZERT-0003-GBR-ZE-EX-V03 / TEMP-0005-GBR-ZE-EX-V01

4/4

20 有毒有害物质或元素 Hazardous substances							
部件名称							
Product group: 403022							
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳 Housing (Gehäuse)		○	○	○	○	○	○
过程连接 Process connection (Prozessanschluss)		X	○	○	○	○	○
-螺母 Nut (Mutter)		○	○	○	○	○	○
螺钉 Screw (Schraube)		○	○	○	○	○	○
本表格依据 SJ/T 11364-2014的规定编制。 (This table is prepared in accordance with the provisions of SJ/T 11364-2014.) O : 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 (O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.) X : 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。 (X: Indicates that said hazardous substance contained in one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.)							



JUMO GmbH & Co. KG

Street address:
Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Delivery address:
Mackenrodtstraße 14
36039 Fulda, Germany

Postal address:
36035 Fulda, Germany

Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO UK LTD

JUMO House
Temple Bank, Riverway
Harlow, Essex, CM20 2DY, UK

Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6724 Joy Road
East Syracuse, NY 13057, USA

Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com

