

JUMO hydroTRANS S40

Humidity and temperature transmitter
with optional CO₂ module, rod version



Operating Manual



90704400T90Z001K000

V3.00/EN/00767207/2026-05-27

Further information and downloads



qr-907044-en.jumo.info

Table of contents

1	About this documentation	5
1.1	Purpose	5
1.2	Target group	5
1.3	Definition of terms	5
1.4	Trademark information	5
1.5	Symbols	5
2	Safety	6
2.1	Intended use	6
2.2	Qualification of personnel	6
2.3	Transport and storage damage	6
2.4	Disturbances	6
2.4.1	Climatic conditions	6
2.4.2	Volatile organic compounds (VOCs)	6
2.4.3	Stabilisation time	6
3	Description	7
3.1	Structure	7
3.2	Functions	7
3.3	Nameplate	8
3.4	Approval marks and certificates	8
3.5	Scope of delivery	8
4	Technical data	9
4.1	Electrical safety	9
4.2	Electrical data	9
4.3	Inputs	10
4.3.1	Measurands	10
4.4	Outputs	11
4.4.1	Analog outputs	11
4.5	Interfaces	12
4.5.1	RS485	12
4.6	Environmental influences	12
4.7	Mechanical features	13
4.8	Dimensions	13
5	Mounting	14
6	Electrical connection	15

Table of contents

6.1	Preparing the electrical connection	15
6.2	Connection elements	15
6.2.1	Terminal assignment	15
6.3	Connection diagram	16
6.4	Connecting the device	17
7	Configuration	18
7.1	File info	18
7.2	Device version	18
7.3	System data	18
7.4	Display	18
7.5	Measurand correction	19
7.6	Analog outputs	20
7.7	Serial interface	23
7.8	Online parameters	23
8	Modbus address tables	24
8.1	Version and fabrication number	24
8.2	Configuration	24
8.2.1	System data	24
8.2.2	Measurand correction	25
8.2.3	Serial interface	25
8.2.4	Analog inputs	25
8.2.5	Calculated values	26
8.2.6	Error messages Modbus	26
9	Maintenance and cleaning	27
9.1	Maintenance	27
9.1.1	Replacing filter cap	27
9.2	Cleaning	27
10	Shutdown	28
10.1	Dismounting	28
10.2	Returns	28
10.3	Disposal	28
11	Accessories	29
12	Open-source software	30
13	Certificates	31

1 About this documentation

1.1 Purpose

This documentation is part of the device and includes all information to ensure that it is used safely and as intended across all phases of the product lifecycle.

If you do not follow the documentation and safety information, this may result in risk to life and damage to property due to improper use.

- Read and follow the documentation and the safety information and warnings.
- Store the document in its entirety, in an easily accessible location, and so that it can be read in full at all times.
- Contact the manufacturer if you have any questions about the device and documentation.

1.2 Target group

This documentation is intended to be used by personnel for plant mechanical systems for sanitary, heating and air-conditioning technology, electrical engineering or mechanical and plant engineering throughout all phases of the product life cycle.

1.3 Definition of terms

Use in the documentation	Definition
Device, product	Humidity and temperature transmitter
CO ₂ module, CO ₂ sensor	Carbon dioxide (CO ₂) as a measurand
End device	Smartphone, tablet, laptop, PC etc.
Measured value	Process value
Product lifecycle	Overall consideration of Product identification, acceptance of the goods, storage, mounting, connection, operation, troubleshooting, maintenance to disposal

1.4 Trademark information

All trademarks and trade and company names used are the property of their rightful owners or authors.

1.5 Symbols



NOTE!

This symbol is used in tables and indicates that further information is provided after the table.



REFERENCE!

This symbol refers to **further information** in other sections, chapters, or other manuals.

2 Safety

2.1 Intended use

The humidity and temperature transmitter monitors outside air that enters into buildings and production processes.

The device is suitable for mounting in weather-proofed ventilation ducts and lines.

The documentation is part of the device. The device is only intended for use according to this documentation.

2.2 Qualification of personnel

The personnel deployed must meet the following requirements in all phases of the product lifecycle:

- Members of personnel have at least completed training in the field of plant mechanical systems for sanitary, heating, and air-conditioning technology or have completed a degree in electrical engineering or mechanical and plant engineering.
- Members of personnel are familiar with this documentation and the safety information and warnings it contains.

2.3 Transport and storage damage

The device can be damaged if it is insufficiently protected during transport and/or improperly stored.

- Transport the device protected from moisture and dirt in shockproof packaging.
- Protect all electrical and mechanical connections from damage.
- Observe the admissible storage temperature of the device.
- Store the device in a dry and dust-free environment.

2.4 Disturbances

2.4.1 Climatic conditions

External factors affecting the electronic components, particularly the sensor element, can lead to measurement deviations. Appropriate measures reduce the influence of disturbances and ensure measurement accuracy:

- Protect the device from external heat sources.
- Protect the device from direct sunlight.
- Protect the device from strong drafts.

A measurement or process value is corrected using an offset.

⇒ "Measurand correction ", Page 25

2.4.2 Volatile organic compounds (VOCs)

High concentrations in the ambient air and prolonged exposure of the sensor can lead to measurement deviations. Appropriate measures prevent damage to the sensor and ensure measurement accuracy:


- Adequate ventilation of the mounting site

2.4.3 Stabilisation time

After the initial start-up of the device, the sensor element adapts to the environmental conditions at the installation site. Measurement deviations may occur during this stabilisation time. Measurement accuracy is ensured by taking appropriate measures:

- Observe the stabilisation time of at least 60 h.

3.1 Structure

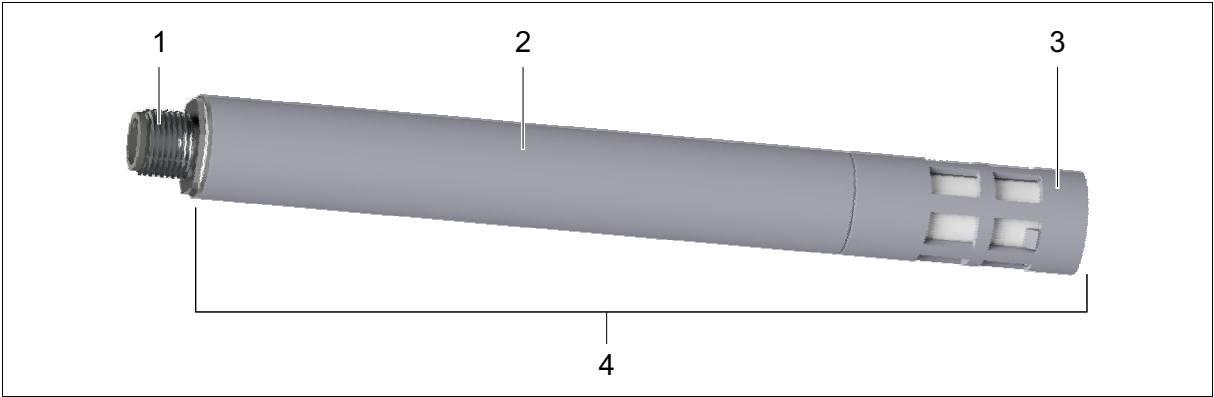

- 1

M12 plug connection (5-pole)
- 3

Filter cap with plastic membrane filter (standard)
- 2

Housing
- 4

Probe

The filter cap with plastic membrane filter can be replaced with a plastic sinter filter.

3.2 Functions


Measurand	Function principle
Relative humidity	Capacitive measurement technology
Temperature	Semiconductor measurement technology
Carbon dioxide (CO ₂)	Photoacoustic measurement technology

The process values of the measurands can be issued to a higher-level system via the interfaces or analog outputs.

3 Description

3.3 Nameplate

Example:

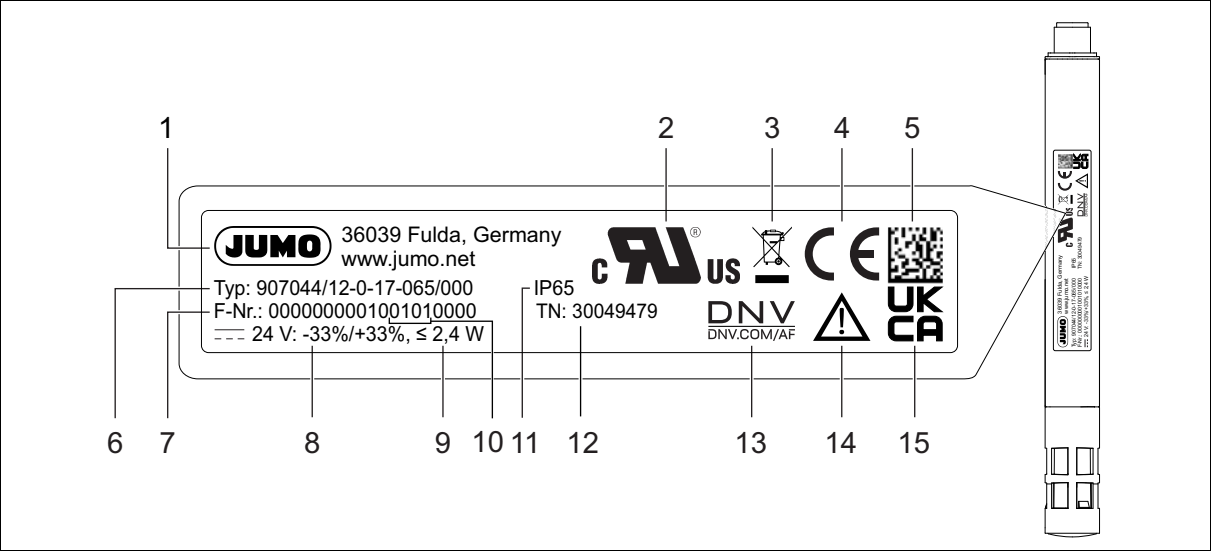

- | | | | |
|---|---------------------------|----|---|
| 1 | Manufacturer and address | 9 | Power consumption |
| 2 | UL identification marking | 10 | Date of manufacturer (YYww) |
| 3 | Disposal | 11 | Protection type according to DIN EN 60529 |
| 4 | CE identification marking | 12 | Part no. |
| 5 | Data Matrix code | 13 | DNV identification marking |
| 6 | Order code | 14 | Observe device documentation! |
| 7 | Fabrication number | 15 | UKCA identification marking |
| 8 | Voltage supply (DC) | | |

3.4 Approval marks and certificates



Certificates for approved device versions are available for download on the manufacturer's website.

3.5 Scope of delivery

Device in the ordered version
Brief instructions

4.1 Electrical safety

Requirements	DIN EN 61010-1 The device must be equipped with an electrical circuit that meets the requirements for "Limited-energy circuits".
--------------	---

4.2 Electrical data

Device version with analog output

Voltage supply	DC 24 V SELV, PELV
Analog output	
0 to 10 V	DC 24 V, -33 %/+33 %
4 to 20 mA	DC 24 V, -54 %/+33 %
Power consumption	≤ 2.4 W
Protection rating	DIN EN 61140, Class III (protective low voltage)
Electrical connection	
Connection elements	M12 plug connection
Connecting cable	
Temperature resistance	≥ 80 °C
For UL applications	
Approved cable ^a	CYJV2/8, CYJV/7, PVVA2/8, PVVA/7

^a The cables must be suitable for the voltage, current and temperature used.

Device version with RS485

Voltage supply	DC 24 V SELV, PELV
RS485 interface	DC 24 V, -58 %/+33 %
Power consumption	≤ 2.4 W
Protection rating	DIN EN 61140, Class III (protective low voltage)
Electrical connection	
Connection elements	M12 plug connection
Connecting cable	
Temperature resistance	≥ 80 °C
For UL applications	
Approved cable ^a	CYJV2/8, CYJV/7, PVVA2/8, PVVA/7

^a The cables must be suitable for the voltage, current and temperature used.

4 Technical data

4.3 Inputs

4.3.1 Measurands

Relative humidity

Measuring range	0 to 100 % RH
With CO ₂ module	0 to 95 % RH
Accuracy	
Stabilization time after initial start-up	≥ 60 h
Typical	±2.0 % RH
Max.	±2.5 % RH
Reference conditions	
Humidity	≥ 30 % RH
Sampling rate	1 s

Temperature

Measuring range	-40 to +80 °C
With CO ₂ module	-10 to +60 °C
Accuracy	
Typical	±0.2 °C
Max.	±0.4 °C
Sampling rate	1 s

Carbon dioxide (CO₂)

Measuring range	400 to 10000 ppm
Accuracy	±(50 ppm + 5 % of the measured value)
Reference conditions	
Ambient temperature	25 °C
Air pressure	1013 hPa
Humidity	50 % RH
Measuring range	400 to 1000 ppm
Sampling rate	30 s

4.4 Outputs

4.4.1 Analog outputs

Current output	
Function	Output of measurands
Measured values	Relative humidity, temperature, optional: carbon dioxide (CO ₂)
Calculated values	Dew point, frost point, wet-bulb temperature, absolute humidity, mixing ratio, partial water vapor pressure, specific enthalpy
Signal rate	4 to 20 mA
Output signal limits	0 to 22 mA
Accuracy ^a	≤ ±0.1 % in relation to the end of the signal range (20 mA)
Temperature influence	50 ppm/K
Burden influence	≤ ±0.02 % per 100 Ω
Minimum burden	
Voltage supply U _V	
DC 11 to 25 V	0 Ω
DC 25 to 32 V	(U _V - 25 V) ÷ 0.02 A
Maximum burden	(U _V - 2.4 V) ÷ 0.0215 A
Voltage output	
Function	Output of measurands
Measured values	Relative humidity, temperature, optional: carbon dioxide (CO ₂)
Calculated values	Dew point, frost point, wet-bulb temperature, absolute humidity, mixing ratio, partial water vapor pressure, specific enthalpy
Signal range	0 to 10 V
Output signal limits	0 to 11 V
Accuracy	≤ ±0.1 % in relation to the end of the signal range (10 V)
Temperature influence	50 ppm/K
Load influence	≤ ±15 mV
Load	≥ 10 kΩ

^a Applies to operation with the lowest operating voltage possible according to the burden connected.

4 Technical data

4.5 Interfaces

4.5.1 RS485

Function	Transfer of process data, configuration data, and device information
Communication	Via Modbus master
Galvanic isolation	Functional
Data transmission	Serial
Transmission protocol	Modbus RTU
Data format	8-1-none ^a 8-1-odd 8-1-even 8-2-none
Data transfer rate	9600 baud 19200 baud 38400 baud ^a 57600 baud 115200 baud
Minimum response time	0 to 500 ms
Device address	1 to 254

^a Default setting

4.6 Environmental influences

Admissible ambient temperature	-40 to +80 °C
With CO ₂ module	-10 to +60 °C
Admissible storage temperature	-40 to +80 °C
With CO ₂ module	-30 to +70 °C
Protection type	DIN EN 60529
Housing	IP65 (with connected M12 plug connector)
Max. site altitude	5,300 m above sea level
Climatic conditions	DIN EN IEC 60721-3-3
Climate class	3K24
Relative humidity	≤ 100 % (95 % with CO ₂ module), non-condensing
Electromagnetic compatibility (EMC)	DIN EN 61326-1:2022
Interference emission	Class B ^a
Interference immunity	Industrial requirement
Oscillation ^b	DIN EN 60068-2-6
Amplitude	0.15 mm at 10 to 58.1 Hz
Acceleration	20 m/s ² at 58.1 to 150 Hz
Shock ^b	DIN EN 60068-2-27
Peak acceleration	150 m/s ²
Shock duration	11 ms


^a The product is suitable for industrial use as well as for households and small businesses.

^b The CO₂ module is sensitive to vibrations. In the event of vibrations, the measurement results could change on account of the design.

4.7 Mechanical features

Materials	
Case	PC
M12 plug connector	CuZn
Weight	~ 40 g

4.8 Dimensions

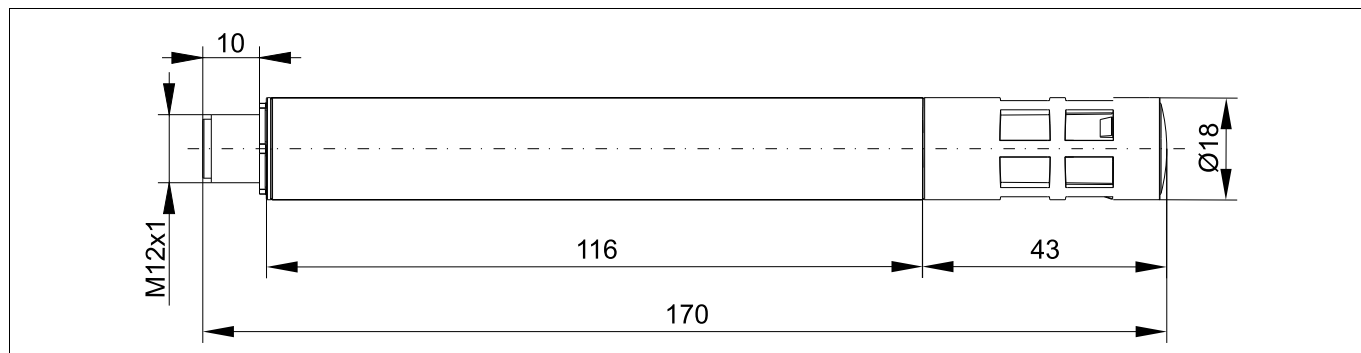

5 Mounting

The device is mounted according to the customer's specific specifications.


The outside air to be monitored must completely flow round the filter cap after mounting.

6.1 Preparing the electrical connection

Requirements:

- The system has been de-energized and secured against being switched on again.
- The connections for the voltage supply and signal processing have been correctly prepared.

6.2 Connection elements

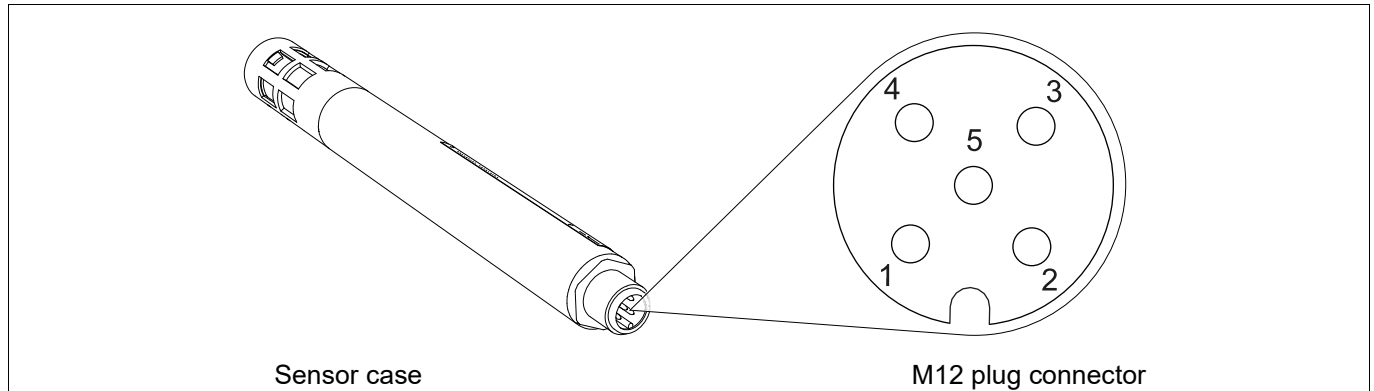

6.2.1 Terminal assignment

M12 plug connector

Designation	Description	Assignment
Analog output	DC 24 V	1 BN (Brown)
	Relative humidity	2 WH (White)
	GND	3 BU (Blue)
	Temperature	4 BK (Black)
	Carbon dioxide (CO ₂)	5 GN/YE (Green/Yellow)
RS485 interface	NC	1 BN (Brown)
	DC 24 V	2 WH (White)
	GND	3 BU (Blue)
	B-RS485 (Data -)	4 BK (Black)
	A-RS485 (Data +)	5 GN/YE (Green/Yellow)


6 Electrical connection

6.3 Connection diagram

Analog outputs


The connection examples for relative humidity (2) also apply to temperature (4) and CO₂ (5).

Current output

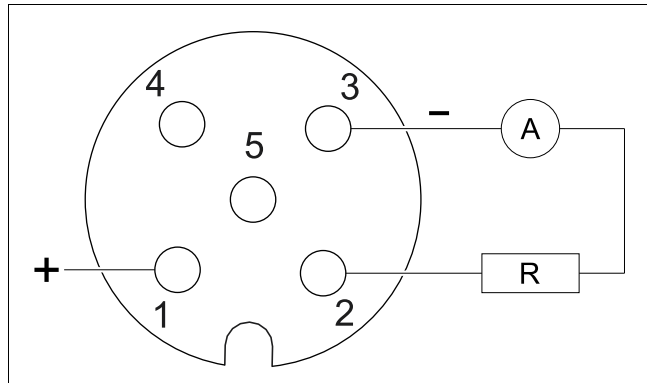

All outputs have to be connected.

Voltage output

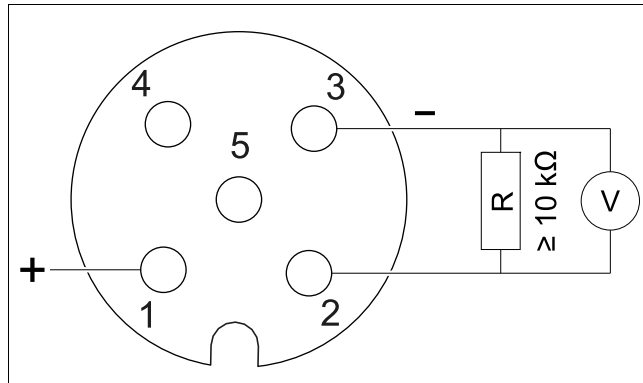

6.4 Connecting the device


Material	Connecting cable, ⇨ "Electrical data ", Page 9
----------	--

Requirements:


- The system has been de-energized and secured against being switched on again.
- The connections for the voltage supply and signal processing have been correctly prepared.

Procedure:

1. Insert the connecting cable (1) into the M12 plug connection (2).

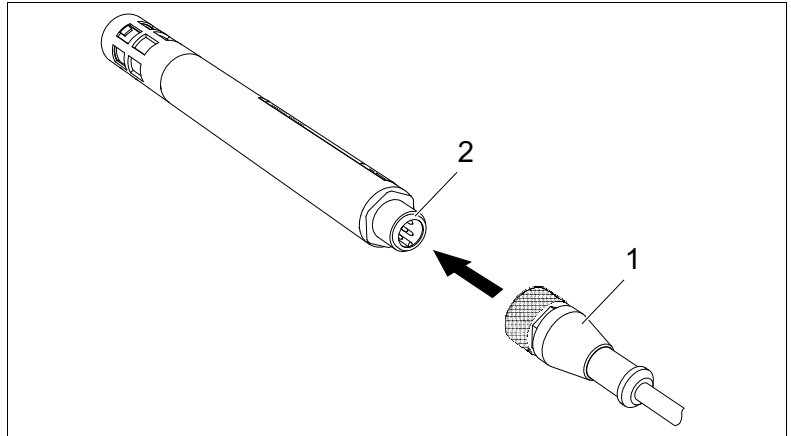

2. Screw the union nut of the connecting cable onto the M12 plug connection on the device.
Tightening torque: $< 0.5 \text{ Nm}$

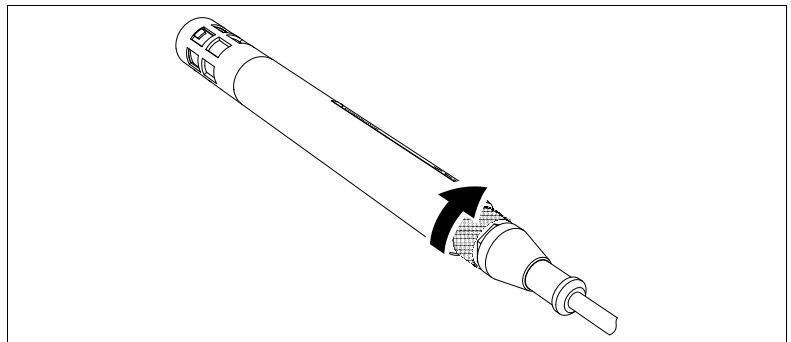

3. Connect the connecting cable to the device that is processing the signals and to the voltage supply.
Route the cable so that it is protected against mechanical strain.

The device is ready for operation as soon as the voltage supply is established.

7 Configuration

The default settings are shown in **bold** in the following tables.

7.1 File info

In the **File info** menu you can enter information about the configuration file.

7.2 Device version

The **Device version** menu provides an overview of the device hardware installed.

7.3 System data

Parameter	Value	Description
Language	German , English, French, Spanish	National language for the device texts of the process display.
Temperature	°C , °F	System units of the process values shown in the process value display.
Absolute humidity	g/m³ , g/ft ³	
Mixing ratio	g/kg , gr/lb	
Partial water vapor pressure	mbar , psi	
Specific enthalpy	kJ/kg , BTU/lb	
TAG number	–	For categorization purposes, e.g. to identify the installation location.
Altitude 	0 m	Refers to standard elevation zero (NHN).

Altitude

The parameter is used to calculate the ambient pressure based on the barometric formula and affects the calculation of the CO₂ concentration, mixing ratio, and specific enthalpy.

7.4 Display

Value 1st, 2nd, 3rd line > Analog selector

Parameter	Value	Description
No selection	–	The process value is not shown.
Measured values	Relative humidity (RH), Temperature (T), Carbon dioxide (CO ₂)	Process values
Calculated values	Dew point (Td), Mixing ratio (x), Absolute humidity (a), Specific enthalpy (h), Wet-bulb temperature (Tw), Frost point (Tf), Partial water vapor pressure (Pw)	Process values
Brightness	0 to 10 (5)	Brightness of the process display backlight.

7.5 Measurand correction

Parameter	Value	Description
Relative humidity	Offset	–
Temperature	Offset	–
Carbon dioxide	Offset, Automatic self-calibration	–

Relative humidity

Parameter	Value	Description
Offset	Input range: -15 to 15 % (0.0)	Process value correction, also affects the calculated values.

Temperature

Parameter	Value	Description
Offset	Input range: -15 to 15 °C (0.0)	Process value correction, also affects the calculated values.

Carbon dioxide

Parameter	Value	Description
Offset	Input range: -500 to +500 ppm (0)	Process value correction, also affects the calculated values.
 Automatic self-calibration	Active , inactive	–

Automatic self-calibration

Long-term accuracy is guaranteed if the CO₂ sensor is exposed to fresh air with an atmospheric CO₂ concentration of 400 ppm at least once a week.

If the application does not allow this:

- Set automatic self-calibration to inactive.
- Correct the offset manually.

7 Configuration

7.6 Analog outputs

Analog output 1/2/3 > Source > Analog selector

Parameter	Value	Description
No selection	–	Analog output 3
Measured values	Relative humidity (RH)	Analog output 1
	Temperature (T)	Analog output 2
	Carbon dioxide (CO ₂)	–
Calculated values	Dew point (Td), Mixing ratio (x), Absolute humidity (a), Specific enthalpy (h), Wet-bulb temperature (Tw), Frost point (Tf), Partial water vapor pressure (Pw)	–

Analog output 1/2/3 > Source > Analog selector > Measured values > Relative humidity (RH)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	–
Scale start	Input range: -99999 to 99999 % (0)	–
Scale end	Input range: -99999 to 99999 % (100)	–
Response at error	Replacement value , High, Low	–
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	–

Analog output 1/2/3 > Source > Analog selector > Measured values > Temperature (T)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	–
Scale start	Input range: -99999 to 99999 °C (-40)	–
Scale end	Input range: -99999 to 99999 °C (80)	–
Response at error	Replacement value , High, Low	–
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	–

Analog output 1/2/3 > Source > Analog selector > Measured values > Carbon dioxide (CO₂)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	–
Scale start	Input range: -99999 to 99999 ppm (400)	–
Scale end	Input range: -99999 to 99999 ppm (5000)	–
Response at error	Replacement value , High, Low	–
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	–

7 Configuration

Analog output 1/2/3 > Source > Analog selector > Calculated values > Dew point (Td)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (-40)	—
Scale end	Input range: -99999 to 99999 °C (60)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Mixing ratio (x)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 g/kg (0)	—
Scale end	Input range: -99999 to 99999 g/kg (160)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Absolute humidity (a)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 g/m ³ (0)	—
Scale end	Input range: -99999 to 99999 g/m ³ (150)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Specific enthalpy (h)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 kJ/kg (-40)	—
Scale end	Input range: -99999 to 99999 kJ/kg (500)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

7 Configuration

Analog output 1/2/3 > Source > Analog selector > Calculated values > Wet-bulb temperature (Tw)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (0)	—
Scale end	Input range: -99999 to 99999 °C (60)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Frost point (Tf)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (-40)	—
Scale end	Input range: -99999 to 99999 °C (0)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Partial water vapor pressure (Pw)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 mbar (0)	—
Scale end	Input range: -99999 to 99999 mbar (200)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

7.7 Serial interface

Parameter	Value	Description
Baud rate	9600, 19200, 38400 , 57600, 115200	—
Data format	8-1-none , 8-1-odd, 8-1-even, 8-2-none	—
Minimum response time	0 to 500 ms (0)	—

Modbus slave

Parameter	Value	Description
Device address	Input range: 1 to 254 (1)	—
Temperature	°C, °F	System units of the process values transferred via the Modbus interface.
Absolute humidity	g/m³ , g/ft ³	
Mixing ratio	g/kg , gr/lb	
Partial water vapor pressure	mbar , psi	
Specific enthalpy	kJ/kg , BTU/lb	

7.8 Online parameters

This function requires an active connection between the setup program and device.

Parameter	Description
Hardware/software	Version of the device hardware and software
Measurands	Test of sensor functions
Display	Test of color reproduction
Calibration constants	Calibration constants of analog outputs
Analog outputs	Test of analog outputs Measure the signal at the relevant output.

8 Modbus address tables

Transmission

All data types are transmitted in big-endian format according to Modbus standard.

Access types

RO = Read-Only (read-only access)
RW = Read/Write (read and write access)
WO = Write-Only (write-only access)

Limited write cycles

The numbers of write cycles of memory modules (e.g. EEPROM, flash memory) are limited.

- Do not send write operations to save or commit actions on a non-cyclical basis.

8.1 Version and fabrication number

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
21	0x0015	String	19	RO	Software version number	–
54	0x0036	String	11	RO	Hardware version number	–
94	0x005E	String	10	RO	Fabrication number	–

8.2 Configuration

8.2.1 System data

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
1000	0x03E8	Selection	1	RW	Language	German English French Spanish
1001	0x03E9	Selection	1	RW	Temperature	°C °F
1002	0x03EA	Selection	1	RW	Absolute humidity	g/m ³ g/ft ³
1003	0x03EB	Selection	1	RW	Mixing ration	g/kg g/lbs
1004	0x03EC	Selection	1	RW	Pressure	mbar psi bar
1005	003ED	Selection	1	RW	Enthalpy	kJ/kg BTU/lbs
1006	0x03EE	String	10	RW	Measuring point identifier	–
1016	0x03F8	Integer	2	RW	Altitude	0 to 3.000 m

8 Modbus address tables

8.2.2 Measurand correction

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
1200	0x04B0	Float	2	RW	Offset Temperature	-15 to 15 °C -27 to 27 °F
1202	0x04B2	Float	2	RW	Offset Relative humidity	-15 to 15 %
1204	0x04B4	Float	2	RW	Offset Carbon dioxide	-500 to 500 ppm
1206	0x04B6	Selection	1	RW	Automatic self-calibration	Off On

8.2.3 Serial interface

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
1500	0x05DC	Selection	1	RW	Baud rate	9k6 19k2 38k4 57k6 115k2
1501	0x05DD	Selection	1	RW	Data format	8N1 8O1 8E1 8N2
1502	0x05DE	Integer	2	RW	Device address	1 to 254
1504	0x05E0	Selection	1	RW	Temperature	°C °F
1505	0x05E1	Selection	1	RW	Absolute humidity	g/m ³ g/ft ³
1506	0x05E2	Selection	1	RW	Mixing ration	g/kg gr/lbs
1507	0x05E3	Selection	1	RW	Pressure	mbar psi bar
1508	0x05E4	Selection	1	RW	Enthalpy	kJ/kg BTU/lbs
1509	0x05E5	Integer	2	RW	Minimum response time	0 to 500

8.2.4 Analog inputs

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
6000	0x1770	Float	2	RO	Humidity	–
6002	0x1772	Float	2	RO	Temperature	–
6004	0x1774	Float	2	RO	Carbon dioxide	–

8 Modbus address tables

8.2.5 Calculated values

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
6006	0x1776	Float	2	RO	Dew point	—
6008	0x1778	Float	2	RO	Mixing ration	—
6010	0x177A	Float	2	RO	Absolute humidity	—
6012	0x177C	Float	2	RO	Specific enthalpy	—
6014	0x177E	Float	2	RO	Wet-bulb temperature	—
6016	0x1780	Float	2	RO	Frost point	—
6018	0x1782	Float	2	RO	Partial water vapor pressure	—

8.2.6 Error messages Modbus

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
6400	0x1900	Boolean	1	RO	General error	—
6401	0x1901	Boolean	1	RO	Configuration faulty	—
6402	0x1902	Boolean	1	RO	Calibration faulty	—
6403	0x1903	Boolean	1	RO	Device not calibrated	—
6404	0x1904	Boolean	1	RO	Humidity sensor faulty	—
6405	0x1905	Boolean	1	RO	CO2 sensor faulty	—
6450	0x1932	Boolean	1	RO	Device restart required	—

Error messages for invalid values

For measured values in the floating-point format, the error is displayed in the value itself, i.e. it contains the error code instead of the measured value.

Error message	Possible cause
1.0×10^{37}	Measuring range underflow
2.0×10^{37}	Measuring range overflow
3.0×10^{37}	Value invalid

9 Maintenance and cleaning

9.1 Maintenance

9.1.1 Replacing filter cap

Material	Plastic membrane filter or plastic sinter filter
----------	--

Requirements:


- The system has been de-energized and secured against being switched on again.
- A clean and dry storage location has been prepared.

Procedure:


1. **CAUTION! Exposed sensor board (3). Destruction of the device electronics possible**

- ▶ Do not touch the sensor board.

Manually loosen the filter cap (1) and remove from the housing (2).

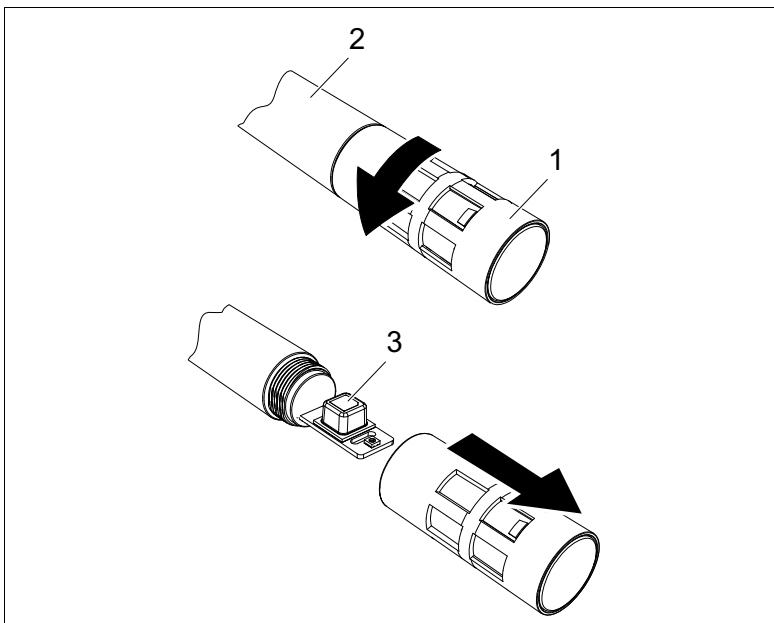

2. Guide the new filter cap over the sensor board and manually screw onto the housing.

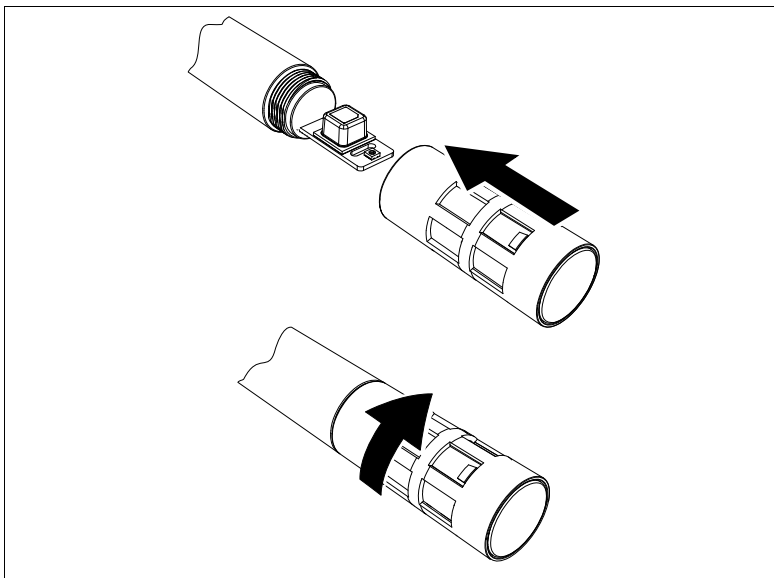

9.2 Cleaning

Clean the device with a cloth dampened with water.

10 Shutdown

10.1 Dismounting

Aids	Screwdriver
------	-------------

Requirements:

- The system has been de-energized and secured against being switched on again.

Procedure:

1. Disconnect the connecting cable from the device that is processing the signals and the voltage supply.
2. Loosen the union nut of the connecting cable from the M12 plug connection.
3. Pull the connecting cable out of the M12 plug connection.

10.2 Returns

Procedure:

1. The [supplementary sheet for product returns](#) must first be completed correctly and signed. Then enclose it with the shipping documents and attach it to the packaging, ideally on the outside.
2. Use the original packaging or a suitably secure container for sending the device.

10.3 Disposal



- Do not dispose of the device or replaced parts in the trash after use.
- Delete programs and data stored on the device.
- Remove batteries, if any, if this can be done without damaging the device.
- Dispose of the device and the packaging material in a responsible and environmentally friendly manner.
- Observe the country-specific laws and regulations for waste treatment and disposal.

In accordance with Directive 2012/19/EU on Waste from Electrical and Electronic Equipment, manufacturers are obliged to offer the option of returning waste equipment. Request the return from the manufacturer.

11 Accessories

Without UL approval

Designation	Part no.
Plastic sinter filter (Ø = 18 mm)	00754581
Plastic membrane filter (Ø = 18 mm)	30048149
JUMO hydroTRANS setup program	00775170
M12 digiLine master connecting cable, 5-pole, A-coded, length 1.5 m	00638333
M12 digiLine master connecting cable, 5-pole, A-coded, length 5 m	00638337
M12 digiLine master connecting cable, 5-pole, A-coded, length 10 m	00638341
M12 connection cable, 5-pole, length 0.5 m	00638312
M12 connection cable, 5-pole, length 1.5 m	00638313
M12 connection cable, 5-pole, length 5 m	00638315
M12 connection cable, 5-pole, length 10 m	00638322
M12 connection cable, 5-pole, length 15 m	00638324
M12 connection cable, 5-pin, 25 m	00720063
Y-splitter, 5-pole	00638327
JUMO digiLine hub	00646871
Pipe-mounted kit JUMO digiLine hub	00648759
Terminating resistor for CAN-Bus/digiLine, M12 × 1	00461591
USB-RS485 converter, DC barrel connector, M12	00746250

12 Open-source software

The device software and/or device components were developed using open-source software.

Insofar as the respectively applicable license terms justify a claim on the provision of source code or other information, JUMO GmbH & Co. KG will provide the source code and the license texts on a conventional data carrier at the cost incurred for the provision of the data carrier.

This offer is valid for three years after the software is made available. This offer is valid beyond that time to the extent specified in the license terms.

For questions related to open-source software, please contact:

Address JUMO GmbH & Co. KG
License Compliance
Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Email licensecompliance@jumo.net

		产品中有害物质的名称及含量 China EEP Hazardous Substances Information						
产品组别 Product group: 907044								
部件名称 JUMO hydro Trans S40								
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
外壳 Housing (Gehäuse)		○	○	○	○	○	○	
螺栓 Screw (Schraube)		○	×	○	○	○	○	
印刷电路组件 printed circuit assemblies (Leiterplattenbestandteile)		○	×	○	○	○	○	
本表格依据SJ/T 11364的规定编制。 This table is prepared in accordance with the provisions SJ/T 11364. ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 Indicate the hazardous substances in all homogeneous materials for the part are below the limit of the GB/T 26572. × ×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 Indicate the hazardous substances in at least one homogeneous material of the part exceed the limit of the GB/T 26572.								

13 Certificates



JUMO GmbH & Co. KG

Street address:
Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Delivery address:
Mackenrodtstraße 14
36039 Fulda, Germany

Postal address:
36035 Fulda, Germany

Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO UK LTD

JUMO House
Temple Bank, Riverway
Harlow, Essex, CM20 2DY, UK

Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: info.uk@jumo.net
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6724 Joy Road
East Syracuse, NY 13057, USA

Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com

