

JUMO hydroTRANS S10

Humidity and temperature transmitter
with optional CO₂ module, indoor version



Operating Manual



90704500T90Z001K000

V3.00/EN/00767214/2026-05-27

Further information and downloads



qr-907045-en.jumo.info

Table of contents

1	About this documentation	6
1.1	Purpose	6
1.2	Target group	6
1.3	Definition of terms	6
1.4	Trademark information	6
1.5	Symbols	6
2	Safety	7
2.1	Intended use	7
2.2	Qualification of personnel	7
2.3	Transport and storage damage	7
2.4	Disturbances	7
2.4.1	Self-heating	7
2.4.2	Climatic conditions	7
2.4.3	Volatile organic compounds (VOCs)	8
2.4.4	Stabilisation time	8
3	Description	9
3.1	Structure	9
3.2	Functions	9
3.3	Nameplate	10
3.4	Approval marks and certificates	11
3.5	Scope of delivery	11
4	Technical data	12
4.1	Electrical safety	12
4.2	Electrical data	12
4.3	Inputs	13
4.3.1	Measurands	13
4.4	Outputs	14
4.4.1	Analog outputs	14
4.5	Interfaces	15
4.5.1	RS485	15
4.5.2	USB	15
4.6	Display	15
4.7	Environmental influences	16
4.8	Mechanical features	16
4.9	Dimensions	17
5	Mounting	18

Table of contents

6	Electrical connection	20
6.1	Preparing the electrical connection	20
6.2	Connection elements	20
6.2.1	Terminal assignment	20
6.3	Connection diagram	20
7	Operation	21
7.1	Display elements	21
7.1.1	Startup display	21
7.1.2	Process display	21
8	Setup program	22
9	Configuration	23
9.1	File info	23
9.2	Device version	23
9.3	System data	23
9.4	Display	23
9.5	Measurand correction	24
9.6	Analog outputs	24
9.7	Serial interface	27
9.8	Online parameters	28
10	Modbus address tables	29
10.1	Version and fabrication number	29
10.2	Configuration	29
10.2.1	System data	29
10.2.2	Measurand correction	30
10.2.3	Serial interface	30
10.2.4	Analog inputs	30
10.2.5	Calculated values	31
10.2.6	Error messages Modbus	31
11	Troubleshooting	32
11.1	Process value error	32
11.2	Error messages in line with NAMUR	32
12	Maintenance and cleaning	33

Table of contents

13	Shutdown	34
13.1	Dismounting	34
13.2	Returns	34
13.3	Disposal	34
14	Accessories	35
15	Open-source software	36
16	Certificates	37

1 About this documentation

1.1 Purpose

This documentation is part of the device and includes all information to ensure that it is used safely and as intended across all phases of the product lifecycle.

If you do not follow the documentation and safety information, this may result in risk to life and damage to property due to improper use.

- Read and follow the documentation and the safety information and warnings.
- Store the document in its entirety, in an easily accessible location, and so that it can be read in full at all times.
- Contact the manufacturer if you have any questions about the device and documentation.

1.2 Target group

This documentation is intended to be used by personnel for plant mechanical systems for sanitary, heating and air-conditioning technology, electrical engineering or mechanical and plant engineering throughout all phases of the product life cycle.

1.3 Definition of terms

Use in the documentation	Definition
Device, product	Humidity and temperature transmitter
CO ₂ module, CO ₂ sensor	Carbon dioxide (CO ₂) as a measurand
End device	Smartphone, tablet, laptop, PC etc.
Measured value	Process value
Product lifecycle	Overall consideration of Product identification, acceptance of the goods, storage, mounting, connection, operation, troubleshooting, maintenance to disposal

1.4 Trademark information

All trademarks and trade and company names used are the property of their rightful owners or authors.

1.5 Symbols



NOTE!

This symbol is used in tables and indicates that further information is provided after the table.



REFERENCE!

This symbol refers to **further information** in other sections, chapters, or other manuals.

2.1 Intended use

The humidity and temperature transmitter monitors the indoor air quality.

The device is suitable for wall mounting (stationary use at weatherprotected locations).

The documentation is part of the device. The device is only intended for use according to this documentation.

2.2 Qualification of personnel

The personnel deployed must meet the following requirements in all phases of the product lifecycle:

- Members of personnel have at least completed training in the field of plant mechanical systems for sanitary, heating, and air-conditioning technology or have completed a degree in electrical engineering or mechanical and plant engineering.
- Members of personnel are familiar with this documentation and the safety information and warnings it contains.

2.3 Transport and storage damage

The device can be damaged if it is insufficiently protected during transport and/or improperly stored.

- Transport the device protected from moisture and dirt in shockproof packaging.
- Protect all electrical and mechanical connections from damage.
- Observe the admissible storage temperature of the device.
- Store the device in a dry and dust-free environment.

2.4 Disturbances

2.4.1 Self-heating

Self-heating of electronic components can lead to measurement deviations. Appropriate measures reduce self-heating and ensure measurement accuracy:

- Reduce the data transmission rate.
- Voltage output: Reduce the load within the tolerance.
- Current output: Increase the burden within the tolerance.
- Reduce the display brightness.

A measurement or process value is corrected using an offset.

⇒ "Measurand correction ", Page 24

2.4.2 Climatic conditions

External factors affecting the electronic components, particularly the sensor element, can lead to measurement deviations. Appropriate measures reduce the influence of disturbances and ensure measurement accuracy:

- Protect the device from external heat sources.
- Protect the device from direct sunlight.
- Protect the device from strong drafts.

A measurement or process value is corrected using an offset.

⇒ "Measurand correction ", Page 24

2 Safety

2.4.3 Volatile organic compounds (VOCs)

High concentrations in the ambient air and prolonged exposure of the sensor can lead to measurement deviations. Appropriate measures prevent damage to the sensor and ensure measurement accuracy:


- Adequate ventilation of the mounting site

2.4.4 Stabilisation time

After the initial start-up of the device, the sensor element adapts to the environmental conditions at the installation site. Measurement deviations may occur during this stabilisation time. Measurement accuracy is ensured by taking appropriate measures:

- Observe the stabilisation time of at least 60 h.

3.1 Structure

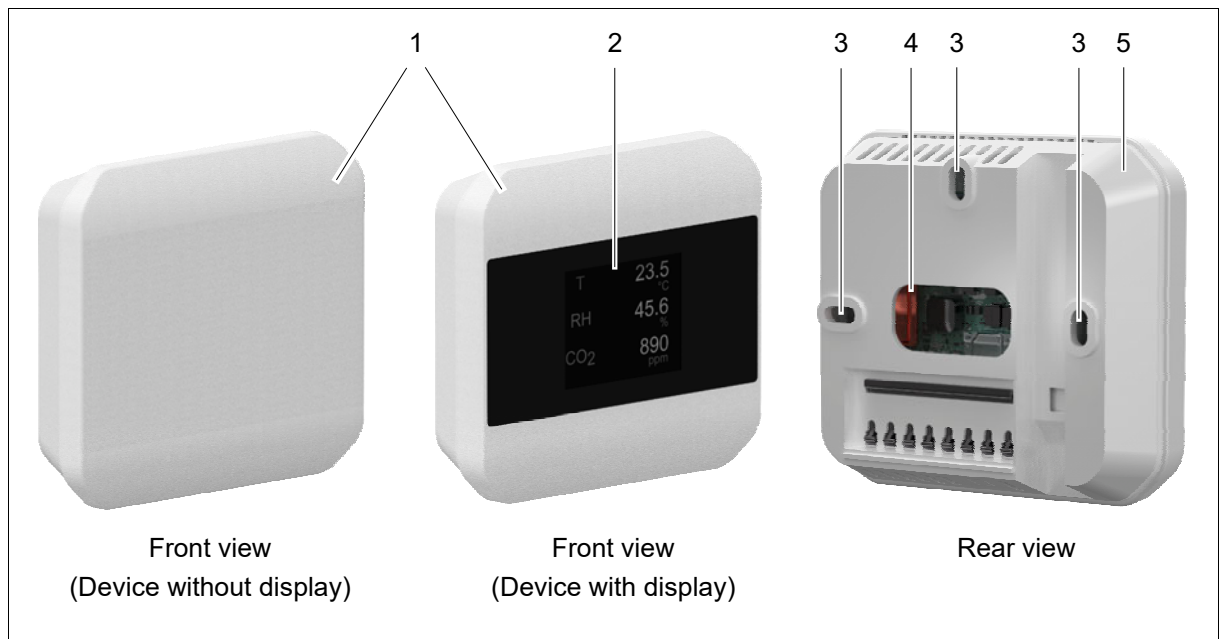

- | | | | |
|---|---------------|---|-----------------------|
| 1 | Housing front | 2 | Display (TFT display) |
| 3 | Screw holes | 4 | Connection opening |
| 5 | Housing rear | | |

3.2 Functions


Measurand	Function principle
Relative humidity	Capacitive measurement technology
Temperature	Semiconductor measurement technology
Carbon dioxide (CO ₂)	Photoacoustic measurement technology

The process values of the measurands can be displayed on the optional display and issued to a higher-level system via the interfaces or analog outputs.


3 Description

3.3 Nameplate

Example:

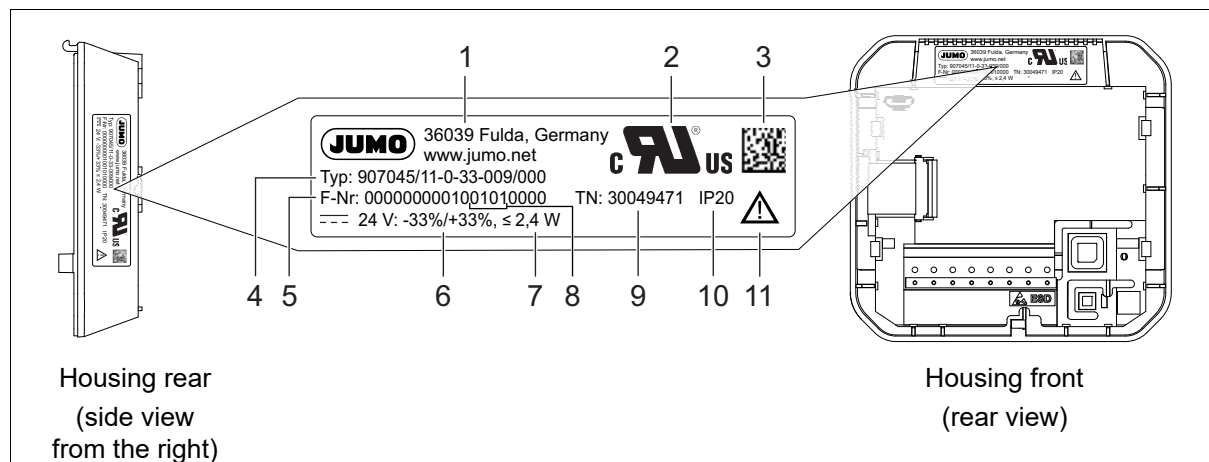

- | | | | |
|---|---------------------------|----|---|
| 1 | Manufacturer and address | 7 | Power consumption |
| 2 | UL identification marking | 8 | Date of manufacture (YYww) |
| 3 | Data Matrix code | 9 | Part no. |
| 4 | Order code | 10 | Protection type according to DIN EN 60529 |
| 5 | Fabrication number | 11 | Observe device documentation! |
| 6 | Voltage supply (DC) | | |

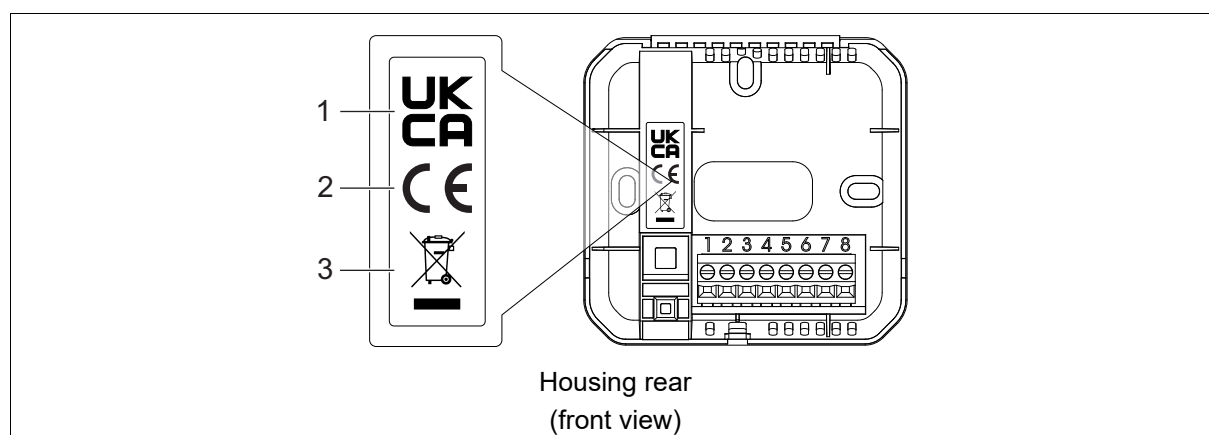

- | | | | |
|---|-----------------------------|---|----------|
| 1 | UKCA identification marking | 3 | Disposal |
| 2 | CE identification marking | | |

3.4 Approval marks and certificates



Certificates for approved device versions are available for download on the manufacturer's website.

3.5 Scope of delivery

Device in the ordered version
Brief instructions
3 fastening screws

4 Technical data

4.1 Electrical safety

Requirements	DIN EN 61010-1 The device must be equipped with an electrical circuit that meets the requirements for "Limited-energy circuits".
--------------	---

4.2 Electrical data

Device version with analog output

Voltage supply	DC 24 V SELV, PELV
Analog output	DC 24 V, -33 %/+33 %
Power consumption	≤ 2.4 W
Protection rating	DIN EN 61140, Class III (protective low voltage)
Electrical connection	
Connection elements	Screw terminal
Connecting cable	
Conductor cross section	0.08 to 4.5 mm ²
Stripping length	≥ 6 mm
Temperature resistance	≥ 80 °C
For UL applications	
Approved cable ^a	CYJV2/8, CYJV/7, PVVA2/8, PVVA/7

^a The cables must be suitable for the voltage, current and temperature used.

Device version with RS485

Voltage supply	SELV, PELV
RS485 interface	DC 24 V, -58 %/+33 %
Power consumption	≤ 2.4 W
Protection rating	DIN EN 61140, Classe III (protective low voltage)
Electrical connection	
Connection elements	Screw terminal
Connecting cable	
Temperature resistance	0.08 to 4.5 mm ²
For UL applications	≥ 6 mm
Approved cable ^a	≥ 80 °C
Electrical connection	
Connection elements	CYJV2/8, CYJV/7, PVVA2/8, PVVA/7

^a The cables must be suitable for the voltage, current and temperature used.

4.3 Inputs

4.3.1 Measurands

Relative humidity

Measuring range	0 to 100 % RH
With CO ₂ module	0 to 95 % RH
Accuracy	
Stabilization time after initial start-up	≥ 60 h
Typical	±2.0 % RH
Max.	±2.5 % RH
Reference conditions	
Humidity	≥ 30 % RH
Sampling rate	1 s

Temperature

Measuring range	-5 to +55 °C
Accuracy	±0.4 °C
Sampling rate	1 s

Carbon dioxide (CO₂)

Measuring range	400 to 10000 ppm
Accuracy	±(50 ppm + 5 % of the measured value)
Reference conditions	
Ambient temperature	25 °C
Air pressure	1013 hPa
Humidity	50 % RH
Measuring range	400 to 1000 ppm
Sampling rate	30 s

4 Technical data

4.4 Outputs

4.4.1 Analog outputs

Current output	
Function	Output of measurands
Measured values	Relative humidity, temperature, optional: carbon dioxide (CO ₂)
Calculated values	Dew point, frost point, wet-bulb temperature, absolute humidity, mixing ratio, partial water vapor pressure, specific enthalpy
Signal range	4 to 20 mA
Output signal limits	0 to 22 mA
Accuracy	≤ ±0.1 % in relation to the end of the signal range (20 mA)
Temperature influence	±50 ppm/K
Burden influence	≤ ±0.02 % per 100 Ω
Burden	≤ 500 Ω
Voltage output	
Function	Output of measurands
Measured values	Relative humidity, temperature, optional: carbon dioxide (CO ₂)
Calculated values	Dew point, frost point, wet-bulb temperature, absolute humidity, mixing ratio, partial water vapor pressure, specific enthalpy
Signal range	0 to 10 V
Output signal limits	0 to 11 V
Accuracy	≤ ±0.1 % in relation to the end of the signal range (10 V)
Temperature influence	50 ppm/K
Load influence	≤ ±15 mV
Load	≥ 10 kΩ

4.5 Interfaces

4.5.1 RS485

Function	Transfer of process data, configuration data, and device information
Communication	Via Modbus master
Galvanic isolation	Functional
Data transmission	Serial
Transmission protocol	Modbus RTU
Data format	8-1-none ^a 8-1-odd 8-1-even 8-2-none
Data transfer rate	9600 baud 19200 baud 38400 baud ^a 57600 baud 115200 baud
Minimum response time	0 to 500 ms
Device address	1 to 254

^a Default setting

4.5.2 USB

Function	Transfer of configuration data and device information
Communication	Via end device and setup software
Transmission standard	USB 2.0
Connector type	Micro-B
Power requirement	≤ 500 mA
Cable length	≤ 5 m

4.6 Display

Type	TFT display
Size	
Display range	35.04 mm × 28.03 mm
Screen size (diagonal)	1.77"
Resolution	128 × 160 RGB
Brightness	11 levels (configurable)

4 Technical data

4.7 Environmental influences

Admissible ambient temperature	-5 to +55 °C
Admissible storage temperature	-25 to +60 °C
Protection type	DIN EN 60529 IP20 (front)
Site altitude max.	2,000 m above sea level
Climatic conditions	DIN EN IEC 60721-3-3
Climate class	3K22
Relative humidity	≤ 90 % without condensation, non-condensing
Electromagnetic compatibility (EMC)	DIN EN 61326-1:2022
Interference emission	Class B ^a
Interference immunity	Industrial requirement
Vibration ^b	DIN EN 60068-2-6
Amplitude	0.15 mm from 10 to 58.1 Hz
Acceleration	20 m/s ² from 58.1 to 150 Hz
Shock ^b	DIN EN 60068-2-27
Peak acceleration	150 m/s ²
Shock duration	11 ms

^a The product is suitable for industrial use as well as for households and small businesses.


^b The CO₂ module is sensitive to vibrations. In the event of vibrations, the measurement results could change on account of the design.

4.8 Mechanical features


Materials	
Housing	PC
Display cover	PMMA
Weight	~ 81 g

4.9 Dimensions

Device with display

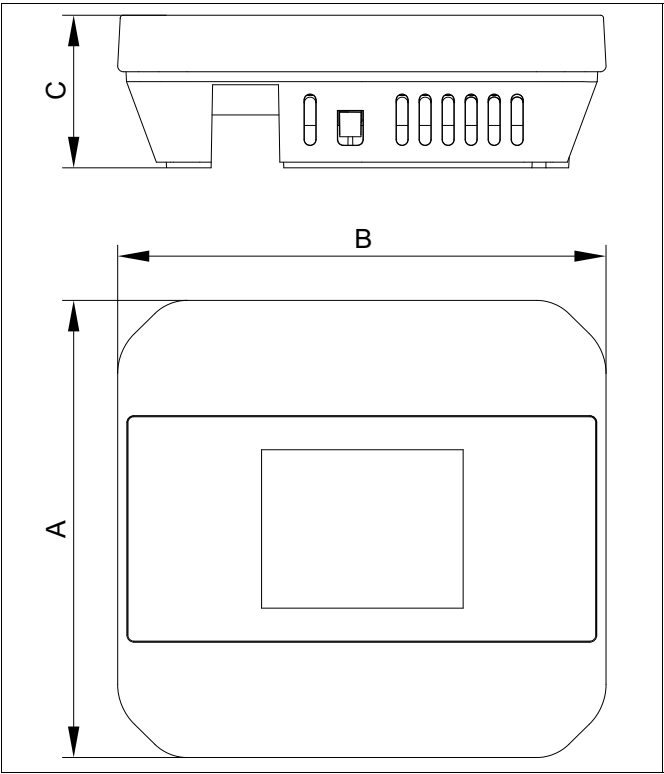

Screw holes (housing rear)

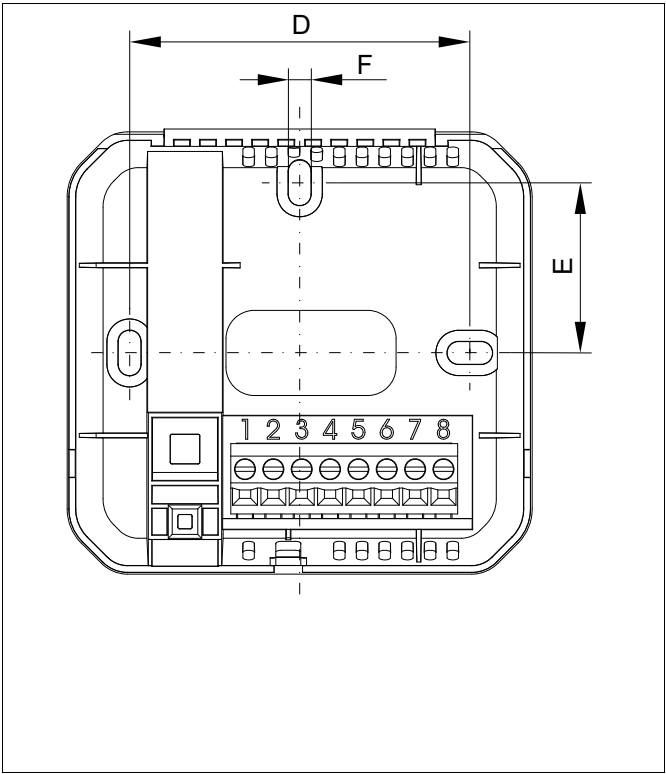

Device version	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	F [mm]
Device without display	81	85	25	60	30	4
Device with display			27			

5 Mounting


Aids	Cross-headed screwdriver
Materials	3 fastening screws

Requirements:


- The system has been de-energized and secured against being switched on again.
- The mounting holes have been drilled.

Procedure:


1. Unlock the snap-in hook on the housing front (1).
2. Remove the housing front and place it down, taking care to protect it from pollutants.

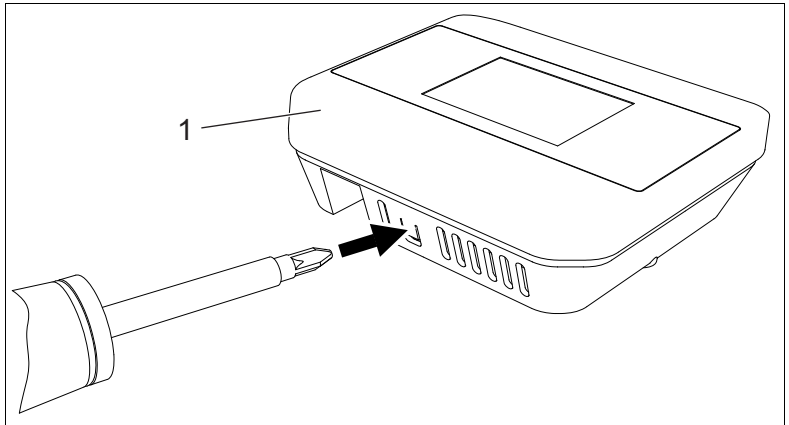

3. Guide the connecting cable through the connection opening on the housing rear (2).

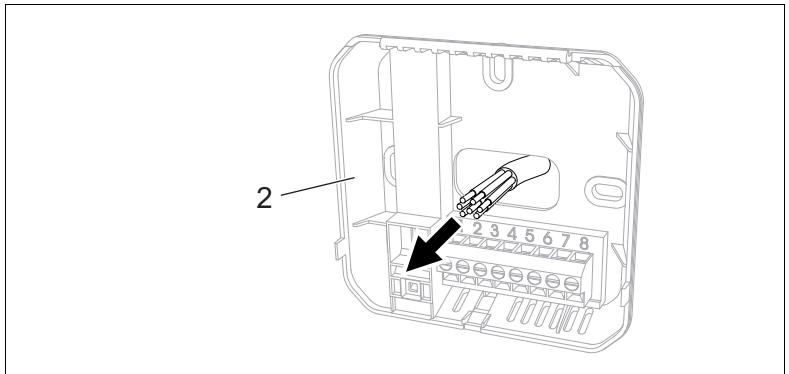


4. Mount the housing rear to the wall. Tighten the fastening screws.
Tightening torque: $< 0.5 \text{ Nm}$
CAUTION! Risk of incorrect measurement results due to ingress of air through the connection opening on the device.
When mounting the device on a flush-mounted box, seal the connection opening air-tight using suitable sealing material.

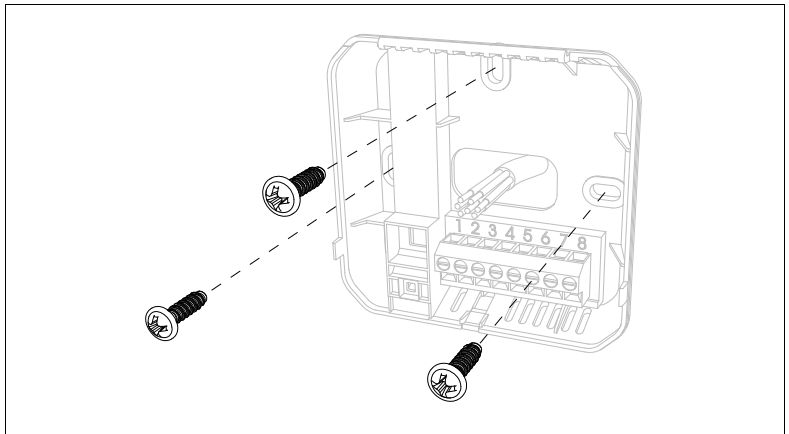

5. Complete the electrical connection.
⇒ chapter 6 "Electrical connection", Page 20

6. Insert the housing front (1) into the housing rear (2) and fold it forward so that you can hear the snap-in hook (3) engage.

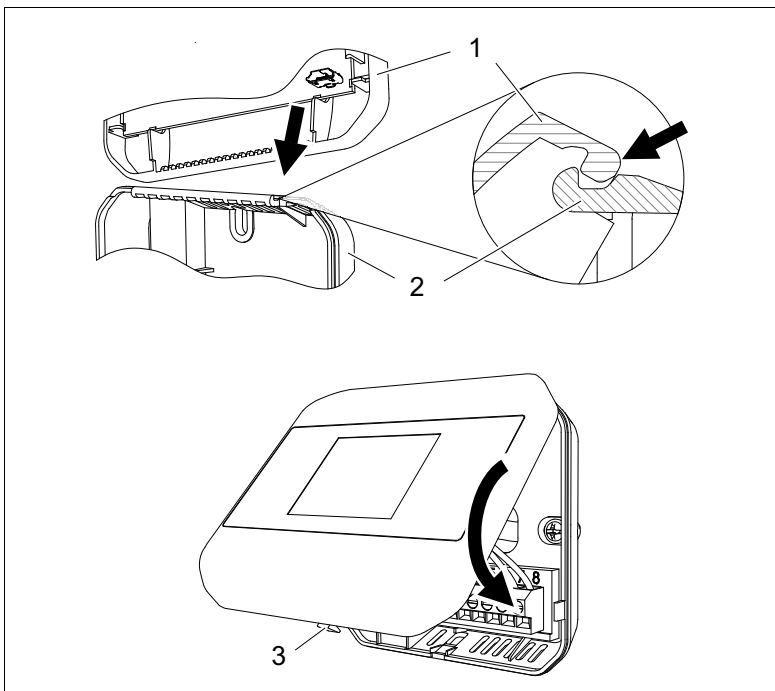

7. Remove the protective film.

The device is ready for operation as soon as the voltage supply is established.

When initial-startup, take the stabilisation time into account, ⇒ page 8.


6 Electrical connection

6.1 Preparing the electrical connection

Requirements:

- The system has been de-energized and secured against being switched on again.
- The connections for the voltage supply and signal processing have been correctly prepared.

6.2 Connection elements

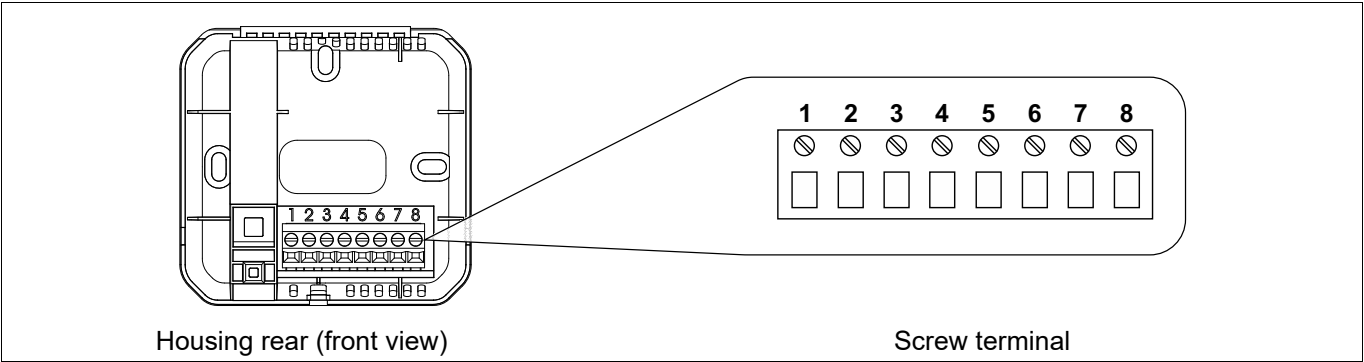

6.2.1 Terminal assignment

Screw terminal

Designation	Description	Assign-ment
Analog output	–	1
	–	2
	Analog output 3 ^a	3
	Analog output 2 ^a	4
	Analog output 1 ^a	5
	Analog output GND	6
	GND	7
	DC 24 V	8

Designation	Description	Assign-ment
RS485	RS485 A (D+)	1
	RS485 B (D-)	2
	RS485 GND ^b	3
	RS485 A (D+)	4
	RS485 B (D-)	5
	RS485 GND ^b	6
	GND	7
	DC 24 V	8


- ^a Standard
^b Optional extra

6.3 Connection diagram


Analog outputs

The connection examples for analog output 3 also apply to analog outputs 1 and 2.

Current output

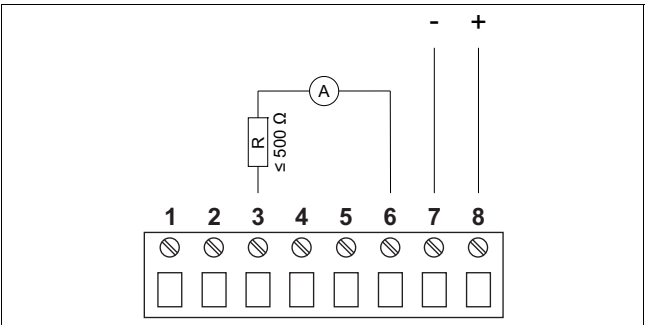


Voltage output

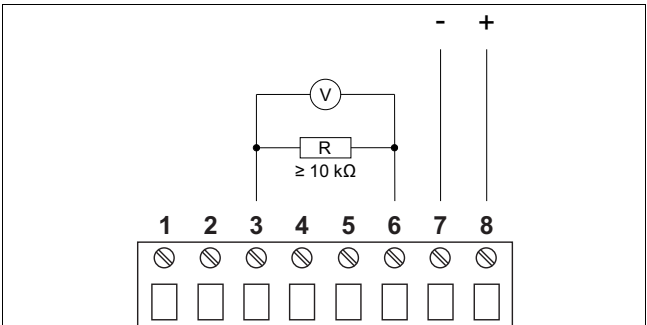

7.1 Display elements


7.1.1 Startup display

The startup display appears as soon as the voltage supply to the device is established. The startup display switches to the process value display after approximately five seconds.

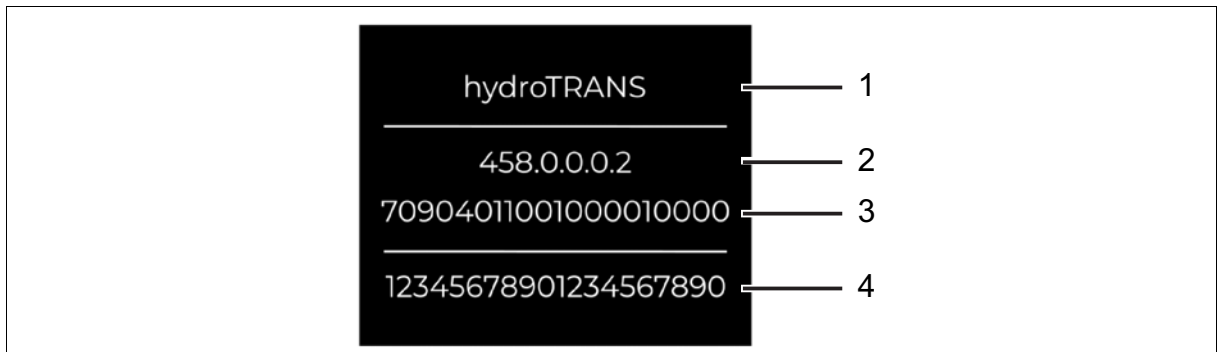

Pos.	Designation	Description
1	Startup display	Shows the device name.
2		Shows the device software version.
3		Shows the device hardware version.
4		Shows the device TAG number.

7.1.2 Process display

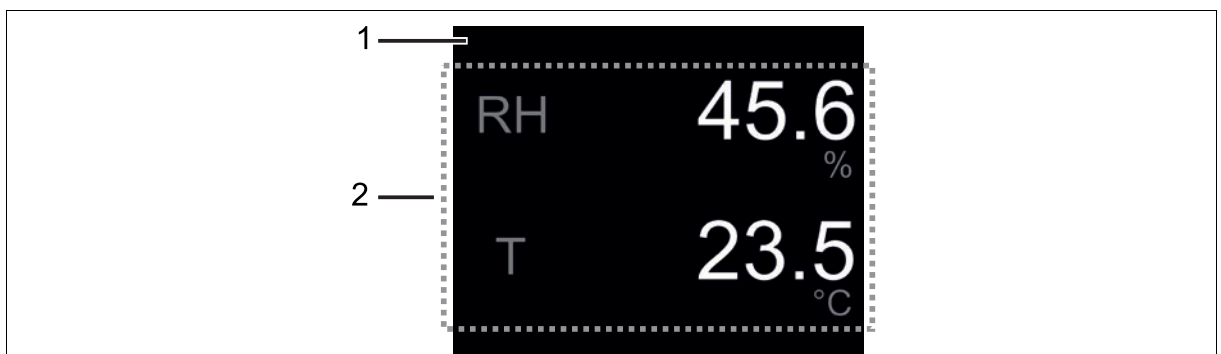

Pos.	Designation	Description
1	Process display	Shows the following values and messages: - Up to three process values - Error messages
2	Process value display	Shows the following values: - The formula symbol - The process value (measured or calculated value) - The system unit

8 Setup program

The setup program is used to configure the devices. The free 30-day test version is available for download on the manufacturer's [product website](#).

The configuration data that is created can be saved in a file and transferred between the device and set-up program.

The data is transferred serially via the USB interface. The USB interface must have a 500-mA host.

Connection of the USB interface


Aids	Slotted screwdriver
Material	USB cable, connector type A to Micro-B

Requirements:

- The system has been de-energized and secured against being switched on again.

Procedure:

1. Unlock the snap-in hook on the top section of the housing.
2. Remove the housing front.
3. Connect the USB cable (1) and connect it to the end device.
4. Start the setup program and configure the relevant settings.
5. Remove the USB cable once the data transfer is complete.
6. Insert the housing front into the housing rear and fold it forward so that you can hear the snap-in hook engage.

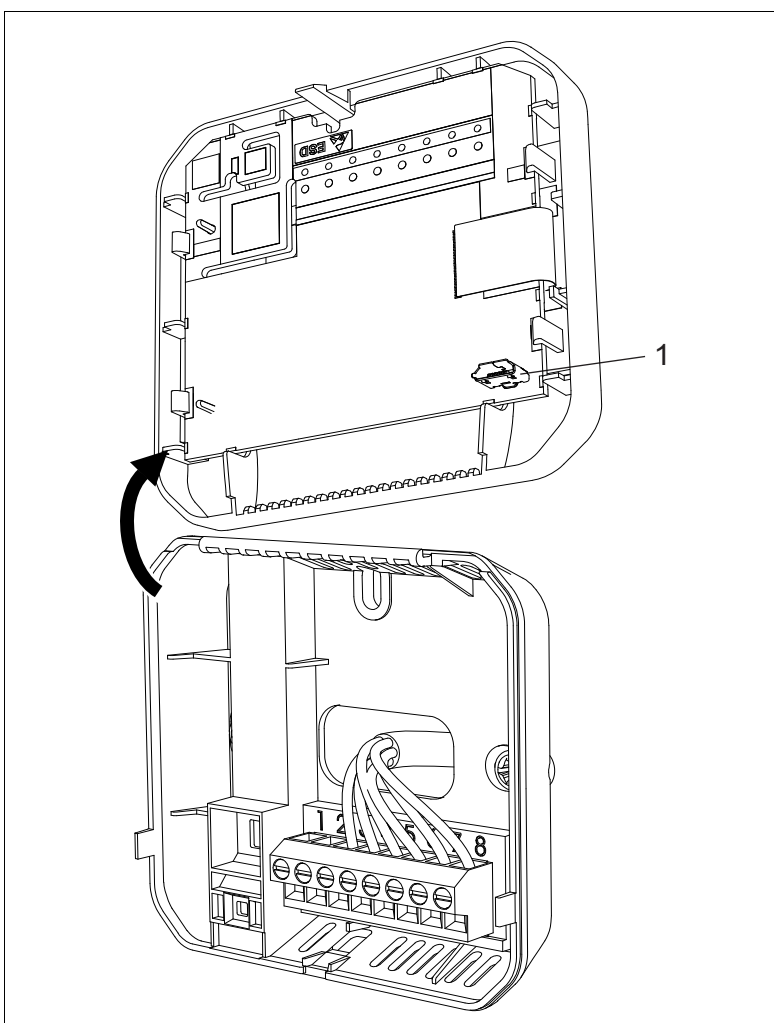

The default settings are shown in **bold** in the following tables.

Before configuring the settings, perform a data transfer from the device.

9.1 File info

In the **File info** menu you can enter information about the configuration file.

9.2 Device version

The **Device version** menu provides an overview of the device hardware installed.

9.3 System data

Parameter	Value	Description
Language	German , English, French, Spanish	National language for the device texts of the process display.
Temperature	°C , °F	System units of the process values shown in the process value display.
Absolute humidity	g/m³ , g/ft ³	
Mixing ratio	g/kg , gr/lb	
Partial water vapor pressure	mbar , psi	
Specific enthalpy	kJ/kg , BTU/lb	
TAG number	–	For categorization purposes, e.g. to identify the installation location.
Altitude 	0 m	Refers to standard elevation zero (NHN).

Altitude

The parameter is used to calculate the ambient pressure based on the barometric formula and affects the calculation of the CO₂ concentration, mixing ratio, and specific enthalpy.

9.4 Display

Value 1st, 2nd, 3rd line > Analog selector

Parameter	Value	Description
No selection	–	The process value is not shown.
Measured values	Relative humidity (RH), Temperature (T), Carbon dioxide (CO ₂)	Process values
Calculated values	Dew point (Td), Mixing ratio (x), Absolute humidity (a), Specific enthalpy (h), Wet-bulb temperature (Tw), Frost point (Tf), Partial water vapor pressure (Pw)	Process values
Brightness	0 to 10 (5)	Brightness of the process display backlight.

9 Configuration

9.5 Measurand correction

Parameter	Value	Description
Relative humidity	Offset	–
Temperature	Offset	–
Carbon dioxide	Offset, Automatic self-calibration	–

Relative humidity

Parameter	Value	Description
Offset	Input range: -15 to 15 % (0.0)	Process value correction, also affects the calculated values.

Temperature

Parameter	Value	Description
Offset	Input range: -15 to 15 °C (0.0)	Process value correction, also affects the calculated values.

Carbon dioxide

Parameter	Value	Description
Offset	Input range: -500 to +500 ppm (0)	Process value correction, also affects the calculated values.
 Automatic self-calibration	Active , inactive	–

Automatic self-calibration

Long-term accuracy is guaranteed if the CO₂ sensor is exposed to fresh air with an atmospheric CO₂ concentration of 400 ppm at least once a week.

If the application does not allow this:

- Set automatic self-calibration to inactive.
- Correct the offset manually.

9.6 Analog outputs

Analog output 1/2/3 > Source > Analog selector

Parameter	Value	Description
No selection	–	Analog output 3
Measured values	Relative humidity (RH)	Analog output 1
	Temperature (T)	Analog output 2
	Carbon dioxide (CO ₂)	–
Calculated values	Dew point (Td), Mixing ratio (x), Absolute humidity (a), Specific enthalpy (h), Wet-bulb temperature (Tw), Frost point (Tf), Partial water vapor pressure (Pw)	–

9 Configuration

Analog output 1/2/3 > Source > Analog selector > Measured values > Relative humidity (RH)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 % (0)	—
Scale end	Input range: -99999 to 99999 % (100)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	

Analog output 1/2/3 > Source > Analog selector > Measured values > Temperature (T)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (-5)	—
Scale end	Input range: -99999 to 99999 °C (55)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Measured values > Carbon dioxide (CO₂)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 ppm (400)	—
Scale end	Input range: -99999 to 99999 ppm (5000)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Dew point (Td)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (-40)	—
Scale end	Input range: -99999 to 99999 °C (60)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

9 Configuration

Analog output 1/2/3 > Source > Analog selector > Calculated values > Mixing ratio (x)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 g/kg (0)	—
Scale end	Input range: -99999 to 99999 g/kg (160)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Absolute humidity (a)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 g/m ³ (0)	—
Scale end	Input range: -99999 to 99999 g/m ³ (150)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Specific enthalpy (h)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 kJ/kg (-40)	—
Scale end	Input range: -99999 to 99999 kJ/kg (500)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	

Analog output 1/2/3 > Source > Analog selector > Calculated values > Wet-bulb temperature (Tw)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (0)	—
Scale end	Input range: -99999 to 99999 °C (60)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

9 Configuration

Analog output 1/2/3 > Source > Analog selector > Calculated values > Frost point (Tf)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 °C (-40)	—
Scale end	Input range: -99999 to 99999 °C (0)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

Analog output 1/2/3 > Source > Analog selector > Calculated values > Partial water vapor pressure (Pw)

Parameter	Value	Description
Signal type	4 to 20 mA , 0 to 10 V	—
Scale start	Input range: -99999 to 99999 mbar (0)	—
Scale end	Input range: -99999 to 99999 mbar (200)	—
Response at error	Replacement value , High, Low	—
Replacement value	Input range: 3.4 to 22 mA (3.4), 0 to 11 V	—

9.7 Serial interface

Parameter	Value	Description
Baud rate	9600, 19200, 38400 , 57600, 115200	—
Data format	8-1-none , 8-1-odd, 8-1-even, 8-2-none	—
Minimum response time	0 to 500 ms (0)	—

Modbus slave

Parameter	Value	Description
Device address	Input range: 1 to 254 (1)	—
Temperature	°C, °F	System units of the process values transferred via the Modbus interface.
Absolute humidity	g/m³ , g/ft ³	
Mixing ratio	g/kg , gr/lb	
Partial water vapor pressure	mbar , psi	
Specific enthalpy	kJ/kg , BTU/lb	

9 Configuration

9.8 Online parameters

This function requires an active connection between the setup program and device.

Parameter	Description
Hardware/software	Version of the device hardware and software
Measurands	Test of sensor functions
Display	Test of color reproduction
Calibration constants	Calibration constants of analog outputs
Analog outputs	Test of analog outputs
	Measure the signal at the relevant output.

10 Modbus address tables

Transmission

All data types are transmitted in big-endian format according to Modbus standard.

Access types

RO = Read-Only (read-only access)
RW = Read/Write (read and write access)
WO = Write-Only (write-only access)

Limited write cycles

The numbers of write cycles of memory modules (e.g. EEPROM, flash memory) are limited.

- Do not send write operations to save or commit actions on a non-cyclical basis.

10.1 Version and fabrication number

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
21	0x0015	String	19	RO	Software version number	–
54	0x0036	String	11	RO	Hardware version number	–
94	0x005E	String	10	RO	Fabrication number	–

10.2 Configuration

10.2.1 System data

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
1000	0x03E8	Selection	1	RW	Language	German English French Spanish
1001	0x03E9	Selection	1	RW	Temperature	°C °F
1002	0x03EA	Selection	1	RW	Absolute humidity	g/m ³ g/ft ³
1003	0x03EB	Selection	1	RW	Mixing ration	g/kg g/lbs
1004	0x03EC	Selection	1	RW	Pressure	mbar psi bar
1005	003ED	Selection	1	RW	Enthalpy	kJ/kg BTU/lbs
1006	0x03EE	String	10	RW	Measuring point identifier	–
1016	0x03F8	Integer	2	RW	Altitude	0 to 3.000 m

10 Modbus address tables

10.2.2 Measurand correction

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
1200	0x04B0	Float	2	RW	Offset Temperature	-15 to 15 °C -27 to 27 °F
1202	0x04B2	Float	2	RW	Offset Relative humidity	-15 to 15 %
1204	0x04B4	Float	2	RW	Offset Carbon dioxide	-500 to 500 ppm
1206	0x04B6	Selection	1	RW	Automatic self-calibration	Off On

10.2.3 Serial interface

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
1500	0x05DC	Selection	1	RW	Baud rate	9k6 19k2 38k4 57k6 115k2
1501	0x05DD	Selection	1	RW	Data format	8N1 8O1 8E1 8N2
1502	0x05DE	Integer	2	RW	Device address	1 to 254
1504	0x05E0	Selection	1	RW	Temperature	°C °F
1505	0x05E1	Selection	1	RW	Absolute humidity	g/m ³ g/ft ³
1506	0x05E2	Selection	1	RW	Mixing ration	g/kg gr/lbs
1507	0x05E3	Selection	1	RW	Pressure	mbar psi bar
1508	0x05E4	Selection	1	RW	Enthalpy	kJ/kg BTU/lbs
1509	0x05E5	Integer	2	RW	Minimum response time	0 to 500

10.2.4 Analog inputs

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
6000	0x1770	Float	2	RO	Humidity	–
6002	0x1772	Float	2	RO	Temperature	–
6004	0x1774	Float	2	RO	Carbon dioxide	–

10 Modbus address tables

10.2.5 Calculated values

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
6006	0x1776	Float	2	RO	Dew point	—
6008	0x1778	Float	2	RO	Mixing ration	—
6010	0x177A	Float	2	RO	Absolute humidity	—
6012	0x177C	Float	2	RO	Specific enthalpy	—
6014	0x177E	Float	2	RO	Wet-bulb temperature	—
6016	0x1780	Float	2	RO	Frost point	—
6018	0x1782	Float	2	RO	Partial water vapor pressure	—

10.2.6 Error messages Modbus

Modbus PDU address		Data type	Number of Modbus registers	Access	Data	Coding
Dec.	Hex					
6400	0x1900	Boolean	1	RO	General error	—
6401	0x1901	Boolean	1	RO	Configuration faulty	—
6402	0x1902	Boolean	1	RO	Calibration faulty	—
6403	0x1903	Boolean	1	RO	Device not calibrated	—
6404	0x1904	Boolean	1	RO	Humidity sensor faulty	—
6405	0x1905	Boolean	1	RO	CO2 sensor faulty	—
6450	0x1932	Boolean	1	RO	Device restart required	—

Error messages for invalid values

For measured values in the floating-point format, the error is displayed in the value itself, i.e. it contains the error code instead of the measured value.

Error message	Possible cause
1.0×10^{37}	Measuring range underflow
2.0×10^{37}	Measuring range overflow
3.0×10^{37}	Value invalid

11 Troubleshooting

11.1 Process value error

With error messages in line with the NAMUR classification NE 107, process value errors are supplemented by symbols and a two-line message (alternating with the process display).

Error message	Possible cause	Remedy
<<<<<	The measuring range was undershot.	Operate the device within the device specification.
>>>>>	The measuring range was exceeded.	
-----	No valid input value Incorrect mathematical value	

11.2 Error messages in line with NAMUR

Error messages in line with NAMUR classification NE 107 are displayed by symbols and a two-line message (alternating with the process display).

Symbol	Designation
	Error/failure

Error message	Possible cause	Remedy
Configuration faulty	The checksum of the configuration data is faulty (CRC).	Transfer the configuration data to the device again.
Calibration data faulty	The checksum of the calibration data is faulty (CRC).	Contact the manufacturer.
Device not calibrated	The calibration flag has not been set.	
	There is no calibration data.	
Humidity/temperature invalid	The humidity and temperature sensor is faulty.	
	The communication to the sensor is impaired.	
CO ₂ invalid	The CO ₂ sensor is faulty.	
	The communication to the sensor is impaired.	

12 Maintenance and cleaning

The device is maintenance-free.

Clean the device with a cloth dampened with water.

13 Shutdown

13.1 Dismounting

Aids	Screwdriver
------	-------------

Requirements:

- The system has been de-energized and secured against being switched on again.

Procedure:

1. Unlock the snap-in hook on the housing front.
2. Remove the housing front and place it down, taking care to protect it from pollutants.
3. Disconnect the electrical connection.
4. Undo the fastening screws.
5. Remove the housing rear.

13.2 Returns

Procedure:

1. The [supplementary sheet for product returns](#) must first be completed correctly and signed. Then enclose it with the shipping documents and attach it to the packaging, ideally on the outside.
2. Use the original packaging or a suitably secure container for sending the device.

13.3 Disposal



- Do not dispose of the device or replaced parts in the trash after use.
- Delete programs and data stored on the device.
- Remove batteries, if any, if this can be done without damaging the device.
- Dispose of the device and the packaging material in a responsible and environmentally friendly manner.
- Observe the country-specific laws and regulations for waste treatment and disposal.

In accordance with Directive 2012/19/EU on Waste from Electrical and Electronic Equipment, manufacturers are obliged to offer the option of returning waste equipment. Request the return from the manufacturer.

14 Accessories

Without UL approval

Designation	Part no.
USB cable, A to Micro-B	00616250
JUMO hydroTRANS setup program	00775170

15 Open-source software

The device software and/or device components were developed using open-source software.

Insofar as the respectively applicable license terms justify a claim on the provision of source code or other information, JUMO GmbH & Co. KG will provide the source code and the license texts on a conventional data carrier at the cost incurred for the provision of the data carrier.

This offer is valid for three years after the software is made available. This offer is valid beyond that time to the extent specified in the license terms.

For questions related to open-source software, please contact:

Address JUMO GmbH & Co. KG
License Compliance
Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Email licensecompliance@jumo.net

		产品中有害物质的名称及含量 China EEP Hazardous Substances Information						
产品组别 Product group: 907045								
部件名称 JUMO hydro Trans S10								
外壳 Housing (Gehäuse)		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
螺栓 Screw (Schraube)		○	○	○	○	○	○	
印刷电路组件 printed circuit assemblies (Leiterplattenbestandteile)		○	×	○	○	○	○	
本表格依据SJ/T 11364的规定编制。 This table is prepared in accordance with the provisions SJ/T 11364. ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 Indicate the hazardous substances in all homogeneous materials for the part are below the limit of the GB/T 26572. × ×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 Indicate the hazardous substances in at least one homogeneous material of the part exceed the limit of the GB/T 26572.								



JUMO GmbH & Co. KG

Street address:
Moritz-Juchheim-Straße 1
36039 Fulda, Germany

Delivery address:
Mackenrodtstraße 14
36039 Fulda, Germany

Postal address:
36035 Fulda, Germany

Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO UK LTD

JUMO House
Temple Bank, Riverway
Harlow, Essex, CM20 2DY, UK

Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: info.uk@jumo.net
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6724 Joy Road
East Syracuse, NY 13057, USA

Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com

